



Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Crankcase black	-	-	-	M8	976041	1	AH009
	Crankcase black	-	-	-	M7	GU05000730	1	AH009
2	Disc	-	-	-	-	GU12003900	1	-
3	Stud bolt M8X66	-	-	-	-	GU96508066	3	AH199
4	Washer 8,4X15X1,5	-	-	-	-	GU95008208	2	-
5	Washer 8,4X13X0,8	-	-	-	-	GU14615901	5	-
6	Coupling bush	-	-	-	-	GU12018900	2	-
7	Stud bolt M8x75	-	-	-	-	GU96508075	2	AH199
8	Flanged nut M8	-	-	-	-	GU92660021	5	-
9	Pin	-	-	-	-	GU95512081	2	-
10	Complete flange	-	-	-	-	GU14011900	1	AI009
	Flange min.0,2 mm	-	-	-	-	GU14011901	1	AI009
11	Pin	-	-	-	-	GU12012200	1	-
12	Hex screw M8x25	-	-	-	-	GU98084425	14	-
13	Spring washer 8x15x0,3	-	-	-	-	GU61270300	14	-
14	Cover gasket	-	-	-	-	GU05001231	1	AO449
15	Timing cover black	-	-	-	-	GU05001430	1	AH359
16	Hex socket screw M8x55	-	-	-	-	AP8150046	4	-
17	Hex socket screw M6X30	-	-	-	-	GU98682330	12	-
18	Union	-	-	-	-	GU05007230	1	-
19	Gasket ring 22x35x7viton	-	-	-	-	GU90412237	1	AO15E
20	Hex socket screw M6x20	-	-	-	-	GU98682320	2	-
21	Alternator cover grey	-	-	-	-	GU05001630	1	AH039
22	Hex socket screw M6x16	-	-	-	-	GU98682316	5	-
23	Hex socket screw M6X30	-	-	-	-	GU98682330	4	-
24	Gasket	-	-	-	-	GU01003651	1	AO329
25	Flange black	-	-	-	-	GU05003130	1	AH369
26	Gasket	-	-	-	-	GU05003630	1	AO459
27	Oil sump black	-	-	-	-	GU05003530	1	AH269
28	Complete flange	-	-	-	-	GU12011400	1	AI009
	Flange min.0,2 mm	-	-	-	-	GU12011401	1	AI009
	Flange min.0,4 mm	-	-	-	-	GU12011402	1	AI009
	Flange min.0,6 mm	-	-	-	-	GU12011403	1	AI009
29	Pin	-	-	-	-	GU12011700	1	-

30	Hex socket screw m6x55	-	-	-	-	-	AP4ADN000007	14	-
31	Hex socket screw M6x60	-	-	-	-	-	GU98680360	2	-
32	Oil unload plug M10X1	-	-	-	-	-	GU31003766	1	AH109
33	Gasket 10x18x1,5	-	-	-	-	-	GU01528930	1	-
34	Oil level plug	-	-	-	-	-	GU05004930	1	AH119
35	O-ring 17,86X2,62	-	-	-	-	-	GU90706178	1	-
36	Plate	-	-	-	-	-	GU05007330	1	-
37	Screw TSPEI M4x8	-	-	-	-	-	GU98257408	2	-
38	Bush 6,4x8,4x10,5	-	-	-	-	-	GU91120607	2	-
39	O-ring 34,65x1,78viton	-	-	-	-	-	GU90706347	1	-
40	Plug	-	-	-	-	-	GU05002130	1	-
41	Gasket ring	-	-	-	-	-	GU90405367	1	AO15F
42	Gasket	-	-	-	-	-	GU05011830	1	AO429
43	Engine set gasket	-	-	-	-	-	GU05999030	1	AO***
44	Engine oil seal kit/Gear box	-	-	-	-	-	GU05999530	1	AO***
45	Engine cpl.	-	-	-	-	-	GU06991000	1	A9989
46	Screw w/ flange M8x45*	-	-	-	-	-	AP8152291	1	-
47	Hex socket screw M6X40	-	-	-	-	-	GU98680340	2	-
48	Bush 6,8x8,8x5,8	-	-	-	-	-	GU91120606	6	-

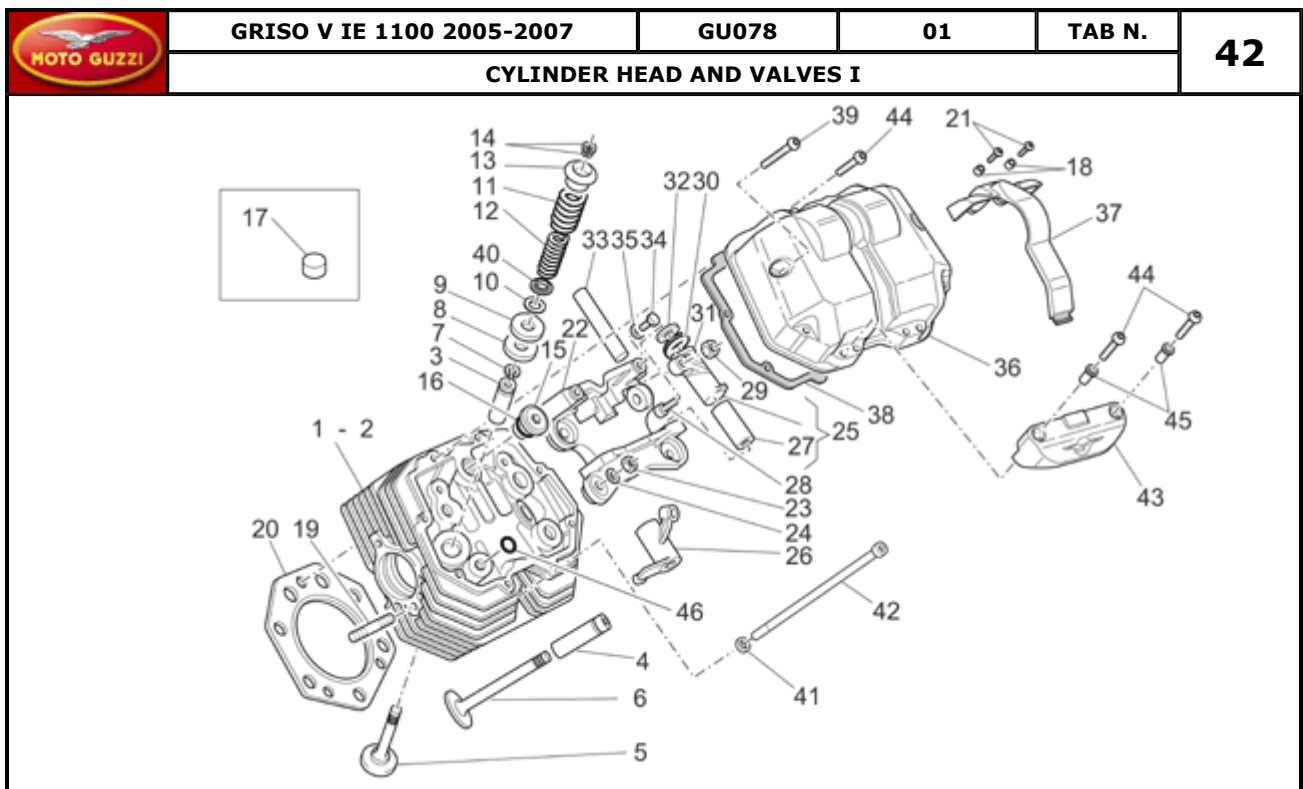


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	RH head assy w/h valve grey	-	-	-	M4-M7	GU05022132	1	AA00A
	RH head assy w/h valve	-	-	-	M3	GU05022130	1	AA00A
2	LH head assy with valve	-	-	-	M3	GU05022230	1	AA00B
	LH head assy with valve grey	-	-	-	M4-M7	GU05022232	1	AA00B
3	Exhaust valve guide	-	-	-	M3	GU13036801	2	AA14O
4	Intake valve guide	-	-	-	M3	GU14036860	2	AA14N
5	Exhaust valve	-	-	-	-	GU05036131	2	AA01O
6	Intake valve	-	-	-	-	GU05036030	2	AA01N
7	Snap ring	-	-	-	-	GU90353016	4	-
8	Washer 14,2x31x1	-	-	-	-	GU13037200	4	-
9	Washer 14,2x31x0,3	-	-	-	-	GU14037300	10	-
10	Washer plate	-	-	-	-	GU01038730	4	-
11	Outer spring	-	-	-	-	GU37037405	4	AA02*
12	Inner spring	-	-	-	-	GU37037605	4	AA02*
13	Upper cup	-	-	-	-	GU01038060	4	AA129
14	Valve half-cone	-	-	-	-	GU01038160	8	AA03*
15	Oil plug	-	-	-	-	GU12022600	2	-
16	O-ring 20,24X2,62	-	-	-	-	GU90706203	2	-
17	Rubber spacer	-	-	-	-	GU05025331	18	-
18	Bush 5,2x7x6	-	-	-	-	GU91110506	4	-
19	Stud bolt	-	-	-	-	GU96508040	4	AA15*
20	Gasket	-	-	-	M7	GU03022055	2	AO00*
21	Hex socket screw M5x16*	-	-	-	-	AP8152268	4	-
22	Rocker arm support	-	-	-	M7	GU14034865	2	AC38*
23	Nut M10X1,5	-	-	-	-	GU92603010	8	-
24	Washer 10,5X21X1	-	-	-	-	GU14018400	8	-
25	RH rocker arm assy	-	-	-	-	GU14030201	2	AC08*
26	LH rocker arm assy	-	-	-	-	GU14030401	2	AC08*
27	Bush 15x18x43	-	-	-	-	GU91111511	4	AC069
28	Adjuster screw	-	-	-	-	GU17034050	4	AC099
29	Nut	-	-	-	-	GU10034100	4	-
30	Spring	-	-	-	-	GU94322215	4	-
31	Washer 15,2x26x1	-	-	-	-	GU90118152	8	-

32	Washer 15,2x26x0,5	-	-	-	-	-	GU10032700	4	-
33	Rocker shaft	-	-	-	-	-	GU12031800	4	AC069
34	Hex screw M6X16	-	-	-	-	-	GU98084316	4	-
35	Washer 6,5x11x2	-	-	-	-	-	GU95120065	4	-
36	Head cover	-	-	-	-	-	GU06023500	2	AH07*
37	Insert	-	-	-	-	-	GU06941000	2	AH07*
38	Cover gasket	-	-	-	-	-	976139	2	AO14*
39	Screw M6x50	-	-	-	-	-	GU05025932	8	-
40	Lower cup 14,2x32x5	-	-	-	-	-	GU01037030	4	AA129
41	Washer 10,5X18X0,8	-	-	-	-	-	GU95129180	4	-
42	Screw	-	-	-	M5	-	GU05021831	4	-
	Screw	-	-	-	M6	-	976144	4	-
43	Spark plug cover	-	-	-	-	-	GU06023400	2	-
44	Screw M6x35	-	-	-	-	-	GU05025931	12	-
45	Bush 6,2x8,4x17,2	-	-	-	-	-	GU91120617	4	-
46	O-ring 9x2	-	-	-	M7	-	GU90706094	8	-

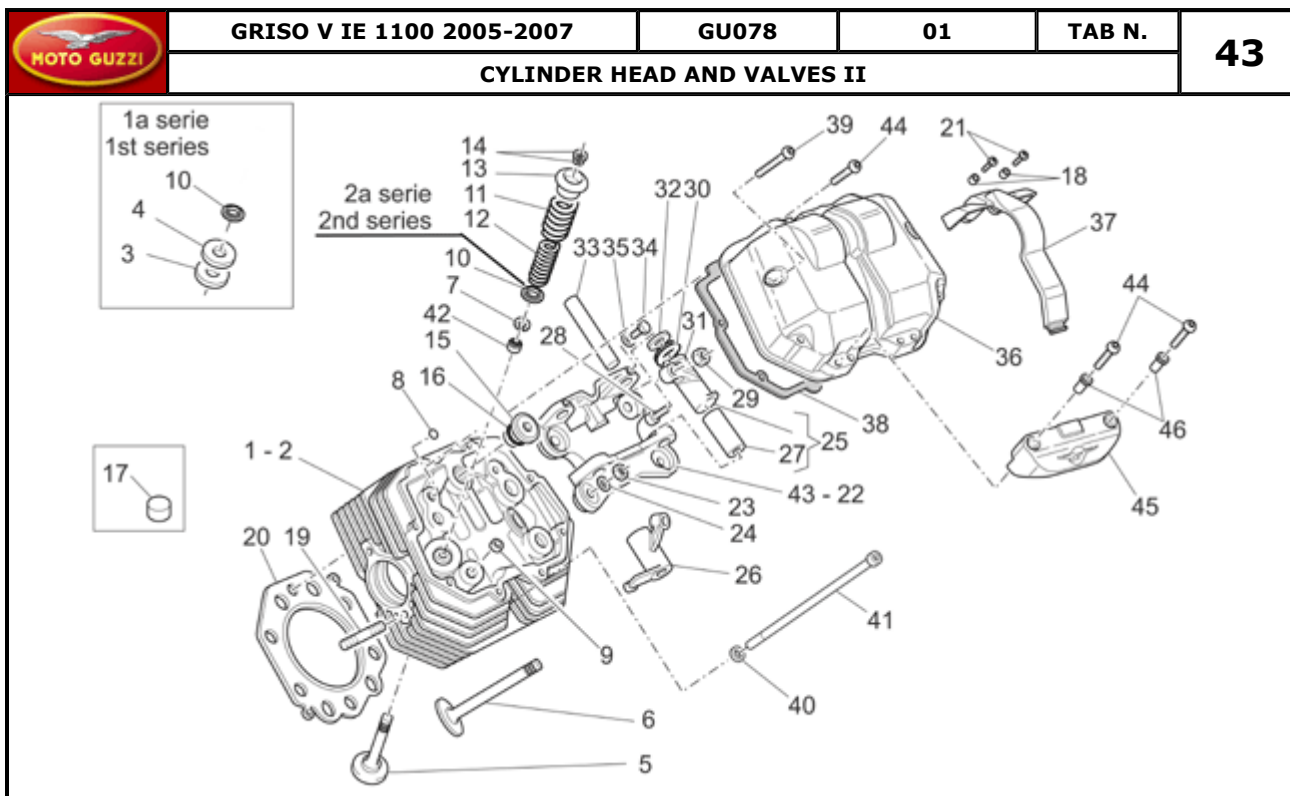


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	RH head assy w/h valve grey	-	-	-	M8	976079	1	AA00A
2	LH head assy with valve grey	-	-	-	M8	976080	1	AA00B
3	Washer 14,2x31x1	-	-	-	1A	GU13037200	4	-
4	Washer 14,2x31x0,3	-	-	-	1A	GU14037300	10	-
5	Exhaust valve	-	-	-	-	GU05036131	2	AA010
6	Intake valve	-	-	-	-	GU05036030	2	AA01N
7	Snap ring	-	-	-	-	GU90353016	4	-
8	O-ring 8,73x1,78-viton	-	-	-	M8	224202	4	-
9	Pin 11,8X10	-	-	-	M8	825597	4	-
10	Lower cup 14,2x32x7	-	-	-	2A	976181	4	AA129
	Lower cup 14,2x32x5	-	-	-	1A	GU01037030	4	AA129
11	Outer spring	-	-	-	-	GU37037405	4	AA02*
12	Inner spring	-	-	-	-	GU37037605	4	AA02*
13	Upper cup	-	-	-	-	GU01038060	4	AA129
14	Valve half-cone	-	-	-	-	GU01038160	8	AA03*
15	Oil plug	-	-	-	-	GU12022600	2	-
16	O-ring 20,24X2,62	-	-	-	-	GU90706203	2	-
17	Rubber spacer	-	-	-	-	GU05025331	18	-
18	Bush 5,2x7x6	-	-	-	-	GU91110506	4	-
19	Stud bolt	-	-	-	-	GU96508040	4	AA15*
20	Gasket	-	-	-	M8	976087	2	AO00*
21	Hex socket screw M5x16*	-	-	-	-	AP8152268	4	-
22	LH.Rocker arm support	-	-	-	M8	976153	1	AC38B
23	Nut M10X1,5	-	-	-	-	GU92603010	8	-
24	Washer 10,5X21X1	-	-	-	-	GU14018400	8	-
25	RH rocker arm assy	-	-	-	-	GU14030201	2	AC08*
26	LH rocker arm assy	-	-	-	-	GU14030401	2	AC08*
27	Bush 15x18x43	-	-	-	-	GU91111511	4	AC069
28	Adjuster screw	-	-	-	-	GU17034050	4	AC099
29	Nut	-	-	-	-	GU10034100	4	-
30	Spring	-	-	-	-	GU94322215	4	-
31	Washer 15,2x26x1	-	-	-	-	GU90118152	8	-
32	Washer 15,2x26x0,5	-	-	-	-	GU10032700	4	-


33	Rocker shaft	-	-	-	-	-	GU12031800	4	AC069
34	Hex screw M6X16	-	-	-	-	-	GU98084316	4	-
35	Washer 6,5x11x2	-	-	-	-	-	GU95120065	4	-
36	Head cover	-	-	-	-	-	GU06023500	2	AH07*
37	Insert	-	-	-	-	-	GU06941000	2	AH07*
38	Cover gasket	-	-	-	-	-	976139	2	AO14*
39	Screw M6x50	-	-	-	-	-	GU05025932	8	-
40	Washer 10,5X18X0,8	-	-	-	-	-	GU95129180	4	-
41	Screw	-	-	-	-	-	976144	4	-
42	Valve stem seal D8	-	-	-	M8	-	976107	4	AO20*
43	RH.Rocker arm support	-	-	-	M8	-	976152	1	AC38A
44	Screw M6x35	-	-	-	-	-	GU05025931	12	-
45	Spark plug cover	-	-	-	-	-	GU06023400	2	-
46	Bush 6,2x8,4x17,2	-	-	-	-	-	GU91120617	4	-

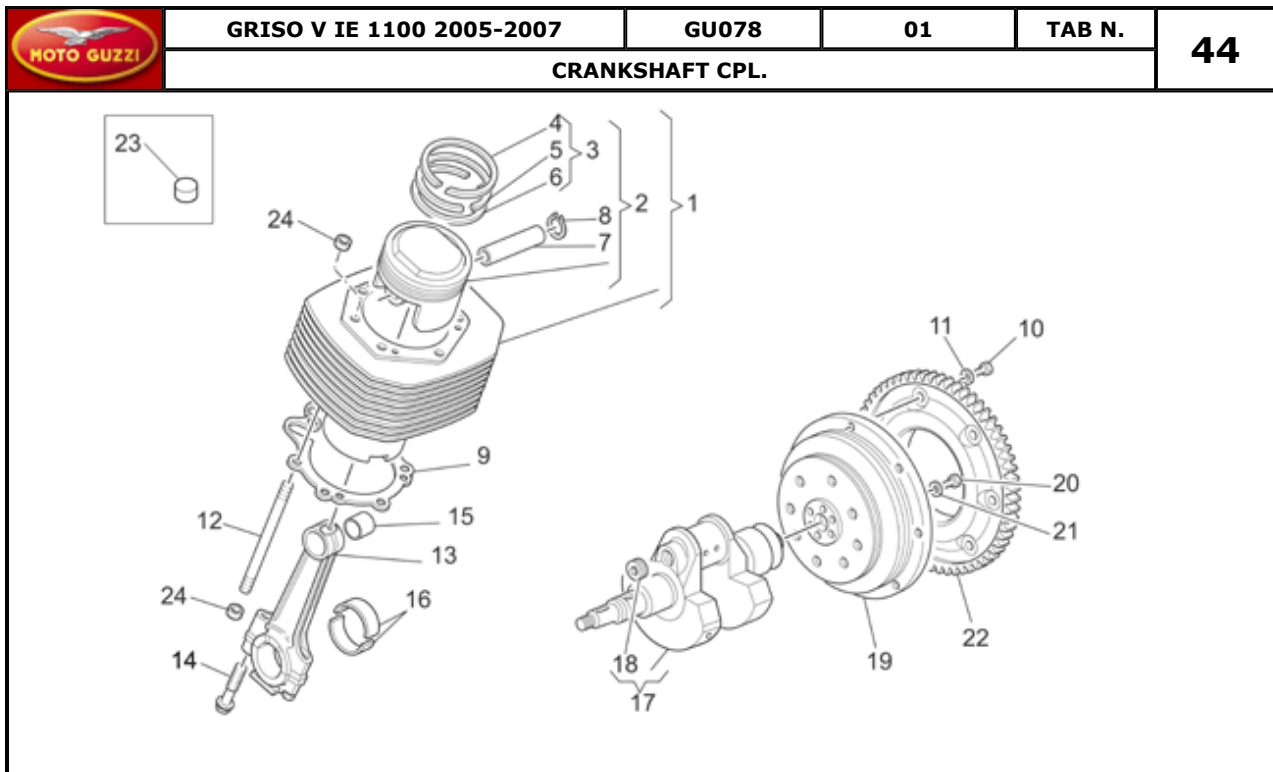


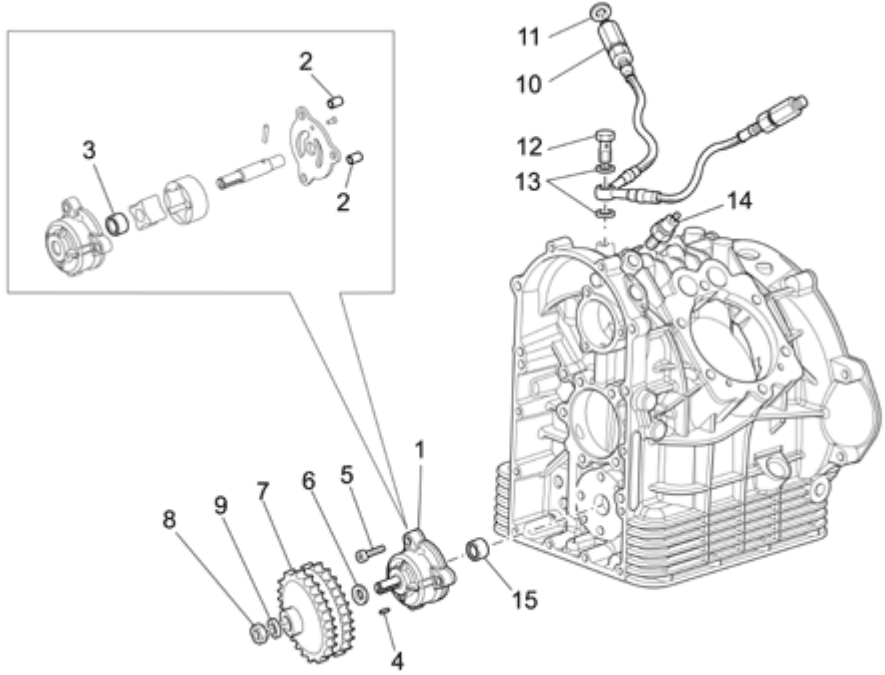
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Cylinder with piston	-	-	-	-	GU05060130	2	AB00*
2	Piston assy	-	-	-	-	GU05060230	2	AB01*
3	Pistonring set	-	-	-	-	GU05060630	2	AB02*
4	Piston ring	-	-	-	-	GU05060730	2	AB02*
5	Piston ring	-	-	-	-	GU05060930	2	AB02*
6	Piston ring	-	-	-	-	GU05061030	2	AB02*
7	Piston pin	-	-	-	-	GU30061241	2	AD02*
8	Stop ring	-	-	-	-	GU90351039	4	AD03*
9	Gasket	-	-	-	M7	GU05020830	2	AO01*
	Gasket	-	-	-	M8	976064	2	AO01*
10	Screw TCEI M6x12	-	-	-	-	GU37067705	8	-
11	Washer 6,4x10x0,7	-	-	-	-	GU14217901	8	-
12	Stud bolt	-	-	-	M5	GU12021700	8	AB04*
	Stud bolt	-	-	-	M6	976031	8	AB04*
13	Connecting rod cpl.	-	-	-	M9	GU05061530	2	AD01*
	Connecting rod cpl.	-	-	-	M10	976003	2	AD01*
14	Connecting rod screw	-	-	-	M10	849131	4	-
	Connecting rod screw	-	-	-	M9	GU01062230	4	-
15	Bush	-	-	-	M9	GU91112128	2	AI01*
16	Bearing half-shell 1,539-1,544	-	-	-	BS-M10	976172	4	AI109
	Bearing half-shell	-	-	-	M9	GU01062030	4	AI109
	Bearing half-shell min.0,254	-	-	-	M9	GU01062031	4	AI109
	Bearing half-shell min.0,508	-	-	-	M9	GU01062032	4	AI109
	Bearing half-shell min.0,762	-	-	-	M9	GU01062033	4	AI109
	Bearing half-shell 1,535-1,540	-	-	-	M10-RS	976171	4	AI109
17	Crankshaft cpl.	-	-	-	M9	976117	1	AD009
	Crankshaft cpl.	-	-	-	M10	976186	1	AD009
18	Plug	-	-	-	-	GU37065405	1	-
19	Flywheel cpl.	-	-	-	-	GU04067000	1	AM009
20	Screw M8X25	-	-	-	-	GU12067701	6	-
21	Washer 8,4X13X0,8	-	-	-	-	GU14615901	6	-
22	Chain ring	-	-	-	-	GU01067930	1	AK019
23	Rubber spacer	-	-	-	-	GU05025330	54	-
24	Pin 11,8X10	-	-	-	M8	825597	6	-

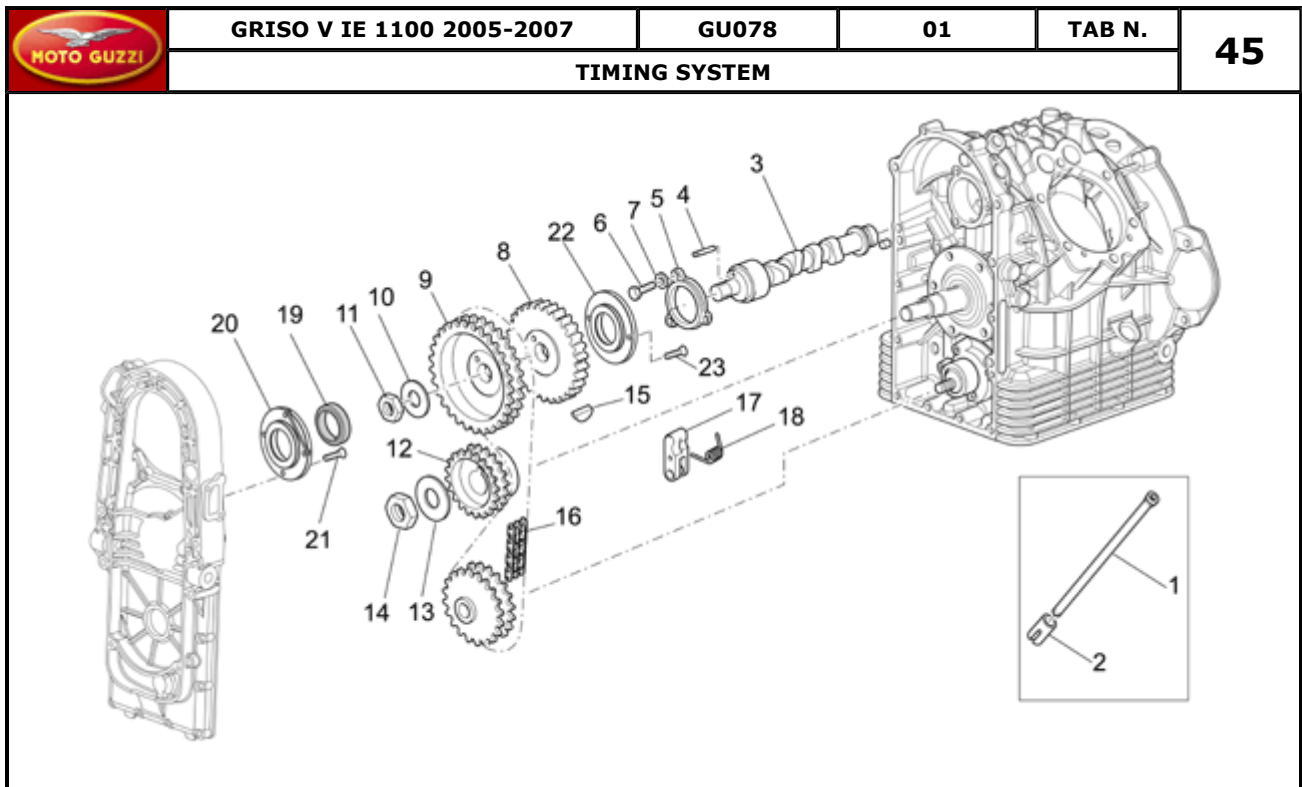

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Rocker arm rod	-	-	-	-	GU37045006	4	AC319
2	Tappet	-	-	-	-	GU17045860	4	AC309
3	Camshaft	-	-	-	-	GU05053331	1	AC059
4	Pin	-	-	-	-	GU14234600	1	-
5	Flange	-	-	-	-	GU01054001	1	AC349
6	Hex screw M6x20	-	-	-	-	GU98084320	3	-
7	Washer 6,5x11x2	-	-	-	-	GU95120065	3	-
8	Wheel speed sensor, left front	-	-	-	M2	GU01051730	1	AC379
	Wheel speed sensor, left front	-	-	-	M1	GU05051730	1	AC379
9	Timing system gear	-	-	-	M1	GU05054531	1	AC139
	Timing system gear	-	-	-	M2	GU05054532	1	AC139
10	Spring washer 19x34x1,5	-	-	-	-	GU14433400	1	-
11	Nut M18	-	-	-	-	GU92750180	1	-
12	Pinion	-	-	-	-	GU14072001	1	AC339
13	Washer 25,5x35x2	-	-	-	-	GU95100837	1	-
14	Nut M25	-	-	-	-	GU92602525	1	-
15	Transmission key 3x6,5	-	-	-	-	GU91600365	1	AD099
16	Chain	-	-	-	-	GU05058030	1	AC149
17	Chain guide plate	-	-	-	-	GU30058310	1	AC279
18	Spring	-	-	-	-	GU30059211	1	AC279
19	Gasket ring 15x32x7viton	-	-	-	-	GU90401532	1	AO409
20	Support	-	-	-	-	GU05055230	1	-
21	Hex socket screw M4x10	-	-	-	-	AP8152043	4	-
22	Centrifugal disc	-	-	-	M1	GU05053530	1	-
23	Screw M6x12	-	-	-	M1	GU98250612	2	-

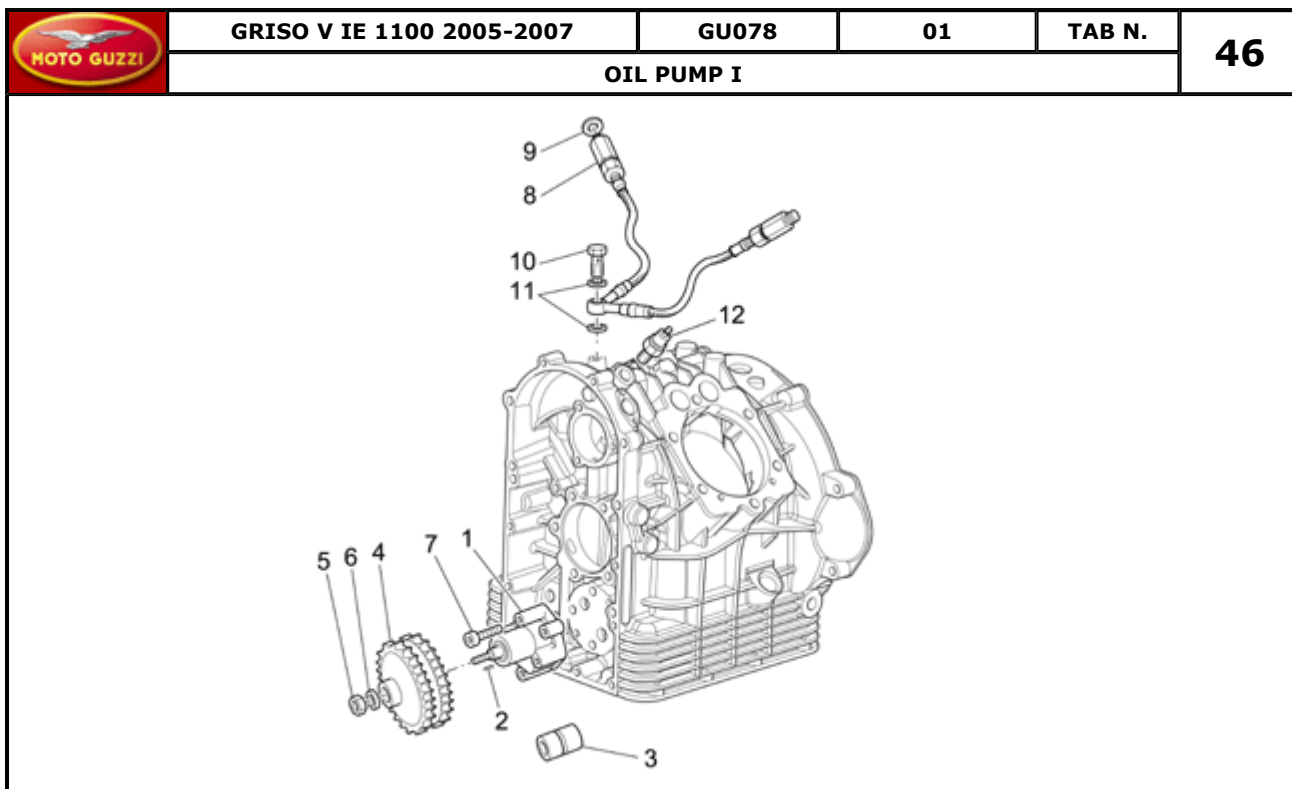
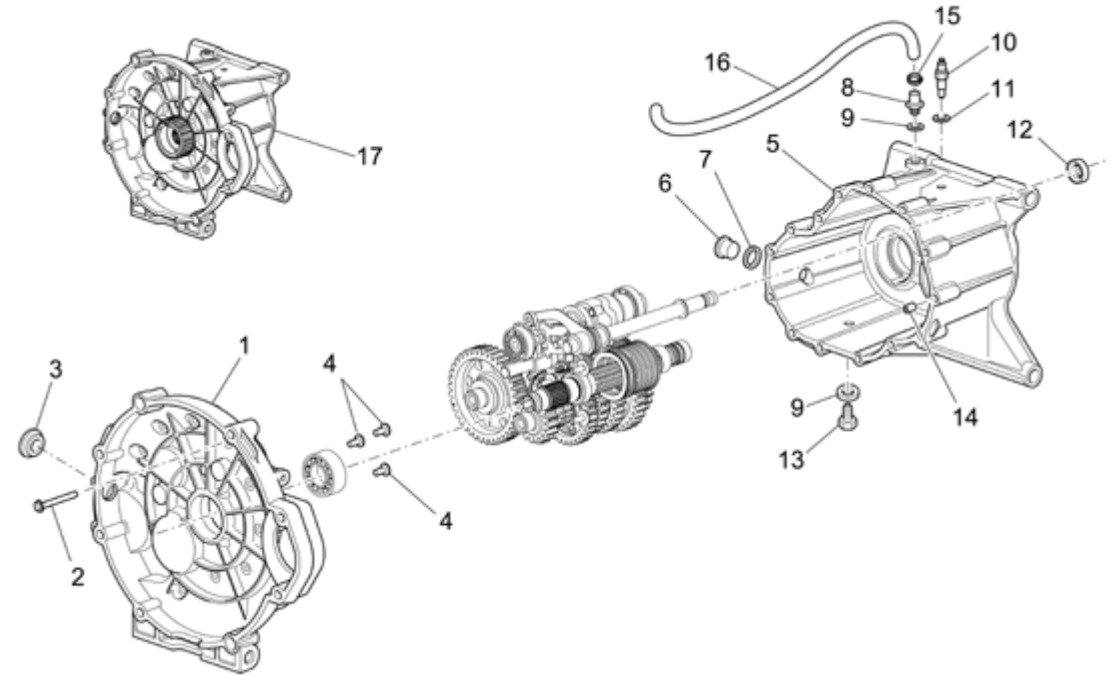



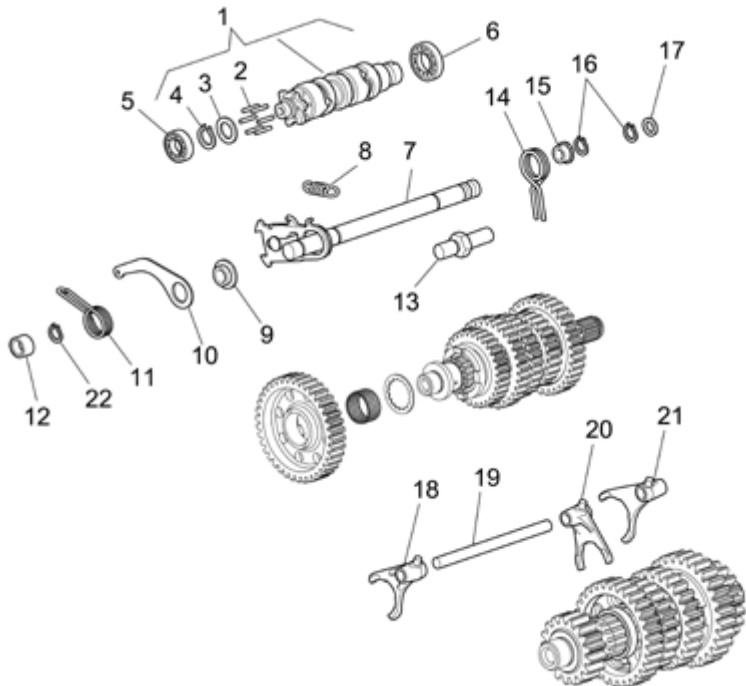
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Oil pump	-	-	-	M7	GU30146400	1	AJ059
2	Transmission key	-	-	-	-	GU13148300	1	-
3	Roller bearing 10x22x20	-	-	-	M7	GU92252210	1	AI319
4	Oil pump gear	-	-	-	-	GU30147700	1	AJ079
5	Nut	-	-	-	M7	GU92602308	1	-
6	Spring washer	-	-	-	M7	GU95120085	1	-
7	Hex socket screw M8x30	-	-	-	M7	GU98682430	4	-
8	Pipe	-	-	-	-	GU05153630	1	AJ319
9	Gasket	-	-	-	-	GU25656102	2	-
10	Screw	-	-	-	-	GU95990037	1	-
11	Gasket 8,25x15x1	-	-	-	-	GU12154200	2	-
12	Pressure sensor	-	-	-	-	GU31768780	1	AN039


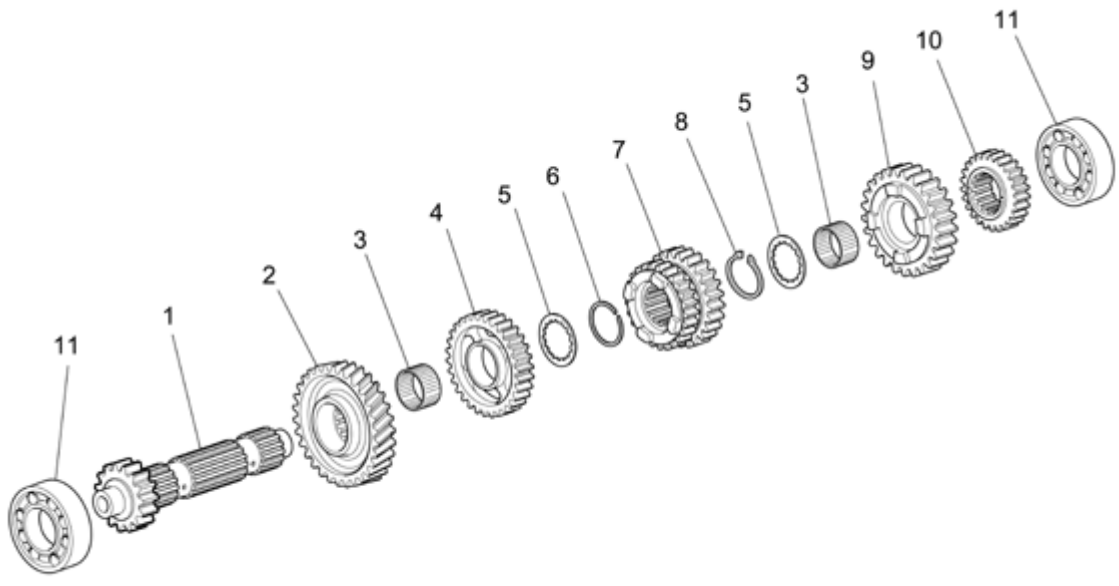
		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	47		
OIL PUMP II									
									
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.	
1	Oil pump	-	-	-	M8	976134	1	AJ059	
2	Locating dowel	-	-	-	M8	277916	2	-	
3	Needle bearing 12x18x12	-	-	-	M8	976165	1	AI319	
4	Transmission key	-	-	-	-	GU13148300	1	-	
5	Hex socket screw M6x30	-	-	-	M8	GU98350330	3	-	
6	Fifth wheel	-	-	-	M8	976448	1	-	
7	Oil pump gear	-	-	-	-	GU30147700	1	AJ079	
8	Nut M10x1,25	-	-	-	M8	GU92602510	1	-	
9	Washer 10,5x16x1	-	-	-	M8	GU19149800	1	-	
10	Pipe	-	-	-	-	GU05153630	1	AJ319	
11	Gasket	-	-	-	-	GU25656102	2	-	
12	Screw	-	-	-	-	GU95990037	1	-	
13	Gasket 8,25x15x1	-	-	-	-	GU12154200	2	-	
14	Pressure sensor	-	-	-	-	GU31768780	1	AN039	
15	Needle bearing 10x14x12	-	-	-	M8	976168	1	AI319	


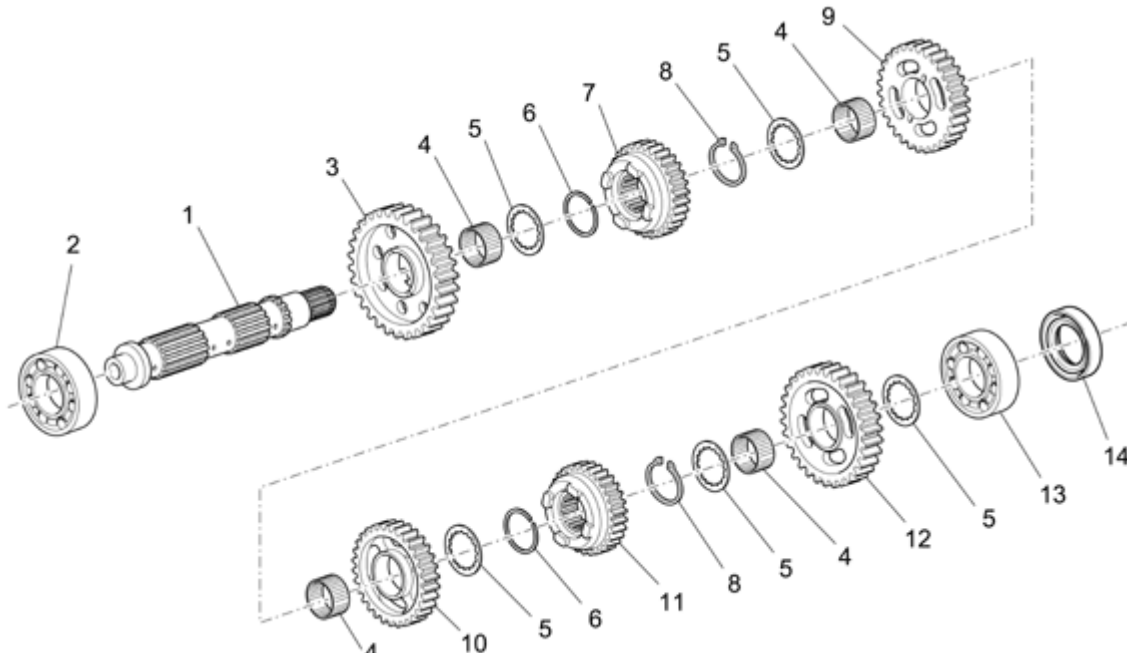
GRISO V IE 1100 2005-2007		GU078		01		TAB N.		48	
OIL FILTERS									
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.	
1	Oil filter	-	-	-	-	GU30153000	1	AO229	
2	Union	-	-	-	-	GU30003800	1	-	
3	Oil filter	-	-	-	-	GU05152230	1	AO239	
4	Pipe	-	-	-	-	GU05005730	1	AJ219	
5	Thermostatic valve compl.	-	-	-	-	GU01163500	1	AJ139	
6	Spring	-	-	-	-	GU20164010	1	AJ139	
7	Copper gasket	-	-	-	-	GU01163700	1	AJ139	
8	Plug	-	-	-	-	GU01163600	1	AJ139	
9	Piston	-	-	-	-	GU30150900	1	AJ129	
10	Spring	-	-	-	-	GU94321077	1	AJ129	
11	Washer 6,15x11x0,8	-	-	-	-	GU95008206	2	AJ129	
12	Washer	-	-	-	-	GU30158900	1	AJ129	
13	Washer 18,25x24x1	-	-	-	-	GU18144350	1	AJ129	
14	Plug	-	-	-	-	GU31159050	1	AJ129	
15	O-ring 15,08x2,62viton	-	-	-	-	GU90706151	1	-	
16	Hex socket screw M6x16	-	-	-	-	GU98682316	2	-	


GRISO V IE 1100 2005-2007		GU078		01		TAB N.		49	
CLUTCH									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	Clutch spring	-	-	-	1A	-	GU04084100	10	AF229
	Clutch spring	-	-	-	2A-RS	-	GU13084100	5	AF229
	Clutch spring	-	-	-	2A	-	GU04084100	5	AF229
2	Disc	-	-	-	-	-	GU30082900	1	AF239
3	Clutch plate complete	-	-	-	-	-	GU05084430	2	AF209
4	Intermediate plate	-	-	-	-	-	GU12082300	1	AF219
5	Cup	-	-	-	-	-	GU04082800	1	AF329
6	Rod	-	-	-	-	-	GU05085730	1	AF269
7	Bush	-	-	-	-	-	GU14085900	2	-
8	Inner body	-	-	-	-	-	GU14086000	1	-
9	Thrust bearing	-	-	-	-	-	GU12087001	1	AI169
10	Clutch control cylinder	-	-	-	-	-	GU04086100	1	-
11	O-ring 17,13x2,62	-	-	-	-	-	GU90706170	1	-
12	Bush	-	-	-	-	-	GU05217630	1	-
13	Clutch command cylinder	-	-	-	-	-	GU05086330	1	BC139
14	Screw w/ flange M6x16*	-	-	-	-	-	AP8152278	3	-

		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	50		
TRANSMISSION CAGE									
									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	Clutch drum	-	-	-	-	GU05200531	1	AH049	
2	Screw w/ flange M6x55	-	-	-	-	GU97202355	14	-	
3	Plug	-	-	-	-	GU93180220	1	-	
4	Hex socket screw M6X16	-	-	-	-	GU98370616	3	-	
5	Transmission cage	-	-	-	-	GU05200231	1	AH299	
6	Oil plug M18x1,5	-	-	-	-	GU95980319	1	AH119	
7	Washer 18,25x24x1	-	-	-	-	GU18144350	1	-	
8	Breather plug	-	-	-	-	GU05204930	1	AJ329	
9	Gasket 10x18x1,5	-	-	-	-	GU01528930	2	-	
10	Sensor	-	-	-	-	GU19207220	1	AN029	
11	Gasket 8,25x15x1	-	-	-	-	GU12154200	1	-	
12	Gasket ring 14x24x7	-	-	-	-	GU90401424	1	AO169	
13	Oil unload plug M10X1	-	-	-	-	GU31003766	1	AH109	
14	Bush 6,6x9x13	-	-	-	-	GU19002020	2	-	
15	Hose clamp D10,1*	-	-	-	-	AP8101595	1	-	
16	Fuel pipe 5,5x10	-	-	-	-	AP8120952	1	-	
17	Gear box assy	-	-	-	-	GU06991500	1	AG099	


		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	51		
GEAR BOX SELECTOR									
									
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.	
1	Shift cam cpl.	-	-	-	-	GU05234431	1	AG039	
2	Pin	-	-	-	-	GU05234631	6	-	
3	Spacer	-	-	-	-	GU05235531	1	-	
4	Circlip	-	-	-	-	GU90271022	1	-	
5	Ball bearing 17x35x10	-	-	-	-	GU92201117	1	AI139	
6	Ball bearing 25x42x9	-	-	-	-	GU92201025	1	AI139	
7	Preselection complete	-	-	-	-	GU05236231	1	AG119	
8	Spring	-	-	-	-	GU05238231	1	AG139	
9	Bush	-	-	-	-	GU05238431	1	-	
10	Lever Index	-	-	-	-	GU05234731	1	AG129	
11	Spring	-	-	-	-	GU05234130	1	AG139	
12	Spacer	-	-	-	-	GU05234230	1	-	
13	Fixing pin	-	-	-	-	GU05234931	1	-	
14	Spring	-	-	-	-	GU05238331	1	AG109	
15	Spacer	-	-	-	-	GU05238131	1	-	
16	Circlip	-	-	-	-	GU90271014	2	-	
17	Fifth wheel	-	-	-	-	GU05239330	1	-	
18	Fork 1a-3a	-	-	-	-	GU05230531	1	AG059	
19	Fork shaft	-	-	-	-	GU05232431	1	AG069	
20	Fork 5a-6a	-	-	-	-	GU05232631	1	AG059	
21	Fork 2a-4a	-	-	-	-	GU05230831	1	AG059	
22	Circlip	-	-	-	-	GU90353014	1	-	

		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	52	
		PRIMARY GEAR SHAFT						
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Primary gear shaft Z=17	-	-	-	-	GU05210631	1	AG00X
2	Drive gears Z=35	-	-	-	-	GU06215600	1	AG019
3	Roller cage 26x30x15,6	-	-	-	-	GU92252029	2	AI119
4	Gear 5a Z=31	-	-	-	-	GU05212031	1	AG045
5	Clearance washer	-	-	-	-	GU05214630	2	-
6	Snap ring 30x1,2SW	-	-	-	-	GU90271230	1	-
7	Gear 3a-4a Z=23-26	-	-	-	-	GU05211431	1	AG043
8	Snap ring 30x27,9	-	-	-	-	GU90271030	1	-
9	Gear 6a Z=29	-	-	-	-	GU05212631	1	AG046
10	Gear 2a Z=20	-	-	-	-	GU05211331	1	AG042
11	Ball bearing 20x52x15	-	-	-	-	GU92201822	2	AI059


		GRISO V IE 1100 2005-2007	GU078	01	TAB N.	53		
		DRIVEN SHAFT						
								
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Driven shaft	-	-	-	-	GU05213631	1	AG00Y
2	Ball bearing 20x52x15	-	-	-	-	GU92201822	1	AI069
3	Gear 1a Z=38	-	-	-	-	GU05214231	1	AG041
4	Roller cage 26x30x15,6	-	-	-	-	GU92252029	4	AI119
5	Clearance washer	-	-	-	-	GU05214630	5	-
6	Snap ring 30x1,2SW	-	-	-	-	GU90271230	2	-
7	Gear 5a Z=30	-	-	-	-	GU05214031	1	AG045
8	Snap ring 30x27,9	-	-	-	-	GU90271030	2	-
9	Gear 3a Z=31	-	-	-	-	GU05214731	1	AG043
10	Gear 4a Z=29	-	-	-	-	GU05215031	1	AG044
11	Gear 6a Z=25	-	-	-	-	GU05220531	1	AG046
12	Gear 2a Z=34	-	-	-	-	GU05214431	1	AG042
13	Ball bearing 25x52x15	-	-	-	-	GU92201226	1	AI069
14	Gasket ring 25X40X7	-	-	-	-	GU90412541	1	AO169

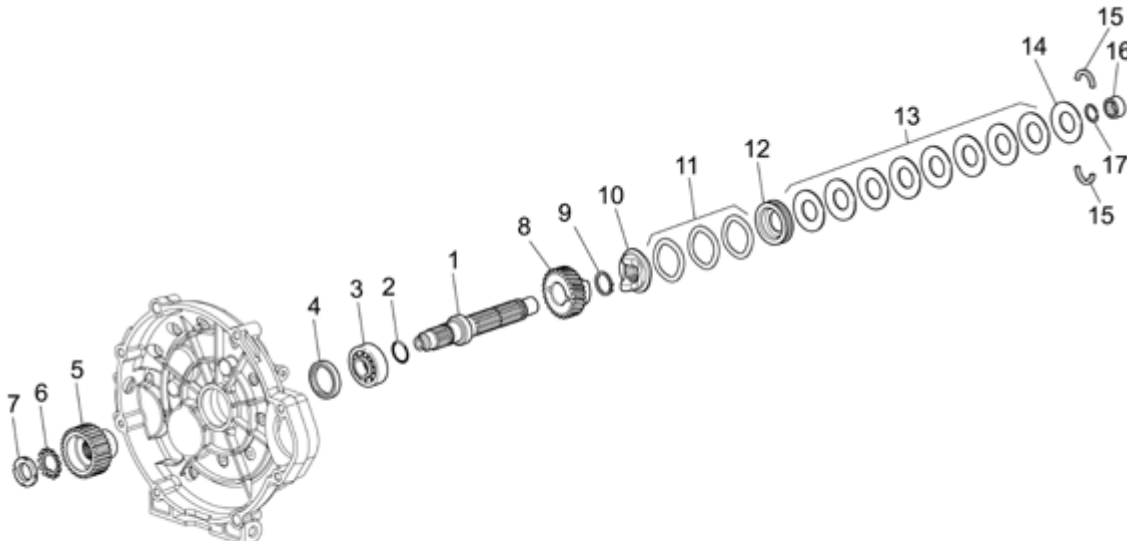
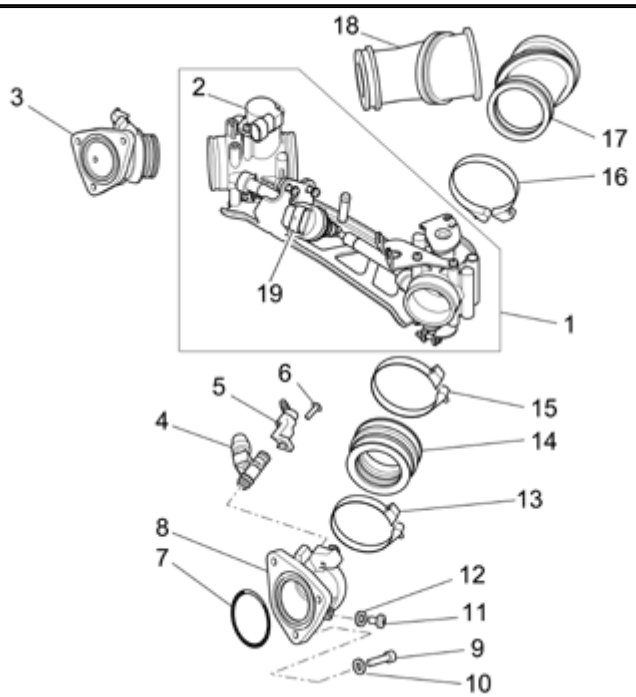
GRISO V IE 1100 2005-2007		GU078		01		TAB N.		54	
CLUTCH SHAFT									
									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	Clutch shaft	-	-	-	-	GU05210731	1	AG259	
2	O-ring 20,24X2,62	-	-	-	-	GU90706203	1	AO199	
3	Ball bearing 25x52x15	-	-	-	-	GU92201226	1	AI209	
4	Gasket ring 35x47x7	-	-	-	-	GU90403549	1	AO199	
5	Clutch gear	-	-	-	-	GU05081830	1	AG299	
6	Washer 22x20x3,9	-	-	-	-	GU95028022	1	-	
7	Ring nut	-	-	-	-	GU93601022	1	-	
8	Idle gear Z=24	-	-	-	-	GU06211100	1	AG309	
9	Snap ring 25x2	-	-	-	-	GU90271125	1	-	
10	Hose	-	-	-	-	GU05211231	1	AG359	
11	Washer	-	-	-	-	GU95129340	3	-	
12	Disc	-	-	-	-	GU05211030	1	AG339	
13	Belleville spring	-	-	-	-	GU05211530	8	AG399	
14	Disc	-	-	-	-	GU05211630	1	AG339	
15	Half ring	-	-	-	-	GU12211700	2	AG349	
16	Roller bearing 20x28x13	-	-	-	-	GU92232028	1	AI209	
17	Snap ring 28x30,1	-	-	-	-	GU90272028	1	-	


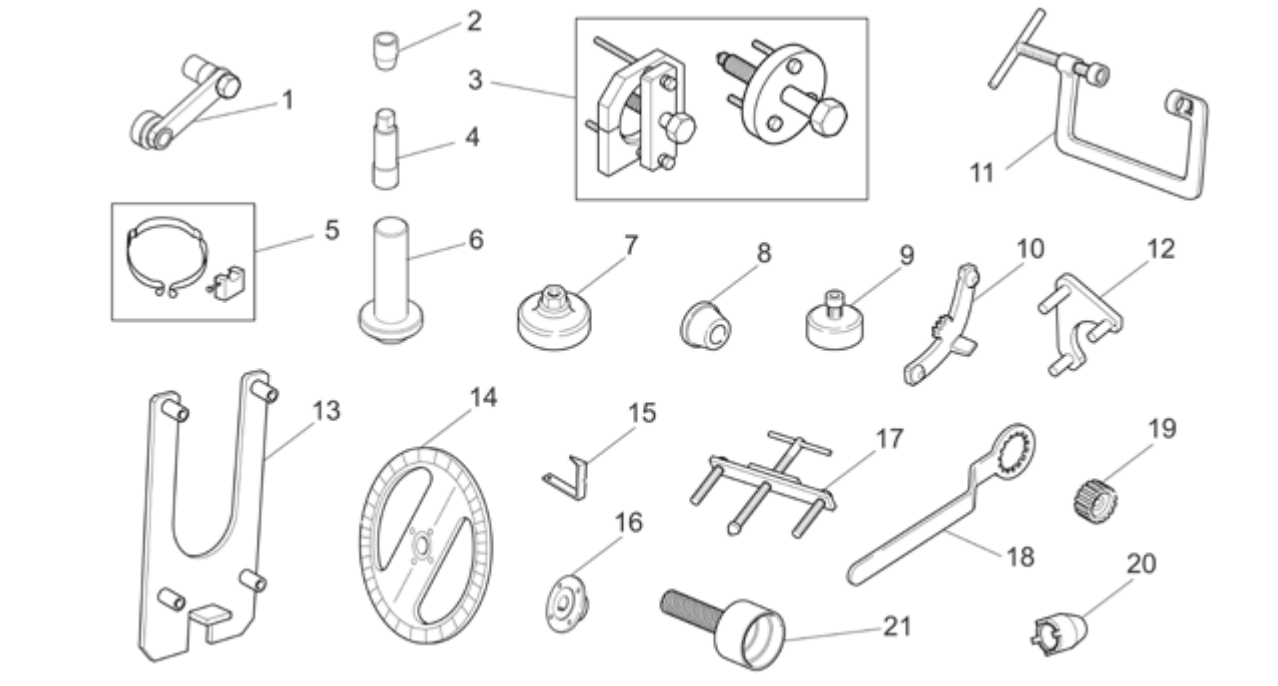
	GRISO V IE 1100 2005-2007	GU078	01	TAB N.	55
	CURRENT GENERATOR				

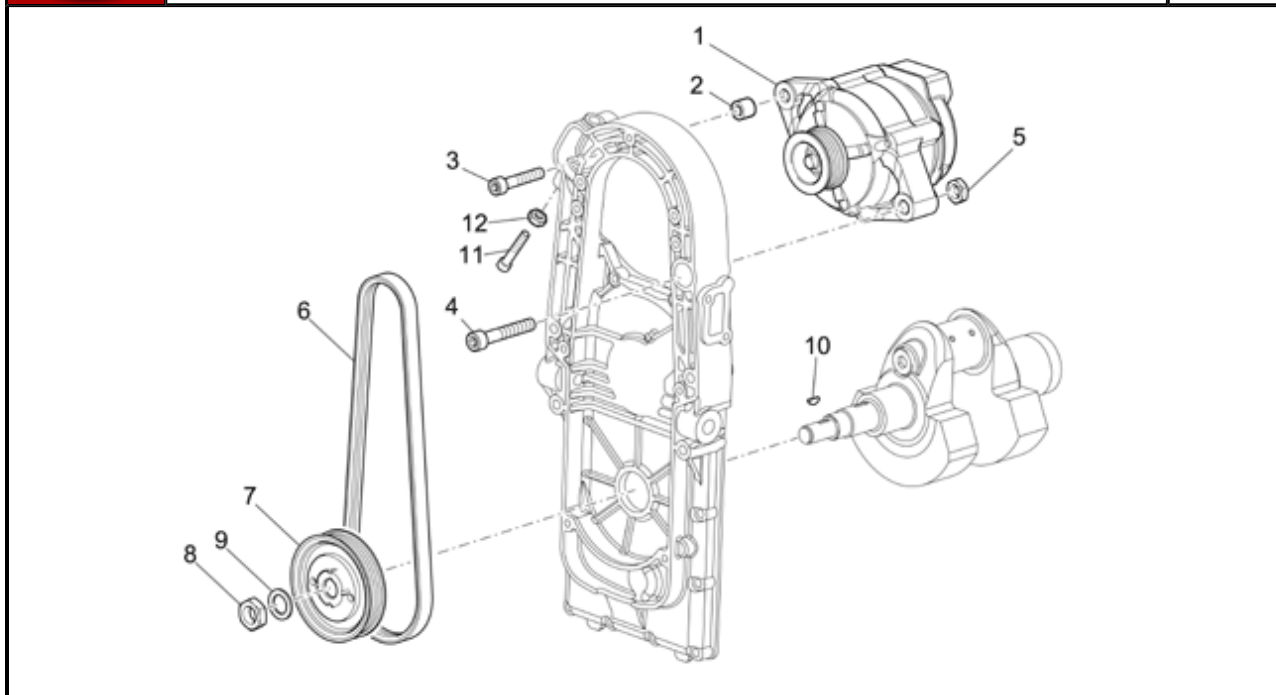

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Generator	-	-	-	-	GU05712431	1	AM129
2	Spacer 8,5x17x13	-	-	-	-	GU91180823	1	-
3	Hex socket screw M8X45	-	-	-	-	GU98620445	1	-
4	Hex socket screw M10x60	-	-	-	-	GU98620560	1	-
5	Nut M10X1,5	-	-	-	-	GU92660012	1	-
6	Belt	-	-	-	-	GU05702530	1	AM159
7	Generator lever pulley	-	-	-	-	GU05701430	1	AM149
8	Nut M16	-	-	-	-	GU92606516	1	-
9	Washer 16,25x24,5x5	-	-	-	-	GU30714201	1	-
10	Flywheel magneto key	-	-	-	-	AP4FAN000030	1	AD089
11	Hex socket screw M8x50	-	-	-	-	GU98230850	1	-
12	Nut M8x1,25	-	-	-	-	GU92605408	1	-

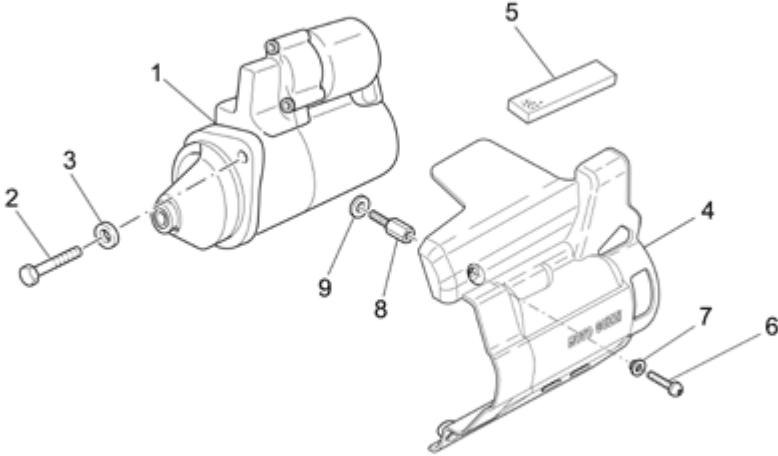MOTO GUZZI		GRISO V IE 1100 2005-2007	GU078	01	TAB N.	56		
STARTER MOTOR								
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Starter motor Bosch	-	-	-	-	GU05730730	1	AK009
2	Screw M8X75	-	-	-	-	GU98082475	2	-
3	Washer 8,4X15X1,5	-	-	-	-	GU95008208	2	-
4	Cover chrime grey	-	-	-	-	GU05733330	1	AH099
5	Adhesive sponge	-	-	-	-	AP8117200	1	-
6	Hex socket screw M6x10	-	-	-	-	GU98370609	2	-
7	Bush	-	-	-	-	AP8121032	2	-
8	Stud bolt	-	-	-	-	GU03469201	1	-
9	Washer 6,4x12	-	-	-	-	GU03013800	1	-


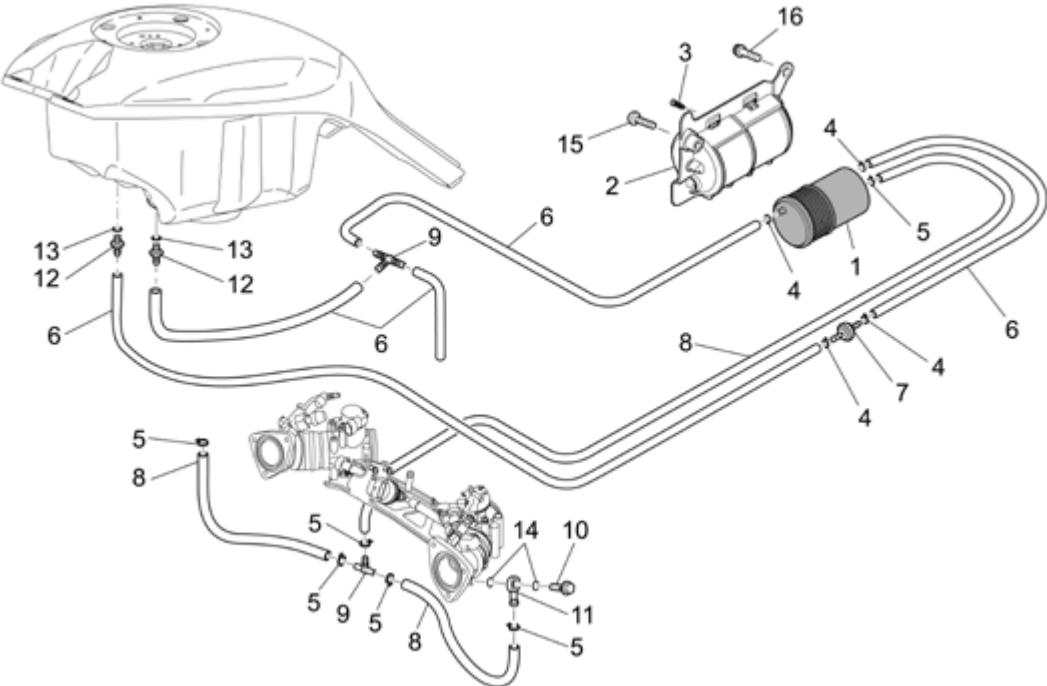
		GRISO V IE 1100 2005-2007	GU078	01	TAB N.	57		
THROTTLE BODY								
								
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Throttle assy	-	-	-	-	GU05112530	1	EC***
2	Potentiometer	-	-	-	-	GU05112830	1	EC059
3	RH manifold	-	-	-	-	GU05115030	1	AC00A
4	Injector kit complete	-	-	-	-	GU05115730	2	EC129
5	Cap	-	-	-	1A	GU32115610	2	-
6	Screw w/ flange M5x16	-	-	-	-	AP8152298	2	-
7	O-ring 46,04x3,53	-	-	-	-	GU90706461	2	AO04*
8	LH manifold	-	-	-	-	GU05115031	1	AC00B
9	Hex socket screw M6x25	-	-	-	-	GU98682325	6	AC369
10	Washer 6,15x11x0,8	-	-	-	-	GU95008206	6	-
11	Hex socket screw M6x20	-	-	-	-	GU98350310	2	-
12	Washer 6,25x10x1,5	-	-	-	-	GU95100116	2	-
13	Hose clamp 57x59,5x10	-	-	-	-	GU93305057	2	AC029
14	Hose	-	-	-	-	GU01114390	2	AC04*
15	Hose clamp 61/65,5	-	-	-	-	GU93305061	2	AC029
16	Hose clamp	-	-	-	-	GU93305058	2	EB039
17	Intake hose RH	-	-	-	-	GU06114401	1	EB04V
18	Intake hose LH	-	-	-	-	GU06114400	1	EB04W
19	Min.regulation engine	-	-	-	-	GU05135830	1	CE509


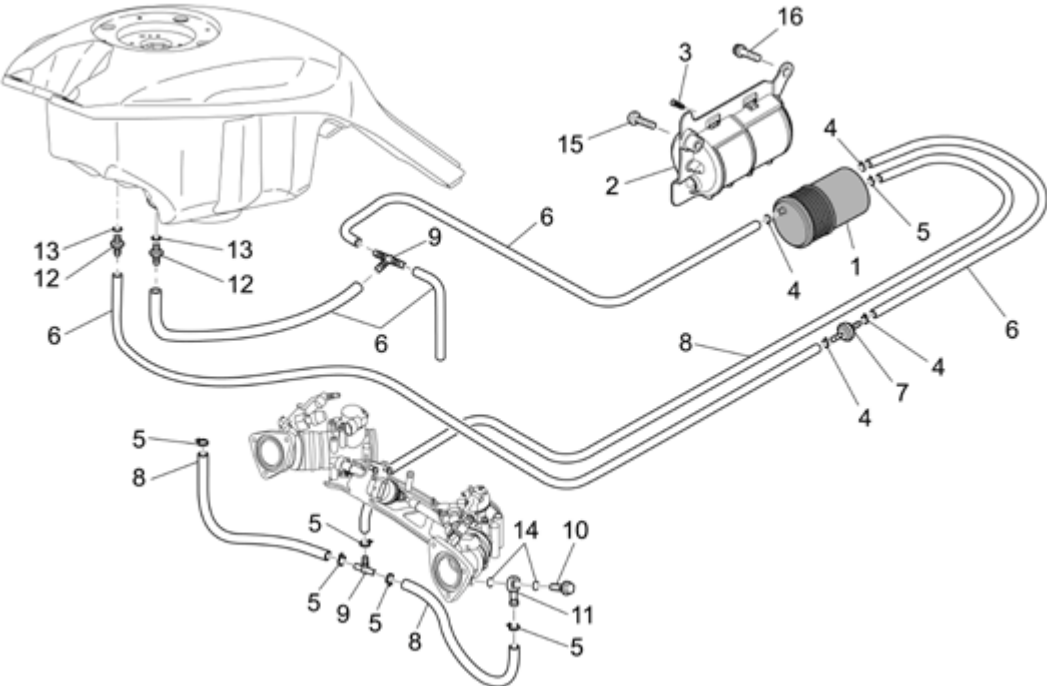
		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	58	
		SPECIFIC TOOLS I						
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Belt tensioning tool	-	-	-	-	GU06948600	1	-
2	Front cover installation cone	-	-	-	-	GU05911730	1	-
3	Gearbox opening tool	-	-	-	-	GU05912530	1	-
4	Spark plug key	-	-	-	-	GU05901930	1	-
5	Piston ring clamp	-	-	-	-	GU05928030	1	-
6	Timing cover seal drift	-	-	-	-	GU05927230	1	-
7	Wrench remov.cover sump/filter	-	-	-	-	GU01929100	1	-
8	Flange flywheel side	-	-	-	-	GU12912000	1	-
9	Seal ring onto flange fly.side	-	-	-	-	GU14927100	1	-
10	Lock flywh.starter motor gear	-	-	-	-	GU12911801	1	-
11	Valve removaland fitting	-	-	-	-	GU10907200	1	-
12	Clamping the camshaftgearing	-	-	-	-	GU14927300	1	-
13	Gearbox housing support	-	-	-	-	GU05902530	1	-
14	Index plate tim.sett./ign.cont	-	-	-	-	GU19929600	1	-
15	Arrow tim.set.ignition control	-	-	-	-	GU17947560	1	-
16	Index plate hub	-	-	-	-	GU65928400	1	-
17	Flange removal flywheel side	-	-	-	-	GU12913600	1	-
18	Locking clutchinternal body	-	-	-	-	GU30912810	1	-
19	Tool for clutch assembly	-	-	-	-	GU30906510	1	-
20	Clutch hub ring nut wrench	-	-	-	-	GU05912630	1	-
21	Seal ring flange flywheel side	-	-	-	-	GU19927100	1	-

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.


GRISO V IE 1100 2005-2007		GU078	01	TAB N.	59			
SPECIFIC TOOLS II								
1	Clutch hub ring nut wrench	-	-	-	-	GU05912630	1	-
2	Steering lock tool	-	-	-	-	AP814190	1	-
3	Handle for drifts	-	-	-	-	GU05902732	1	-
4	Ball joint seal drift	-	-	-	-	GU05902733	1	-
5	Transmis.box oil seal drift 85	-	-	-	-	GU05902731	1	-
6	Sprocket oil seal drift 45x58	-	-	-	-	GU05902735	1	-
7	Wrench for sprocket ring nut	-	-	-	-	GU05902734	1	-
8	Transmission box support	-	-	-	-	GU05902730	1	-
9	Bevel gears support	-	-	-	-	GU05902736	1	-

GRISO V IE 1100 2005-2007		GU078		01		TAB N.		60	
SPECIFIC TOOLS III									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	Tool oil seal assy Ø41 mm	-	-	-	-	AP8140145	1	-	
2	Weight for AP8140189	-	-	-	-	AP8140146	1	-	
3	Tool for spacer stop	-	-	-	-	AP8140147	1	-	
4	Separator plate for spacer	-	-	-	-	AP8140148	1	-	
5	Protection for disassembly op	-	-	-	-	AP8140149	1	-	
6	Tool to assist bleeding air	-	-	-	-	AP8140150	1	-	
7	SHOWA FORKS TOOL KIT	-	-	-	-	AP8140151	1	-	

		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	61		
FUEL VAPOUR RECOVER SYSTEM									
									
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.	
1	Carbon filter	-	-	CA-USA	-	AP8102678	1	DA449	
2	Canister support plate	-	-	CA-USA	-	977418	1	-	
3	Self-tap screw 3,9x14	-	-	CA-USA	-	AP8150413	3	-	
4	Hose clamp D 11,9	-	-	CA-USA	-	AP8201358	4	-	
5	Hose clamp D9,1*	-	-	CA-USA	-	AP8102377	6	-	
6	Fuel pipe 5,5x10	-	-	CA-USA	-	AP8120952	3	DA499	
7	Pressure valve	-	-	CA-USA	-	AP8104614	1	-	
8	Breather pipe 4x8	-	-	CA-USA	-	AP8220263	2	DA499	
9	3-way union	-	-	CA-USA	-	AP8104666	2	-	
10	Bored screw M6X1	-	-	CA-USA	-	GU95990023	2	-	
11	Union	-	-	CA-USA	-	GU95963062	2	-	
12	Union	-	-	CA-USA	-	GU30103730	2	DA409	
13	O-ring 2018	-	-	CA-USA	-	AP8120965	2	-	
14	O-ring 6x1	-	-	CA-USA	-	GU90706009	4	-	
15	Hex socket screw M12x35	-	-	CA-USA	-	GU98231235	1	-	
16	Screw	-	-	CA-USA	-	GU97202435	1	-	


		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	61		
FUEL VAPOUR RECOVER SYSTEM									
									
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.	
1	Carbon filter	-	-	CA-USA	-	AP8102678	1	DA449	
2	Canister support plate	-	-	CA-USA	-	977418	1	-	
3	Self-tap screw 3,9x14	-	-	CA-USA	-	AP8150413	3	-	
4	Hose clamp D 11,9	-	-	CA-USA	-	AP8201358	4	-	
5	Hose clamp D9,1*	-	-	CA-USA	-	AP8102377	6	-	
6	Fuel pipe 5,5x10	-	-	CA-USA	-	AP8120952	3	DA499	
7	Pressure valve	-	-	CA-USA	-	AP8104614	1	-	
8	Breather pipe 4x8	-	-	CA-USA	-	AP8220263	2	DA499	
9	3-way union	-	-	CA-USA	-	AP8104666	2	-	
10	Bored screw M6X1	-	-	CA-USA	-	GU95990023	2	-	
11	Union	-	-	CA-USA	-	GU95963062	2	-	
12	Union	-	-	CA-USA	-	GU30103730	2	DA409	
13	O-ring 2018	-	-	CA-USA	-	AP8120965	2	-	
14	O-ring 6x1	-	-	CA-USA	-	GU90706009	4	-	
15	Hex socket screw M12x35	-	-	CA-USA	-	GU98231235	1	-	
16	Screw	-	-	CA-USA	-	GU97202435	1	-	

GRISO V IE 1100 2005-2007		GU078		01		TAB N.		01	
FRAME									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	Frame	-	-	-	-	GU06400100	1	BA009	
2	Hex socket screw M12x50	-	-	-	-	GU98682650	2	-	
3	Washer 13x18x1,7	-	-	-	-	GU30217900	2	-	
4	RH plate	-	-	-	-	GU05425530	1	BG079	
5	Screw w/ flange M8x30*	-	-	-	-	AP8152288	2	-	
6	Pin M12	-	-	-	-	AP8221160	1	BA329	
7	Washer 13x24x2,5	-	-	-	-	GU95008313	4	-	
8	Low self-locking nut M12*	-	-	-	-	AP8150432	2	-	
9	Pin M12	-	-	-	-	AP8221307	1	BA329	
10	Rubber spacer	-	-	-	-	AP8220238	2	-	
11	Rubber spacer	-	-	-	-	AP8220162	4	-	
12	Clip M6	-	-	-	-	GU28576591	7	-	
13	Clip M5	-	-	-	-	AP8102375	8	-	
14	Gasket	-	-	-	-	GU06409800	3	-	
15	Protection	-	-	-	-	GU06461300	1	-	
16	Guard decal	-	-	-	-	977050	2	-	
17	Silencer supp. plate	-	-	-	-	978146	1	-	

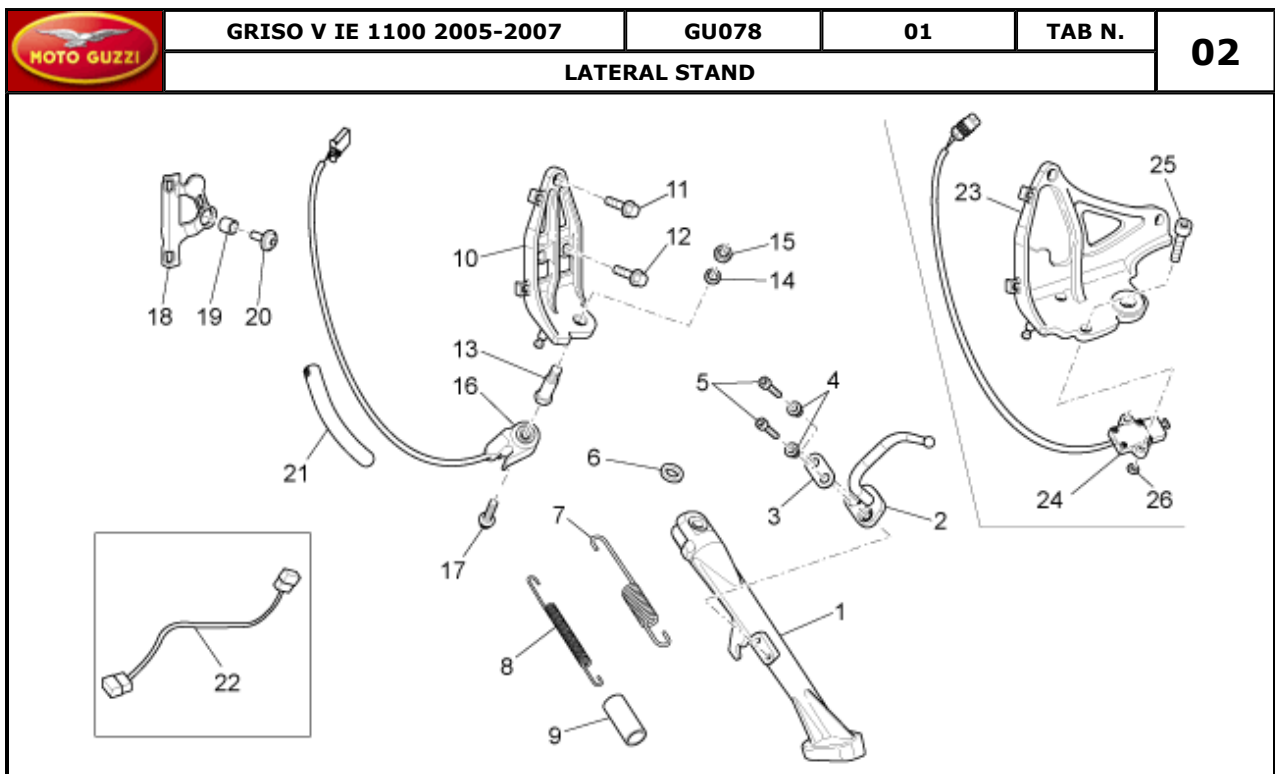




Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Lateral stand	-	-	-	V2	977067	1	BG049
	Lateral stand	-	-	-	V1	GU06432100	1	BG049
2	Lever	-	-	-	-	GU06431900	1	BG109
3	Gasket	-	-	-	-	GU06431700	1	-
4	T bush *	-	-	-	-	AP8121795	2	-
5	Hex socket screw M6x16	-	-	-	-	GU98682316	2	-
6	Washer 12,5x23x1,5	-	-	-	-	GU95005324	2	-
7	Coil pull spring *	-	-	-	-	AP8121014	1	BG02J
8	Lateral stand spring	-	-	-	-	AP8221197	1	BG02K
9	Stand spring protection	-	-	-	-	AP8102524	1	-
10	Stand plate	-	-	-	V1	GU06433500	1	BG119
11	Screw w/ flange M10x25	-	-	-	-	AP8152473	1	-
12	Screw w/ flange M8x25*	-	-	-	-	AP8152287	2	-
13	Central stand fixing screw	-	-	-	-	AP8121607	1	BG019
14	Curved spring washer *	-	-	-	-	AP8150292	1	-
15	Low nut M10x1,25*	-	-	-	-	AP8152001	1	-
16	Rotary switch	-	-	-	-	AP8127319	1	CD149
17	Hex socket screw M6X20	-	-	-	-	GU98350320	1	-
18	Fairlead	-	-	-	-	GU06759300	1	-
19	Bush	-	-	-	-	AP8221225	1	-
20	Hex socket screw M10X20	-	-	-	-	GU98371020	1	-
21	Thermal sheath	-	-	-	-	GU00823923140	1	-
22	Adapter cable	-	-	-	V2	977292	1	-
	Adapter cable	-	-	-	V1	977571	1	-
23	Stand plate	-	-	-	V2	977065	1	BG119
24	Lateral stand switch	-	-	-	-	639542	1	CD149
25	Hex socket screw M5x20	-	-	-	-	GU98612220	2	-
26	Self-locking nut M5*	-	-	-	-	AP8152306	1	-

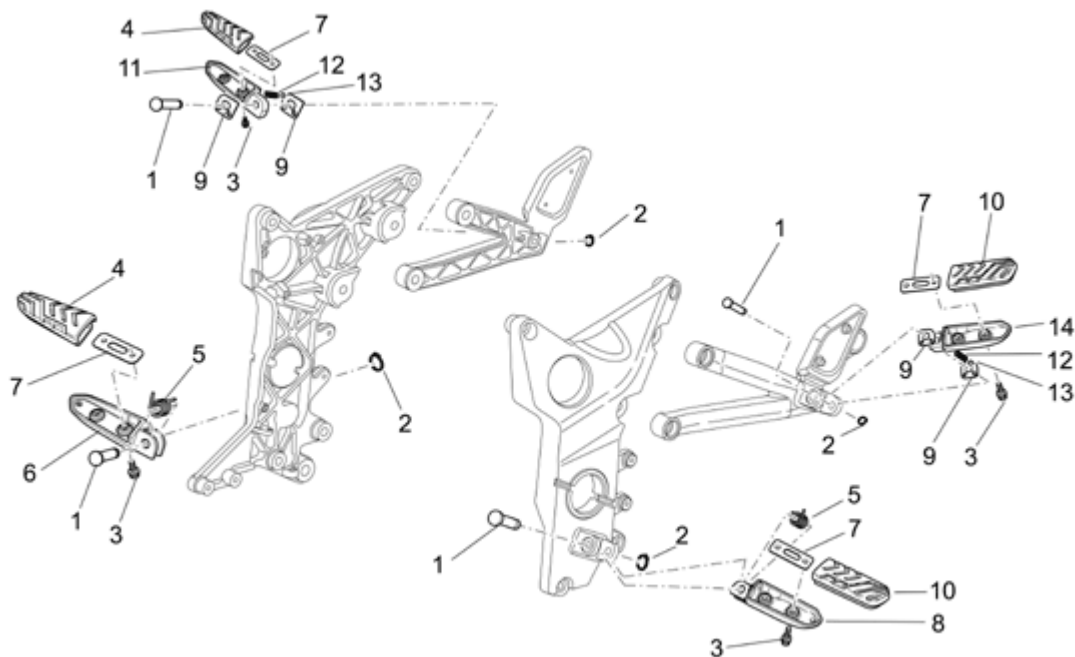
	GRISO V IE 1100 2005-2007	GU078	01	TAB N.	03
	FOOT RESTS I				




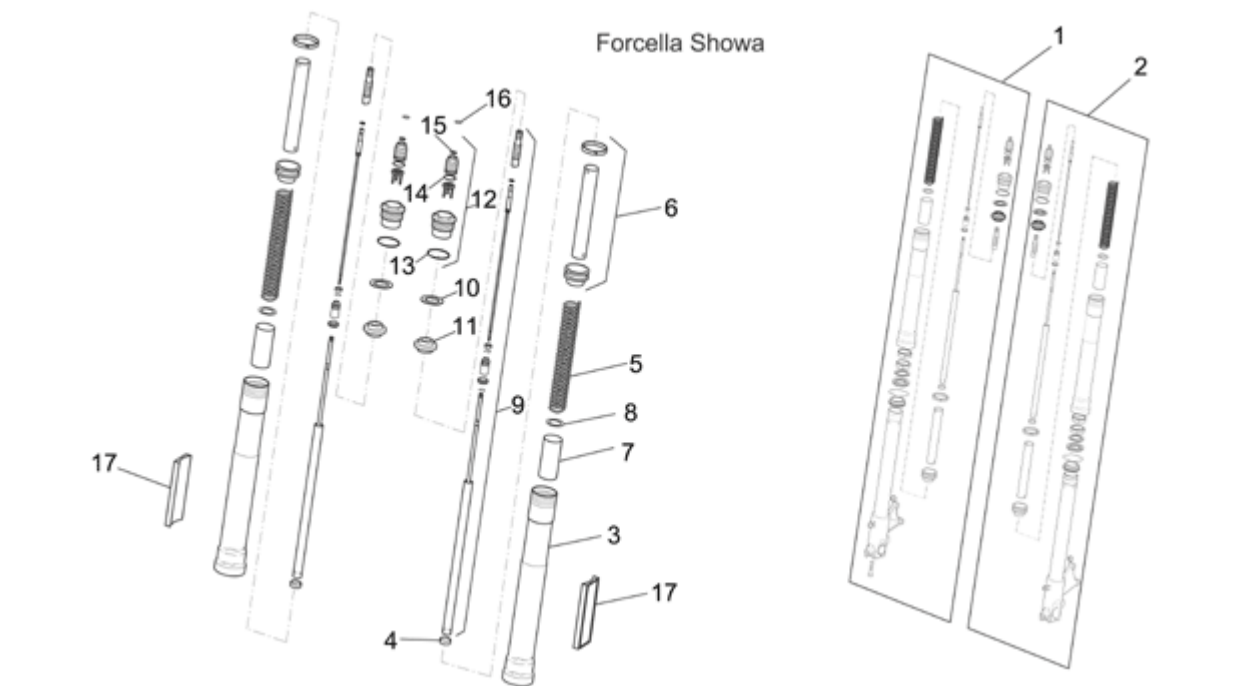
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Pin	-	-	-	-	AP8121567	4	-
2	Stop ring	-	-	-	-	AP8152409	4	-
3	Screw w/ flange M6x12*	-	-	-	-	AP8152277	8	-
4	Support rubber part	-	-	-	-	GU32443210	2	BA24A
5	Footrest return spring	-	-	-	-	AP8221277	2	BA08*
6	RH Foot rests	-	-	-	-	AP8145034	1	BA05A
7	Plate	-	-	-	-	GU32441210	4	-
8	LH Foot rests	-	-	-	-	AP8145035	1	BA05B
9	Footrest plate	-	-	-	-	AP8134451	4	-
10	Support rubber part	-	-	-	-	GU32443211	2	BA24B
11	Rear footrest, RH	-	-	-	-	GU32442310	1	BA15A
12	Coil compress. spring *	-	-	-	-	AP8121133	2	-
13	Ball D6,35	-	-	-	-	AP8101861	2	-
14	Rear footrest, LH	-	-	-	-	GU32442710	1	BA15B


		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	04		
FOOT RESTS II									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	LH plate	-	-	-	T2	977053	1	BA17A	
	LH plate	-	-	-	T1	GU06446500	1	BA17A	
2	Screw M8x75	-	-	-	-	GU98700475	4	-	
3	Spacer 8,2x14x49,5	-	-	-	-	AP8121805	4	-	
4	Self-locking nut M8*	-	-	-	-	AP8152300	6	-	
5	Screw M8x30	-	-	-	-	GU98700430	4	-	
6	RH plate	-	-	-	T1	GU06443700	1	BA17B	
	RH plate	-	-	-	T2	977052	1	BA17B	
7	RH protection	-	-	-	-	GU06445900	1	DC269	
8	Screw M5x15	-	-	-	-	GU98710215	4	-	
9	LH protection	-	-	-	-	GU06445901	1	DC269	
10	LH plug	-	-	-	T1	GU06446900	1	-	
11	LH plug	-	-	-	T1	GU06447400	1	-	
12	Ring	-	-	-	-	GU05446431	2	-	
13	Hex socket screw M5X10	-	-	-	-	GU98350210	6	-	
14	RH foot rest support	-	-	-	-	GU06443500	1	BA16A	
15	Screw M10x30	-	-	-	-	GU98700530	4	-	
16	RH protection	-	-	-	-	GU06447500	1	DC269	
17	Hex socket screw M4x12	-	-	-	-	GU98370412	4	-	
18	LH footrest support	-	-	-	-	GU06446000	1	BA16B	
19	LH protection	-	-	-	-	GU06447501	1	DC269	

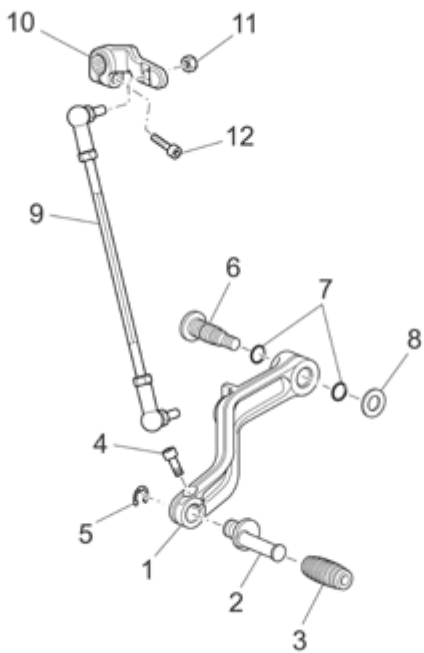		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	05	
		GEAR LEVER						
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Gear lever	-	-	-	-	GU06250900	1	BA109
2	Brake lever pin	-	-	-	-	AP8121221	1	-
3	Lever rubber	-	-	-	-	AP8120912	1	BA149
4	Hex socket screw M6x16	-	-	-	-	GU98682316	1	-
5	Circlip d9	-	-	-	-	AP8150462	1	-
6	Rear brake lever pin	-	-	-	-	AP8121223	1	-
7	O-ring 11,11x1,78	-	-	-	-	AP8144007	2	-
8	Washer 10,2X18X2	-	-	-	-	GU95008210	1	-
9	Change gear tie rod compl.	-	-	-	-	GU06257800	1	BA129
10	Lever	-	-	-	-	GU05256930	1	BA119
11	Nut M6X1	-	-	-	-	GU92630707	1	-
12	Hex socket screw M6x20	-	-	-	-	GU98682320	1	-

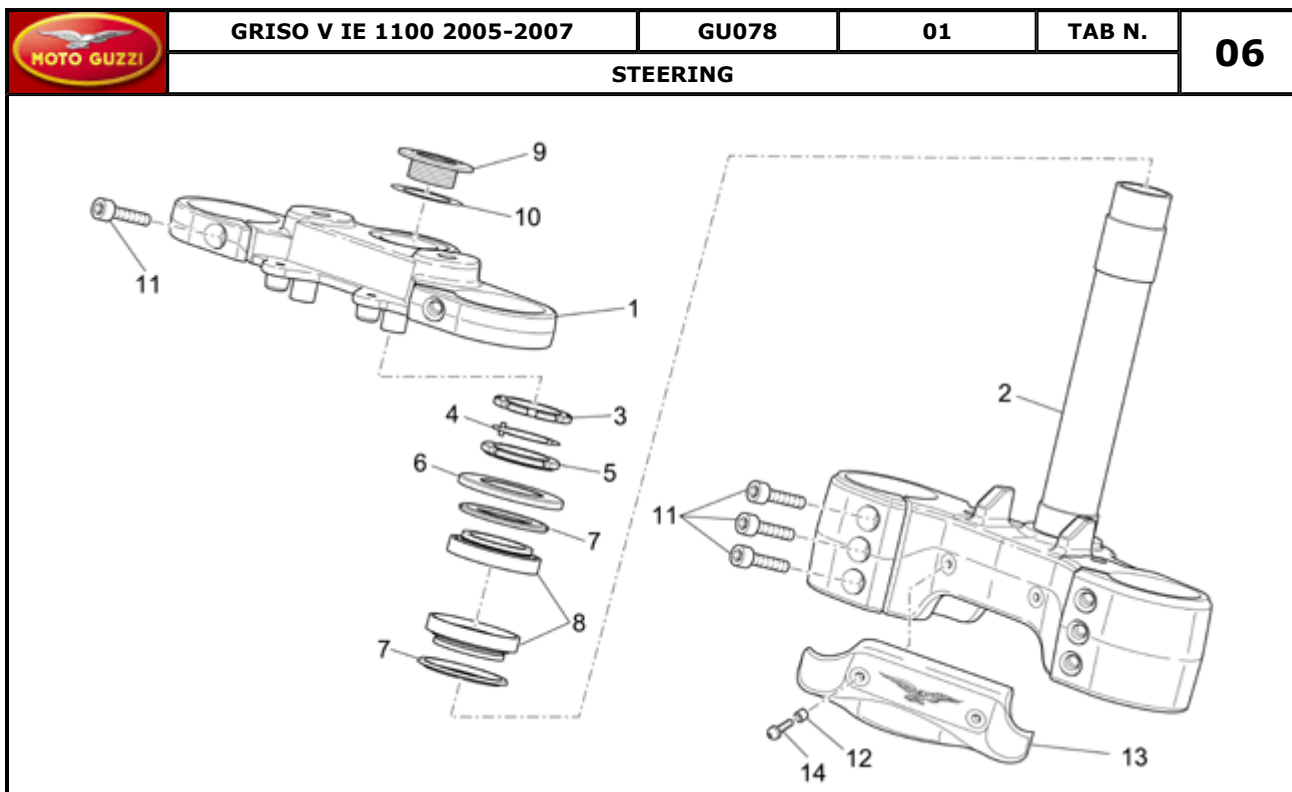

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Fork upper plate	-	-	-	-	GU06493100	1	BD119
2	Stem base	-	-	-	-	GU06494000	1	BD019
3	Return ring nut	-	-	-	-	AP8123643	1	BA049
4	Steering security plate	-	-	-	-	AP8121207	1	-
5	Ring nut	-	-	-	-	AP8123642	1	BA049
6	Dust cover ring	-	-	-	-	AP8123644	1	BA379
7	Dust cover ring	-	-	-	-	AP8123641	2	BA379
8	Axial ball bearing	-	-	-	-	AP8110077	2	BA039
9	Upper plate fixing bush	-	-	-	-	AP8121346	1	-
10	Stem plug washer	-	-	-	-	AP8152384	1	-
11	Screw M8x30	-	-	-	-	GU98700430	8	-
12	Bush 5,3x8x7,1	-	-	-	-	AP8221036	2	-
13	Brake hose fixing plate	-	-	-	-	GU05658431	1	BD329
14	Screw w/ flange M5x16	-	-	-	-	AP8152298	2	-


		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	07	
FRONT FORK								
 <p style="text-align: center;">Forcella Showa</p>								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	RH hub cpl.	-	-	-	-	AP8123637	1	BD27A
2	LH hub cpl.	-	-	-	-	AP8123638	1	BD27B
3	Sleeve	-	-	-	-	AP8123829	2	BD09*
4	Plunger attachment bush	-	-	-	-	AP8123810	2	-
5	Spring	-	-	-	-	AP8123831	2	BD07*
6	Preload tube cpl.	-	-	-	-	AP8123832	2	BD33*
7	Spacer	-	-	-	-	AP8123835	2	-
8	Washer	-	-	-	-	AP8123836	2	-
9	Plunger, complete	-	-	-	-	AP8123830	2	BD069
10	Washer	-	-	-	-	AP8123816	2	-
11	Ring	-	-	-	-	AP8123815	2	-
12	Sleeve plug cpl.	-	-	-	-	AP8123833	2	BD15*
13	O-ring	-	-	-	-	AP8123834	2	BD15*
14	O-ring	-	-	-	-	AP8123819	2	BD15*
15	O-ring	-	-	-	-	AP8123820	2	BD15*
16	Stop ring	-	-	-	-	AP8123821	2	BD15*
17	Reflector, amber	-	-	CA-USA	-	GU05781630	2	CB08E

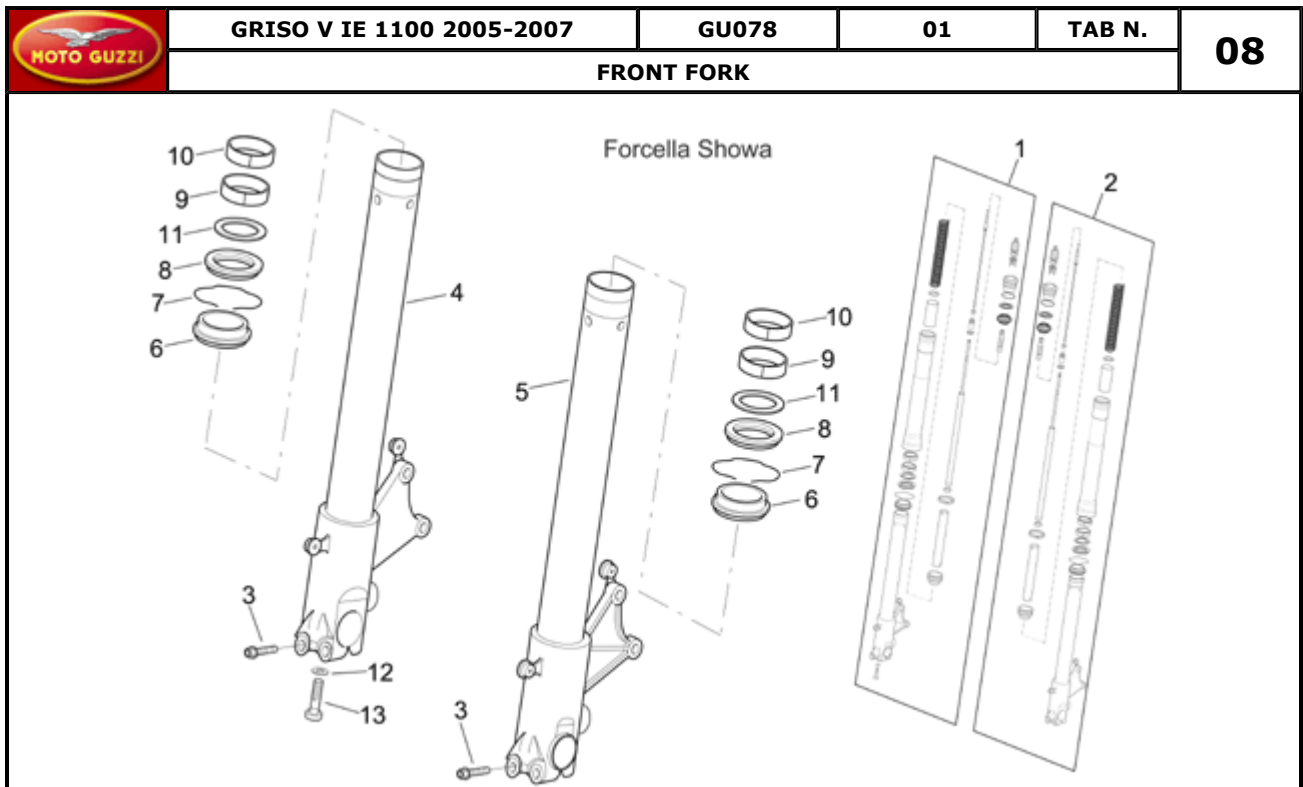


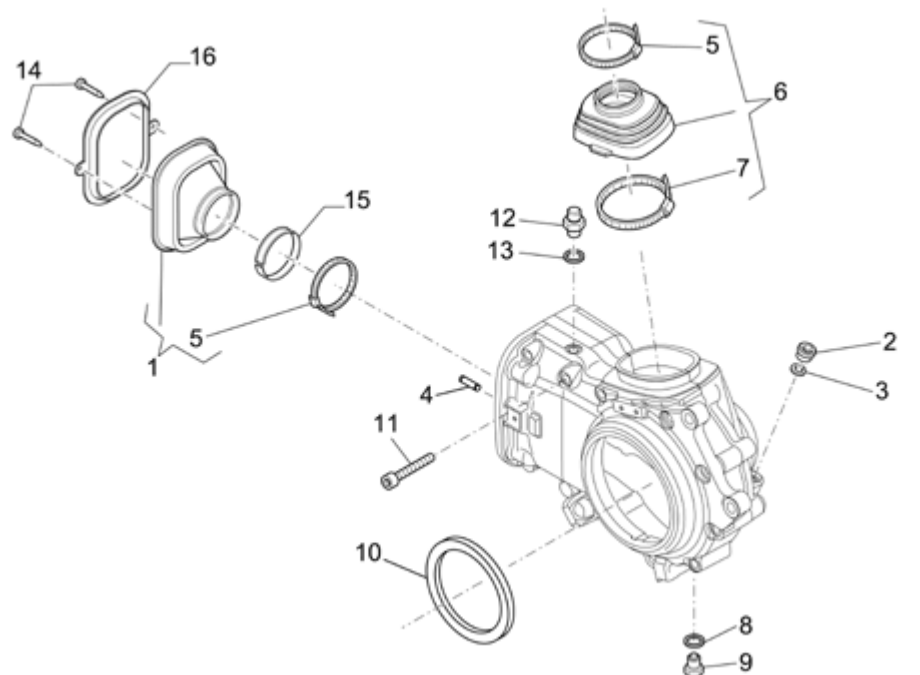
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	RH hub cpl.	-	-	-	-	AP8123637	1	BD27A
2	LH hub cpl.	-	-	-	-	AP8123638	1	BD27B
3	Screw w/ flange M8x40*	-	-	-	-	AP8152290	4	-
4	Hub+RH fork leg	-	-	-	-	AP8123822	1	BD03A
5	Hub+LH fork leg	-	-	-	-	AP8123823	1	BD03B
6	Dust cover	-	-	-	-	AP8123824	2	BD05*
7	Circlip	-	-	-	-	AP8123806	2	-
8	Oil seal	-	-	-	-	AP8123825	2	BD04*
9	Bush	-	-	-	-	AP8123827	2	BD10*
10	Bush	-	-	-	-	AP8123828	2	BD10*
11	Ring	-	-	-	-	AP8123826	2	-
12	Special washer	-	-	-	-	AP8123811	2	-
13	Screw M10x1,5	-	-	-	-	AP8123812	2	-


GRISO V IE 1100 2005-2007		GU078		01		TAB N.		09	
SWING ARM									
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.	
1	Swingarm	-	-	-	-	GU05540230	1	BE009	
2	Screw w/ flange M10x35	-	-	-	-	AP8152318	4	-	
3	Rubber bellows	-	-	-	-	GU05548030	1	AH289	
4	Hose clamp 3,6x375	-	-	-	-	GU93304390	2	-	
5	Bush	-	-	-	-	GU05547130	1	BE079	
6	Pin	-	-	-	-	GU05547030	1	BE019	
7	Roller bearing 25x47x17	-	-	-	-	GU92249224	2	BE069	
8	Gasket ring	-	-	-	-	GU05547930	2	-	
9	Hex socket screw M6x25	-	-	-	-	GU98682325	2	-	

	GRISO V IE 1100 2005-2007	GU078	01	TAB N.	10
	TRANSMISSION COMPLETE				

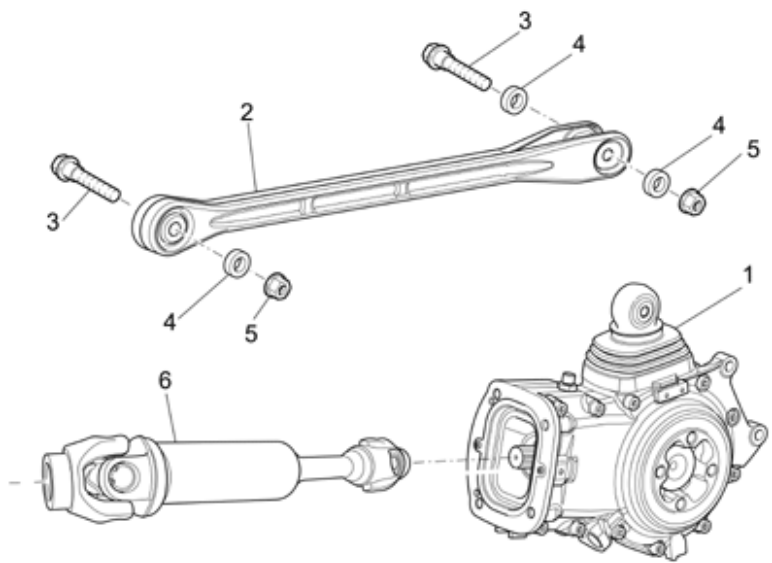


Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Transmission assygrey	-	-	-	-	GU400122400100	1	AG219
2	Reaction rod assy.	-	-	-	-	GU05358830	1	AG239
3	Screw w/ flange M10x55	-	-	-	-	AP8152410	2	AG379
4	Spacer 10,2x20x4	-	-	-	-	AP8121218	3	-
5	Nut M10	-	-	-	-	AP8152242	2	-
6	Drive shaft	-	-	-	-	GU05326330	1	AG199

		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	11	
		TRANS.CPL.-CAGE						
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Upper dust cover	-	-	-	-	GU05358330	1	AG399
2	Oil plug M12x1,5	-	-	-	-	GU05351230	1	AH119
3	Washer	-	-	-	-	GU90718120	1	-
4	Pin 6x20	-	-	-	-	GU95510620	2	-
5	Hose clamp	-	-	-	-	GU05358130	2	-
6	Upper dust cover	-	-	-	-	GU05358030	1	AG399
7	Hose clamp	-	-	-	-	GU05358230	1	-
8	Gasket 10x18x1,5	-	-	-	-	GU01528930	1	-
9	Oil unload plug M10X1	-	-	-	-	GU31003766	1	-
10	Gasket ring 85x110x8BASL	-	-	-	-	GU90408511	1	AO369
11	Hex socket screw M8x50	-	-	-	-	GU98680450	11	-
12	Breather plug	-	-	-	-	GU05206530	1	-
13	Gasket 10x18x1,5	-	-	-	-	GU01528930	1	-
14	Screw M3,9x6,5	-	-	-	-	GU99210406	2	-
15	Ring	-	-	-	-	GU05358530	1	-
16	Gasket	-	-	-	-	GU05358630	1	AO439

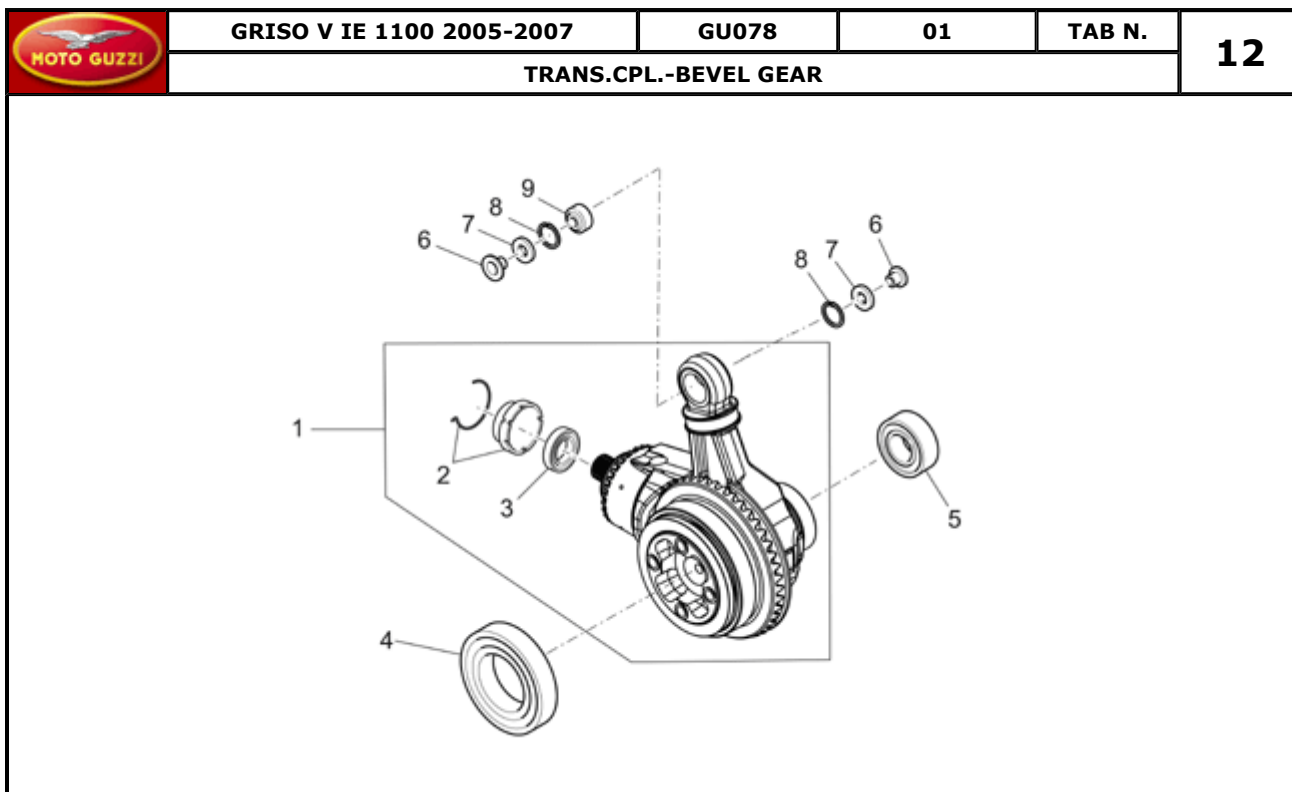
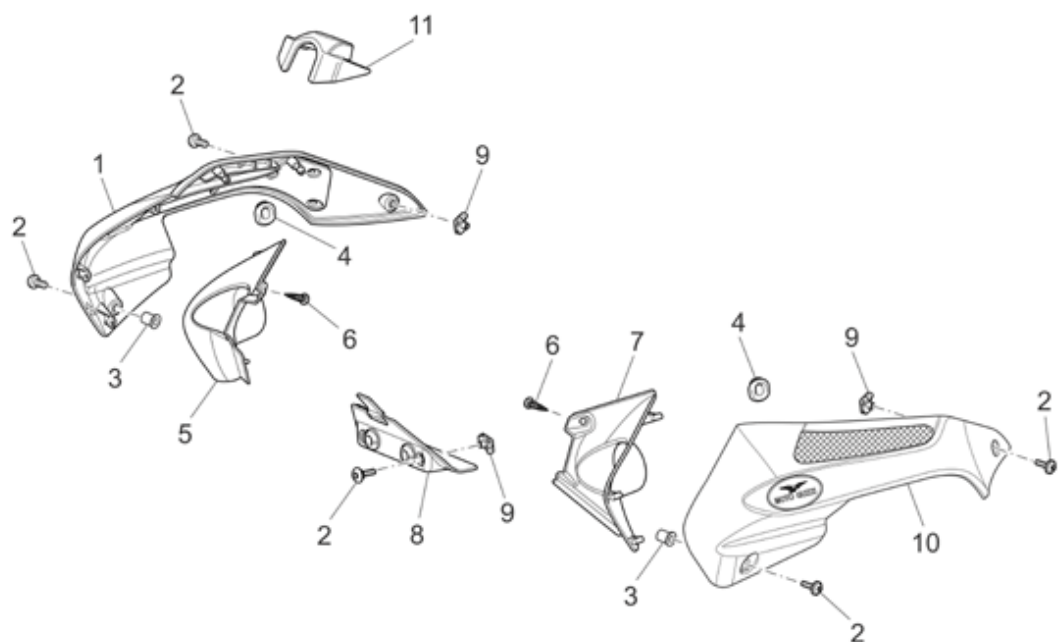


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Bevel gear kit 12/44	-	-	-	-	GU05354230	1	AG189
2	Ring nut	-	-	-	-	GU05352430	1	-
3	Gasket ring 45x58x7	-	-	-	-	GU90404558	1	AO389
4	Ball bearing 85x120x18	-	-	-	-	GU92208518	1	AI269
5	Ball bearing 30x62x16	-	-	-	-	GU92204230	1	AI269
6	Bush	-	-	-	-	AP8121098	2	AG379
7	Gasket ring	-	-	-	-	AP8120485	2	AG379
8	Circlip	-	-	-	-	GU90273026	2	AG379
9	Ball joint	-	-	-	-	GU05638130	1	AG379


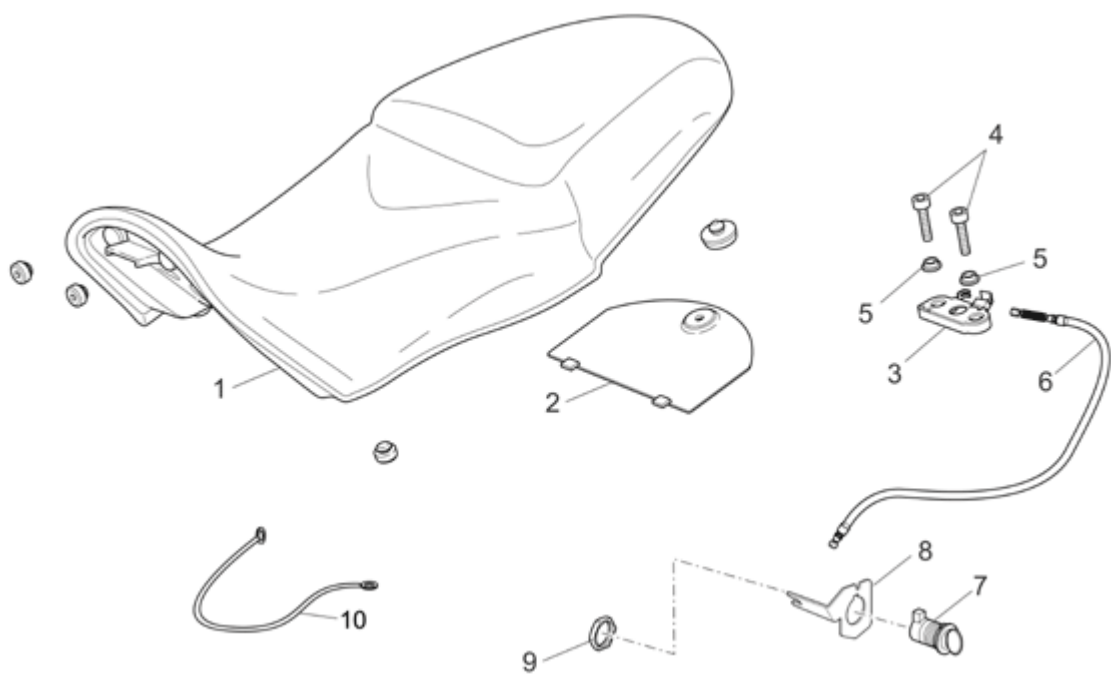
GRISO V IE 1100 2005-2007		GU078		01		TAB N.		13	
CONNECTING ROD - REAR SHOCK ABS.									
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.	
1	Shock absorber	-	-	-	-	GU06550200	1	BF009	
2	Screw w/ flange M10x80	-	-	-	-	AP8152398	1	-	
3	Double conrod	-	-	-	-	GU05560330	1	BF099	
4	Double connecting rod pin L40	-	-	-	-	AP8135924	1	BF109	
5	Needle bearing	-	-	-	-	AP8110066	7	BF119	
6	Oil seal D18x24x3	-	-	-	-	AP8110068	8	-	
7	Double connecting rod pin L47	-	-	-	-	GU05562030	2	BF109	
8	Double connecting rod pin L25	-	-	-	-	AP8135608	1	BF109	
9	Hex socket screw M10x82	-	-	-	-	AP8152397	1	-	
10	T bush *	-	-	-	-	AP8121155	1	-	
11	Self-locking nut M10*	-	-	-	-	AP8152301	3	-	
12	Hex screw M10x47	-	-	-	-	AP8152147	1	BF029	
13	Curved spring washer *	-	-	-	-	AP8150292	1	-	
14	Single conrod comp.	-	-	-	-	GU05562430	1	BF089	
15	Screw w/ flange M10x85	-	-	-	-	AP8152482	1	-	
16	Screw w/ flange M10x95	-	-	-	-	AP8152396	1	-	

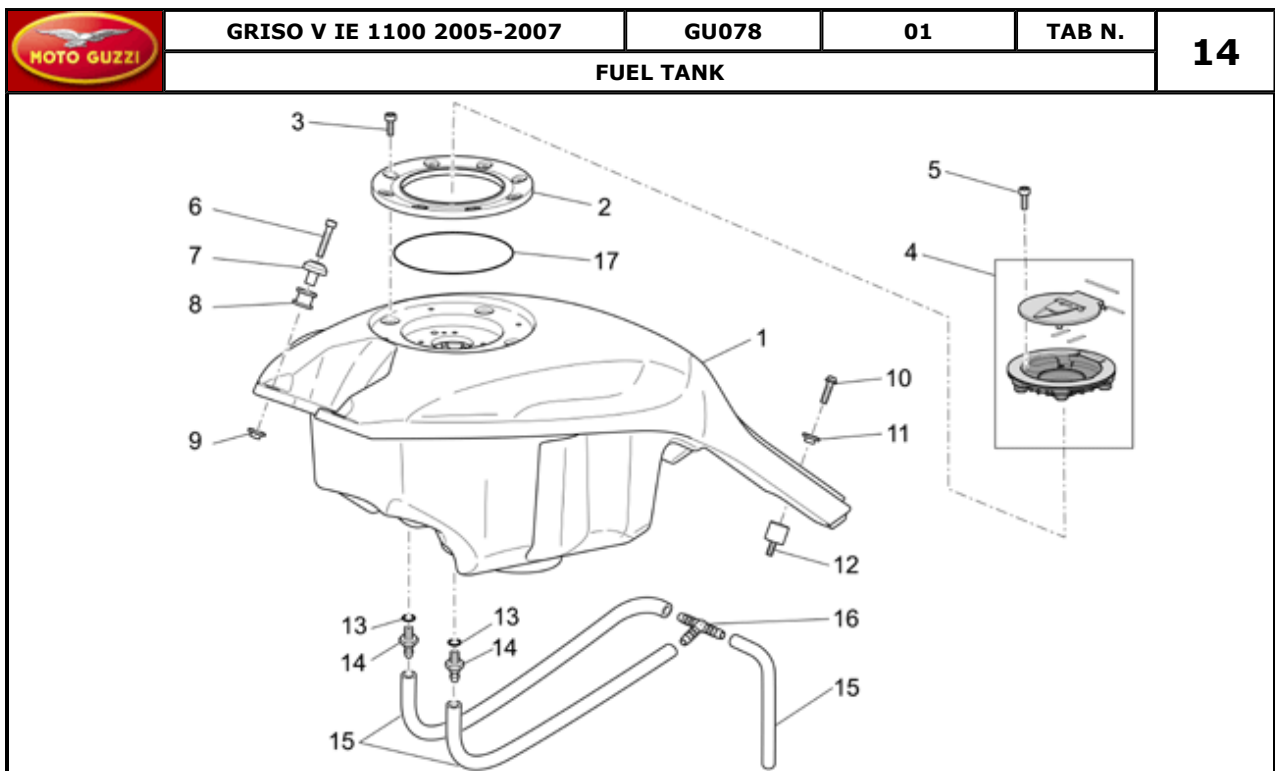
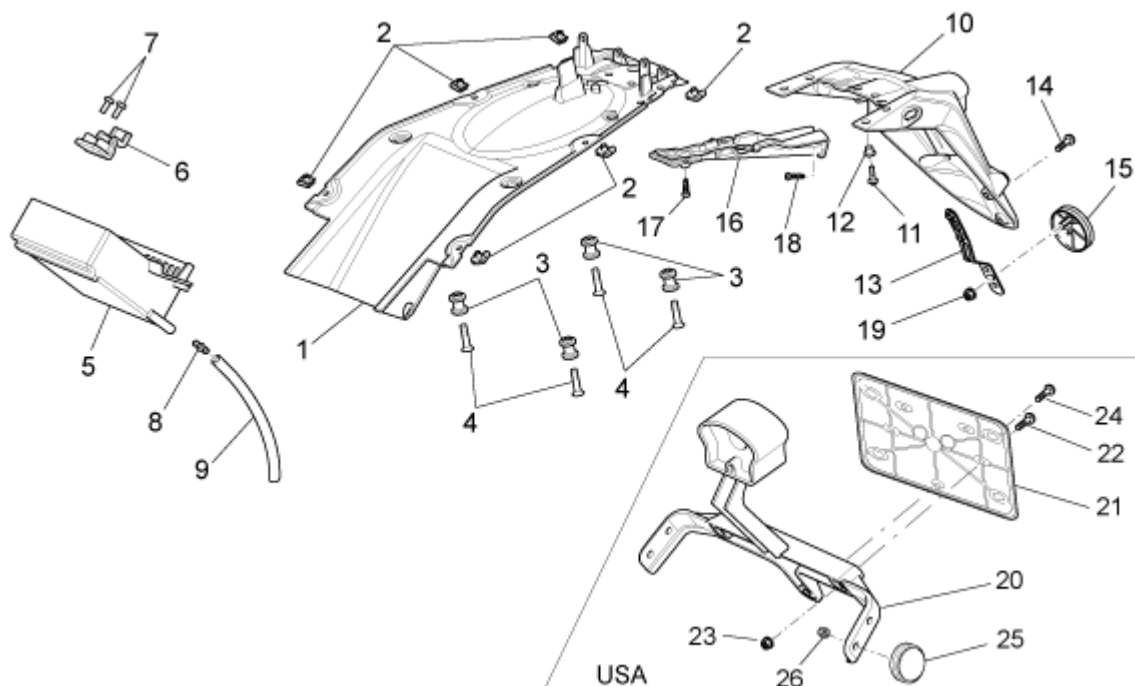


Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Fuel tank, black	-	-	-	-	g/bl	GU06100201	1 DA009
	Fuel tank red	-	-	-	-	r/red	GU06100202	1 DA009
	Fuel tank, cyan	-	-	-	-	p/bl	GU06100203	1 DA009
	Fuel tank, yellow	-	-	-	-	s/ye	GU06100204	1 DA009
	Fuel tank orange	-	-	-	-	or	GU06100200Y06	1 DA009
	Fuel tank blank	-	-	-	-	gr	GU06100200	1 DA009
2	Plug ring nut	-	-	-	-	-	GU06102300	1 DA179
3	Screw M5x15	-	-	-	-	-	GU98710215	8 -
4	Tank cap	-	-	-	-	-	GU06103900	1 DA029
5	Hex socket screw M5x16	-	-	-	-	-	GU98692216	4 -
6	Hex socket screw M6X40	-	-	-	-	-	GU98680340	2 -
7	Fuel tank bush	-	-	-	-	-	GU06107100	2 -
8	Rubber spacer	-	-	-	-	-	AP8144328	2 -
9	T bush *	-	-	-	-	-	AP8121075	2 -
10	Screw w/ flange M6X25	-	-	-	-	-	AP8152280	2 -
11	T bush *	-	-	-	-	-	GU06704901	2 -
12	Silent-block	-	-	-	-	-	GU93222023	2 -
13	Union	-	-	-	-	-	GU30103730	2 DA409
14	O-ring 2018	-	-	-	-	-	AP8120965	2 -
15	Fuel pipe 4x8	-	-	-	-	-	AP822263	3 DA399
16	3-way union	-	-	-	-	-	AP8104666	1 DA319
17	O-ring 164,69X3,53	-	-	-	-	-	977062	1 -


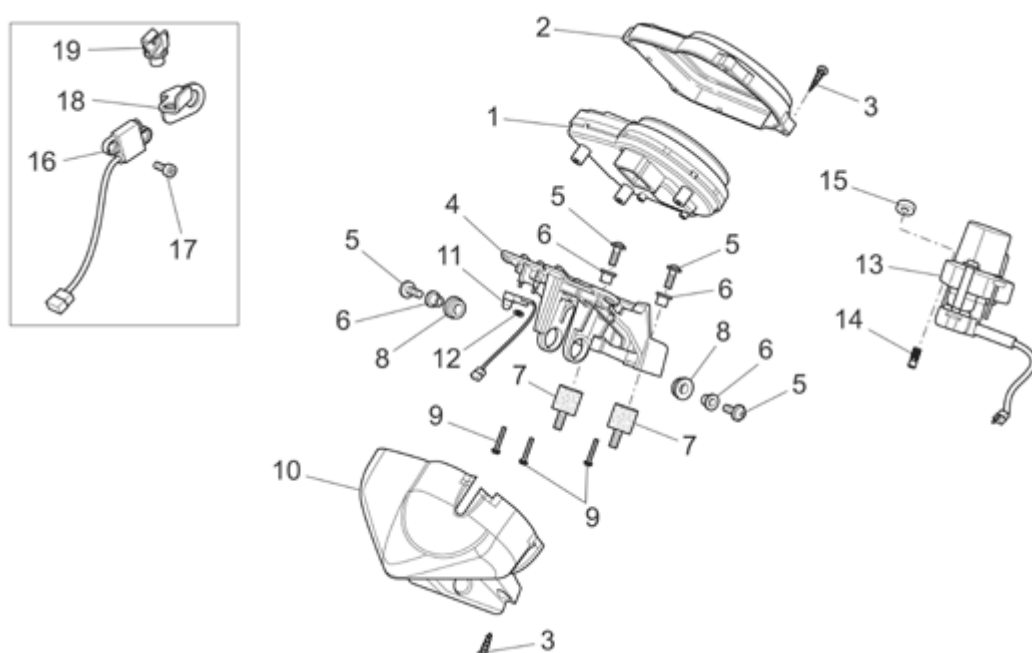
		GRISO V IE 1100 2005-2007	GU078	01	TAB N.	15			
FRONT BODY - DUCT									
									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	RH air duct, red	-	-	-	-	r/red	GU06570202	1	DF25A
	RH air duct, cyan	-	-	-	-	p/bl	GU06570203	1	DF25A
	RH air duct, yellow	-	-	-	-	s/ye	GU06570204	1	DF25A
	RH air duct, orange	-	-	-	-	or	GU06570200Y06	1	DF25A
	RH air duct, black	-	-	-	-	g/bl	GU06570201	1	DF25A
2	Screw w/ flange M5x12	-	-	-	-	-	AP8152302	8	-
3	Antivibration bush	-	-	-	-	-	GU93231605	2	-
4	Rubber spacer	-	-	-	-	-	AP8220162	4	-
5	RH Covers	-	-	-	-	-	GU06576800	1	DF26A
6	Self-tap screw 3,9x14	-	-	-	-	-	AP8150413	6	-
7	LH Covers	-	-	-	-	-	GU06576900	1	DF26B
8	Protection	-	-	-	-	-	GU06729800	1	AM109
9	Clip M5	-	-	-	-	-	AP8102375	2	-
10	LH air duct, black	-	-	-	-	g/bl	GU06570301	1	DF25B
	LH air duct, red	-	-	-	-	r/red	GU06570302	1	DF25B
	LH air duct, cyan	-	-	-	-	p/bl	GU06570303	1	DF25B
	LH air duct, yellow	-	-	-	-	s/ye	GU06570304	1	DF25B
	LH air duct, orange	-	-	-	-	or	GU06570300Y06	1	DF25B
11	Protection	-	-	-	-	-	GU06783600	1	-


MOTO GUZZI		GRISO V IE 1100 2005-2007	GU078	01	TAB N.	16			
FRONT MUDGUARD									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	Front mudguard, orange	-	-	-	-	or	GU06434300Y06	1	DF019
	Front mudguard, yellow	-	-	-	-	s/ye	GU06434304	1	DF019
	Front mudguard, azure	-	-	-	-	p/bl	GU06434303	1	DF019
	Front mudguard, red	-	-	-	-	r/red	GU06434302	1	DF019
	Front mudguard, black	-	-	-	-	g/bl	GU06434301	1	DF019
	Front mudguard blank	-	-	-	-	gr	GU06434300	1	DF019
2	Screw w/ flange M5x9	-	-	-	-	-	AP8152339	4	-
3	Brake hose holder plate	-	-	-	-	-	977572	2	-

		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	17	
		SADDLE						
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Saddle	-	-	-	-	GU06460500	1	DG009
2	Door	-	-	-	-	GU06479600	1	-
3	Pass.saddle connecting plate	-	-	-	-	AP8102913	1	DG019
4	Hex socket screw M6X25	-	-	-	-	GU98370625	2	-
5	Self-locking nut M6*	-	-	-	-	AP8152299	2	-
6	Saddle release cable	-	-	-	-	GU06462100	1	HA069
7	Saddle lock	-	-	-	-	GU05466830	1	DH039
8	Plate	-	-	-	-	AP8134948	1	-
9	Lock nut	-	-	-	-	AP8102523	1	-
10	Helmet lock cable	-	-	-	-	AP8102502	1	HA079


		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	18	
REAR BODY - MUDGUARD								
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Splash guard	-	-	-	-	GU06438700	1	DF069
2	Clip M5	-	-	-	-	AP8102375	6	-
3	Stud bolt	-	-	-	-	GU06467300	4	-
4	Screw	-	-	-	-	GU98250835	4	-
5	Battery holder	-	-	-	-	GU06704800	1	DF149
6	Battery fixing plate	-	-	-	-	GU06418600	1	CC069
7	Screw TBCT M6X16	-	-	-	-	AP8150377	2	-
8	Union	-	-	-	-	GU06704700	1	-
9	Breather pipe 4x8	-	-	-	-	AP8220263	1	CC029
10	Number plate holder	-	-	-	-	GU06438600	1	DF059
11	Hex socket screw M5x22	-	-	-	-	GU98680222	6	-
12	T bush 6,5x8,6x9	-	-	-	-	AP8121929	6	-
13	Reflector support	-	-	-	-	AP8134448	1	CB21F
14	Hex socket screw M5x16*	-	-	-	-	AP8152268	2	-
15	Rear reflector, red	-	-	-	-	AP8224164	1	CB08F
16	Support	-	-	-	-	GU06439200	1	-
17	Self-tap screw 3,9x14	-	-	-	-	AP8150413	2	-
18	Self-tapping screw *	-	-	-	-	AP8150420	1	-
19	Self-locking nut M5*	-	-	-	-	AP8152306	1	-
20	Number plate holder support	-	-	CA-USA	-	977421	1	-
21	Number plate holder	-	-	CA-USA	-	AP8149034	1	DF059
22	Screw	-	-	CA-USA	-	GU98223530	2	-
23	Flanged nut M5	-	-	CA-USA	-	GU92650035	2	-
24	Hex socket screw M5x25	-	-	CA-USA	-	AP8152270	1	-
25	Rear reflector, red	-	-	CA-USA	-	AP8224164	1	CB08F
26	Self-locking nut M5*	-	-	CA-USA	-	AP8152306	2	-

MOTO GUZZI		GRISO V IE 1100 2005-2007	GU078	01	TAB N.	19		
REAR BODY - REAR FAIRING								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Rear fairing arancio	-	-	-	-	or	GU06573100Y06	1 DF169
	Rear fairing, yellow	-	-	-	-	s/ye	GU06573104	1 DF169
	Rear fairing, cyan	-	-	-	-	p/bl	GU06573103	1 DF169
	Rear tail red	-	-	-	-	r/red	GU06573102	1 DF169
	Rear tail black	-	-	-	-	g/bl	GU06573101	1 DF169
2	Screw w/ flange M5x12	-	-	-	-	-	AP8152302	8 -
3	Clip M5	-	-	-	-	-	AP8102375	6 -
4	Covers	-	-	-	-	-	GU06573300	1 DF209
5	T bush 6,5x8,6x9	-	-	-	-	-	AP8121929	2 -
6	Spacer	-	-	-	-	-	GU06469200	2 -
7	Vibration-damping rubber	-	-	-	-	-	GU06741200	1 -


		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	20		
DASHBOARD									
									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	Dashboard complete	-	-	-	-	GU06760000	1	JA009	
2	Instrum.frame, chrom.	-	-	-	-	GU06765100	1	JB029	
3	Spec. self-tap screw 3,5x20	-	-	-	-	AP8221242	7	-	
4	Socket support	-	-	-	-	GU06764000	1	JB099	
5	Screw w/ flange M6X16	-	-	-	-	GU98210616	4	-	
6	T bush *	-	-	-	-	AP8121795	4	-	
7	Silent-block	-	-	-	-	GU93222023	2	-	
8	Rubber spacer *	-	-	-	-	AP8220228	2	-	
9	Self-tap screw 5x14	-	-	-	-	AP8150509	3	-	
10	Lower dash.cover, chr.	-	-	-	-	GU06765200	1	JB119	
11	Air temp. Sensor	-	-	-	-	AP8124936	1	AN059	
12	Washer for shafts	-	-	-	-	GU90274002	2	-	
13	Main switch - steering lock	-	-	-	-	GU06782500	1	DH029	
14	Special screw M8x15	-	-	-	2A	GU97260415	2	-	
	Shear rivet M8x40	-	-	-	1A	AP8150351	2	-	
15	Spacer 8,5x12x4	-	-	-	1A	GU91180804	2	-	
16	Speedometer sensor cpl.	-	-	-	-	GU06765400	1	CA209	
17	Hex socket screw M4x10	-	-	-	-	AP8152043	2	-	
18	Fairlead	-	-	-	-	GU06765500	1	-	
19	Cable-guide	-	-	-	-	AP8121882	1	-	

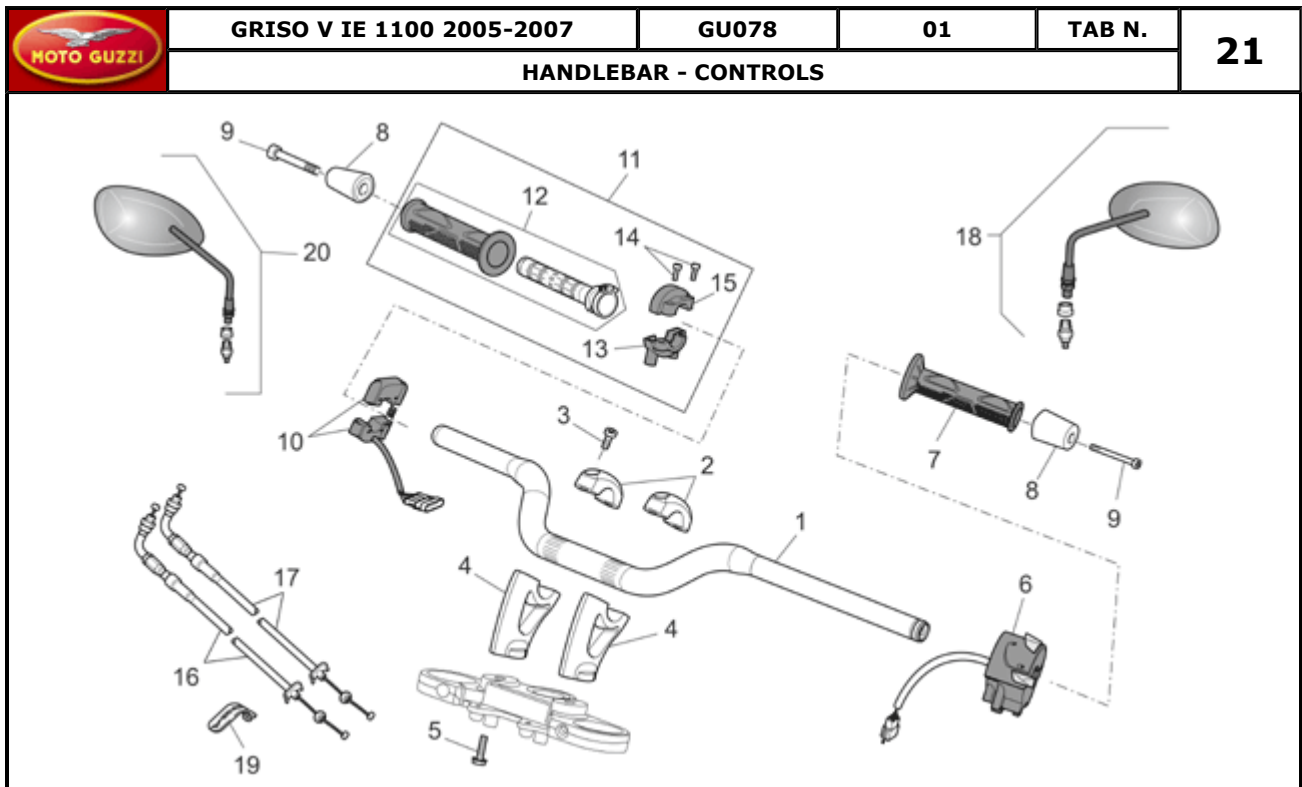

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Handlebar	-	-	-	-	GU06600300	1	BC009
2	Upper U-bolt	-	-	-	-	GU06500600	2	BD149
3	Screw M8x30	-	-	-	-	GU98700430	4	-
4	Lower U-bolt	-	-	-	-	GU06500200	2	BD149
5	Screw w/ flange M10x40*	-	-	-	-	AP8152325	2	-
6	LH lights selector	-	-	-	-	AP8127703	1	CD10B
7	LH hand grip	-	-	-	-	AP8118579	1	BC039
8	Anti.v weight, chr.	-	-	-	-	GU06602800	2	BC06*
9	Screw M6x50	-	-	-	-	GU98250650	2	-
10	Engine stop-start device	-	-	-	-	851998	1	CD139
11	Throttle cpl.	-	-	-	-	GU05603331	1	BC019
12	RH hand grip	-	-	-	-	GU01603480	1	BC039
13	Front gas lever U-bolt	-	-	-	-	AP8118502	1	-
14	Cap screw	-	-	-	-	AP8118492	2	-
15	Rear gas lever U-bolt	-	-	-	-	AP8118503	1	-
16	Gas fastener	-	-	-	-	GU06117500	1	HA029
17	Gas fastener	-	-	-	-	GU06117800	1	HA029
18	LH rearview mirror	-	-	-	-	GU32769860	1	DF10B
19	Hose clamp L46 mm	-	-	-	-	GU01609630	4	-
	Hose clamp L36 mm	-	-	-	-	GU03609600	1	-
20	RH rearview mirror	-	-	-	-	GU32769460	1	DF10A

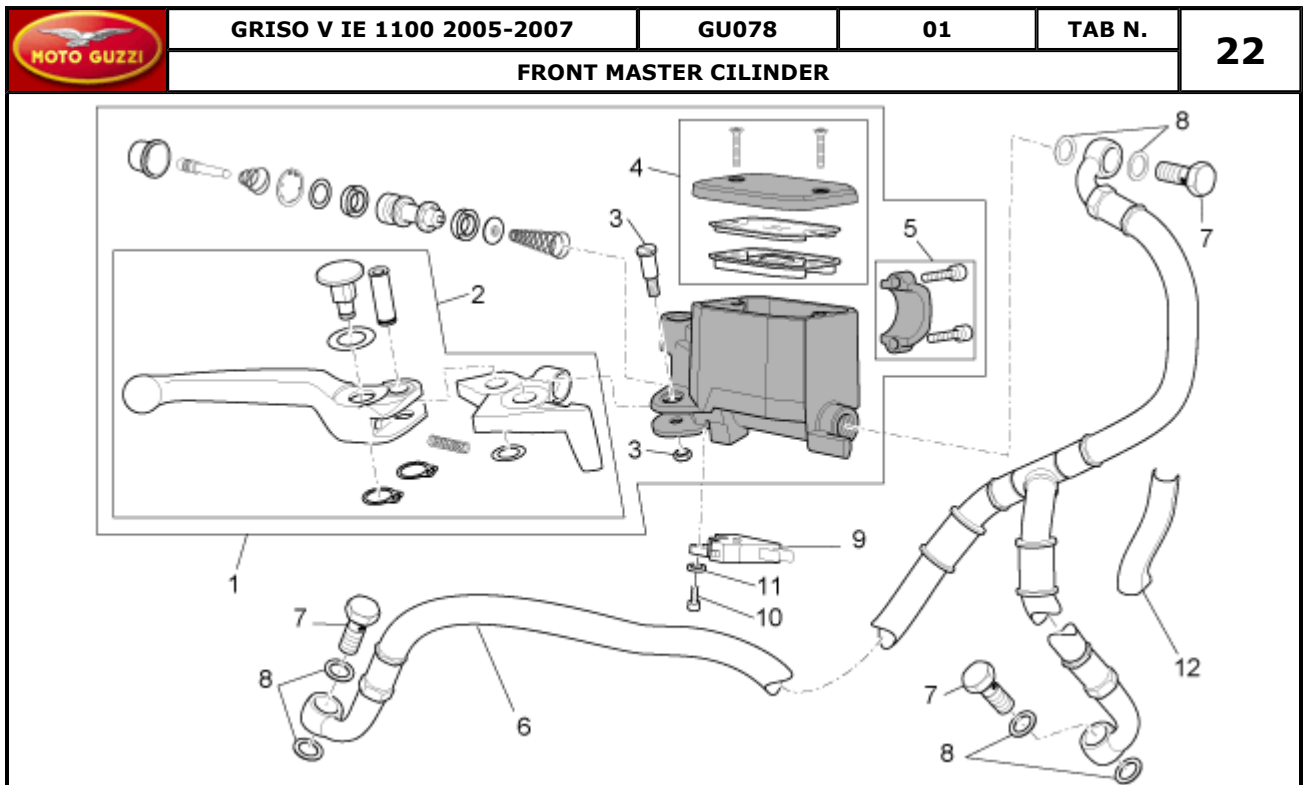


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Front master cilinder	-	-	-	-	GU05660130	1	IA00E
2	Front brake lever	-	-	-	-	AP8133510	1	IA01E
3	Lever pin	-	-	-	-	AP8113995	1	IA01E
4	Tank cap	-	-	-	-	GU05661130	1	IA03A
5	U-bolt	-	-	-	-	AP8113993	1	IA029
6	Front brake hose	-	-	-	-	GU06658800	1	IA05E
7	Oil pipe screw *	-	-	-	-	GU95990028	3	-
8	Gasket	-	-	-	-	GU25656100	6	-
9	Brake light switch	-	-	-	-	GU03749845	1	CD00E
10	Hex socket screw M4x12	-	-	-	-	GU98370412	1	-
11	Washer 4,3x8x1,5	-	-	-	-	GU95021104	1	-
12	Brake hose holder plate	-	-	-	-	977572	2	-

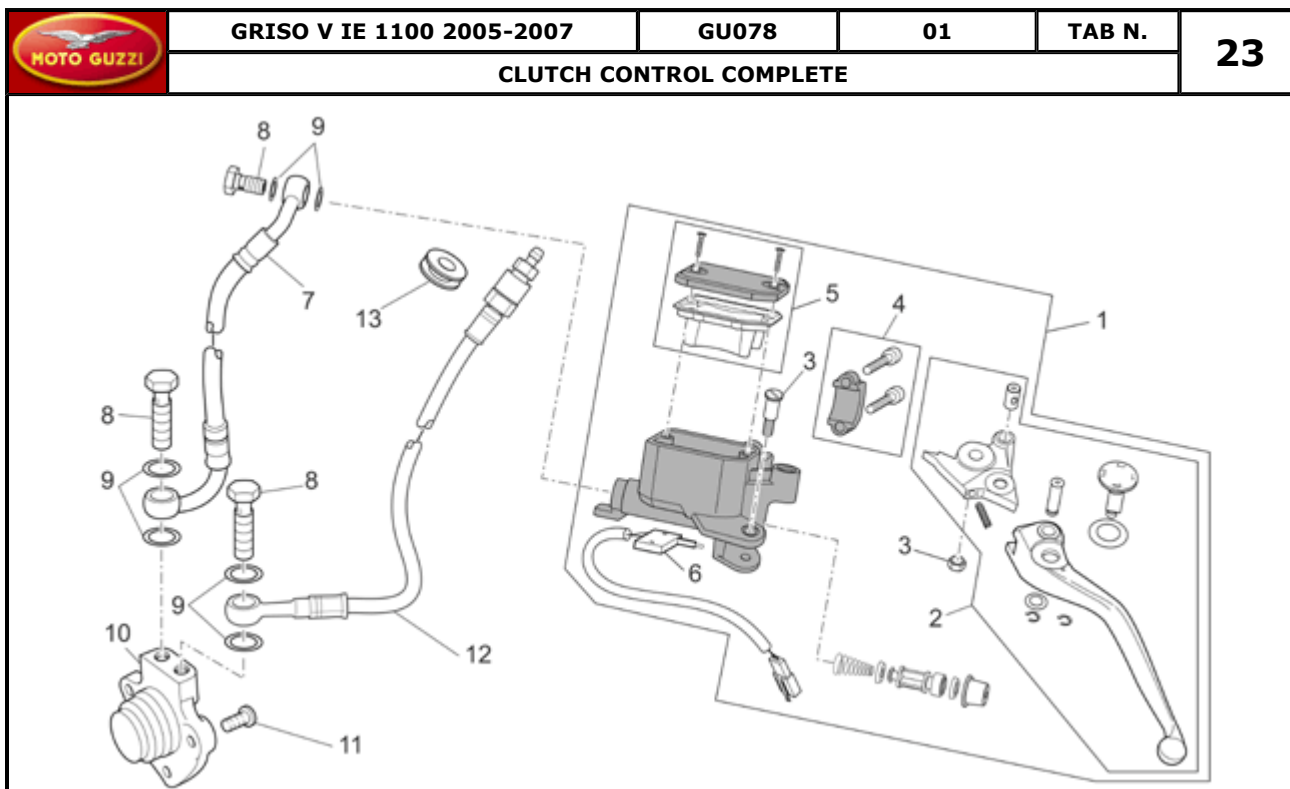
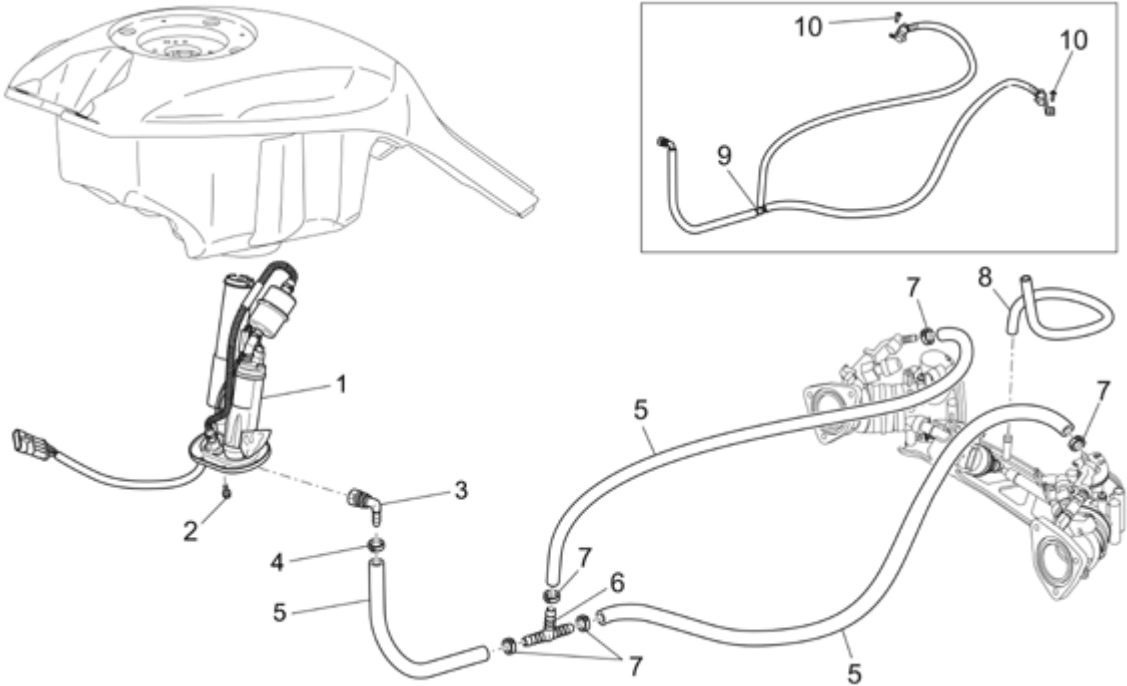



Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Clutch pump	-	-	-	-	AP8106713	1	BC099
2	Clutch lever	-	-	-	-	AP8118659	1	BC059
3	Lever pin	-	-	-	-	GU03604845	1	-
4	U-bolt	-	-	-	-	AP8113993	1	-
5	Tank cap	-	-	-	-	AP8113997	1	BC249
6	Microswitch	-	-	-	-	AP8113998	1	CD159
7	Clutch pipe	-	-	-	-	GU06606500	1	BC169
8	Oil pipe screw	-	-	-	-	AP8133594	3	IA15E
9	Gasket	-	-	-	-	AP8121915	6	-
10	Clutch command cylinder	-	-	-	-	GU05086330	1	BC139
11	Screw w/ flange M6x16*	-	-	-	-	AP8152278	3	-
12	Float chambe clutch pipe	-	-	-	-	GU05606630	1	BC169
13	Rubber spacer	-	-	-	-	AP8120594	1	-

GRISO V IE 1100 2005-2007		GU078		01		TAB N.		24	
OIL COOLER									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	Oil cooler cpl.	-	-	-	-	GU06162000	1	GD009	
2	Reduction	-	-	-	-	GU01161331	2	-	
3	Gasket	-	-	-	-	GU01154230	6	-	
4	Bored screw	-	-	-	-	GU01161730	2	-	
5	LH pipe	-	-	-	-	GU06161600	1	GD029	
6	RH pipe	-	-	-	-	GU06162300	1	GD019	
7	Duct	-	-	-	-	GU06583200	1	DF249	
8	Screw w/ flange M6X30	-	-	-	-	AP8152281	3	-	
9	Washer 6,4x13x1,5	-	-	-	-	GU95005306	3	-	
10	Bush	-	-	-	-	AP8121032	3	-	
11	Spacer 7x10x11	-	-	-	-	GU91180711	3	-	
12	Rubber spacer *	-	-	-	-	AP8120030	3	-	
13	Cover	-	-	-	-	GU06583000	1	-	
14	Spacer	-	-	-	-	GU06583600	1	-	
15	Screw M8x30	-	-	-	-	GU98700430	3	-	
16	Washer 8,4X13X0,8	-	-	-	-	GU14615901	3	-	
17	Screw M10x30	-	-	-	-	GU98700530	1	-	
18	Washer 10,5x16x1	-	-	-	-	GU19149800	1	-	
19	Water cooler grille	-	-	-	-	GU06582600	1	DF189	
20	Hex socket screw M5X12	-	-	-	-	GU98230512	4	-	
21	T bush	-	-	-	-	AP8121811	4	-	

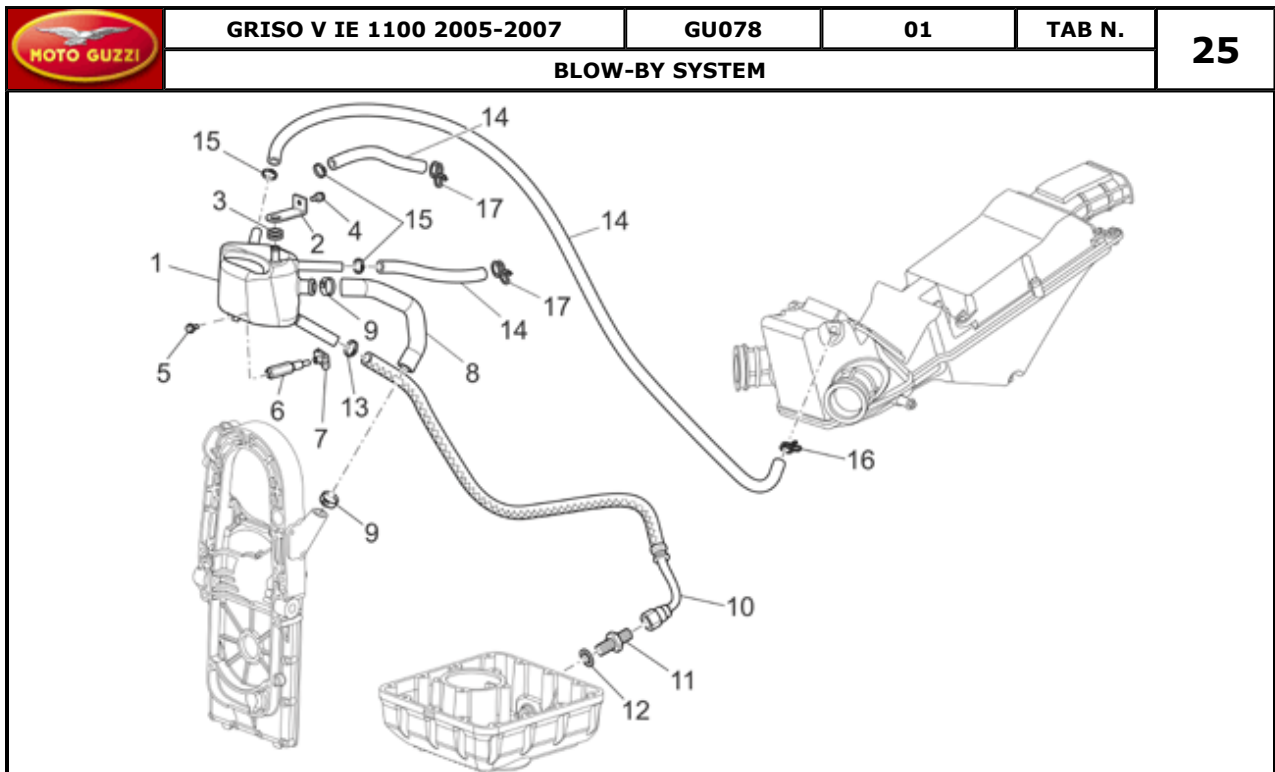


Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Housing	-	-	-	-	GU06153400	1	GD059
2	Plate	-	-	-	-	GU06412300	1	-
3	Rubber spacer *	-	-	-	-	AP8120030	1	-
4	Screw w/ flange M6x16*	-	-	-	-	AP8152278	1	-
5	Screw w/ flange M6x12*	-	-	-	-	AP8152277	1	-
6	Spacer	-	-	-	-	GU06164630	1	-
7	Clip M6	-	-	-	-	GU28576591	1	-
8	Breather pipe	-	-	-	-	GU06157600	1	GD069
9	Hose clip d.26x0,8	-	-	-	-	GU28157750	1	-
10	Pipe	-	-	-	-	GU06159300	1	GD069
11	Reduction	-	-	-	-	GU01161331	1	-
12	Gasket	-	-	-	-	GU01154230	1	-
13	White hose clip D.13,5x6	-	-	-	-	AP8102765	1	-
14	Breather pipe	-	-	-	-	GU00823955080	3	-
15	White hose clip d.13x6	-	-	-	-	AP8102764	3	-
16	Hose clamp	-	-	-	-	AP8102520	1	-
17	Hose clamp D 11,9	-	-	-	-	AP8201358	2	-

		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	26	
		FUEL SUPPLY						
								
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Fuel pump cpl.	-	-	-	-	GU06107200	1	DA139
2	Screw w/ flange M5x16	-	-	-	-	AP8152273	6	-
3	Union	-	-	-	1A	GU32106610	1	DA409
4	White hose clip d.13x6	-	-	-	1A	AP8102764	1	-
5	Fuel pipe 6x13	-	-	-	1A	AP8144069	3	DA399
6	3-way union	-	-	-	1A	AP8144303	1	DA319
7	Hose clamp 12,5x8	-	-	-	1A	AP8102239	5	-
8	Pipe	-	-	-	-	GU05135930	1	-
9	Fuel pipe, cpl.	-	-	-	2A	977064	1	DA399
10	Screw w/ flange M5x16	-	-	-	-	AP8152298	2	-

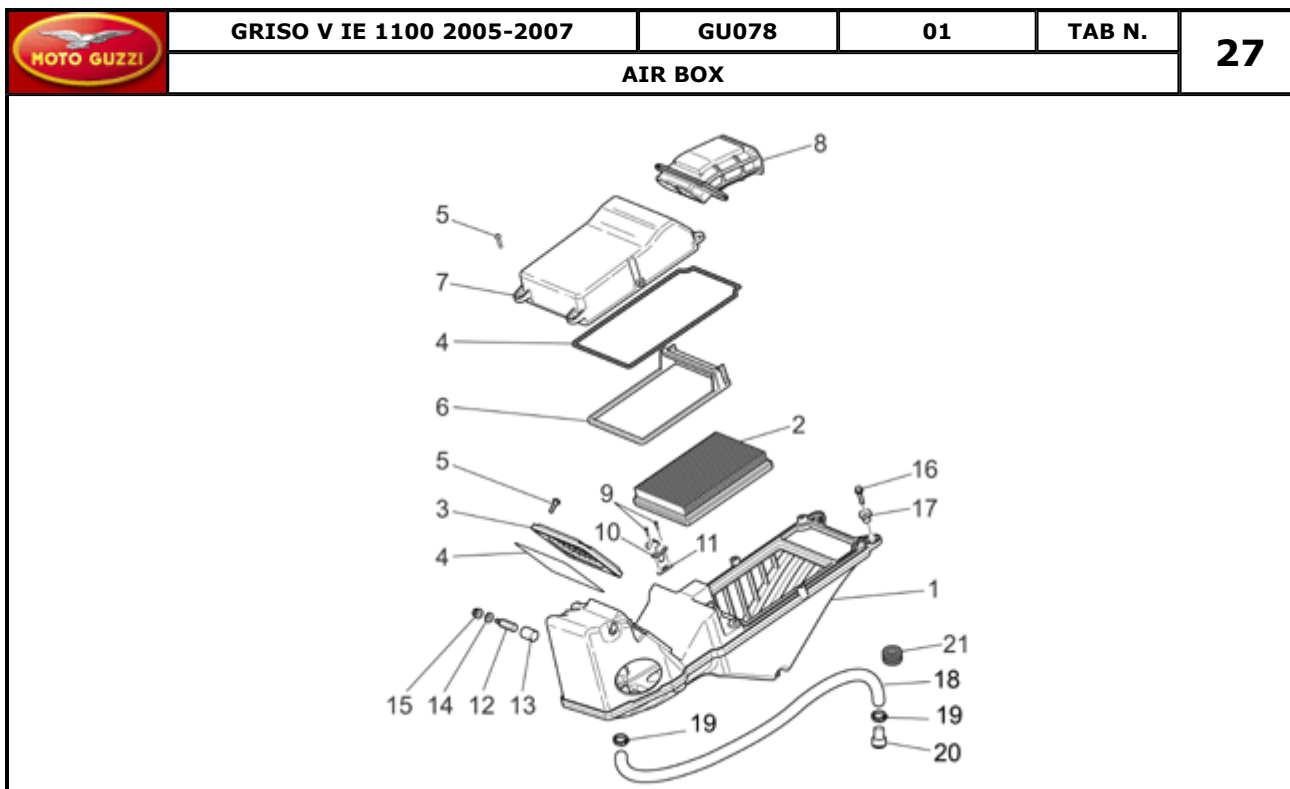
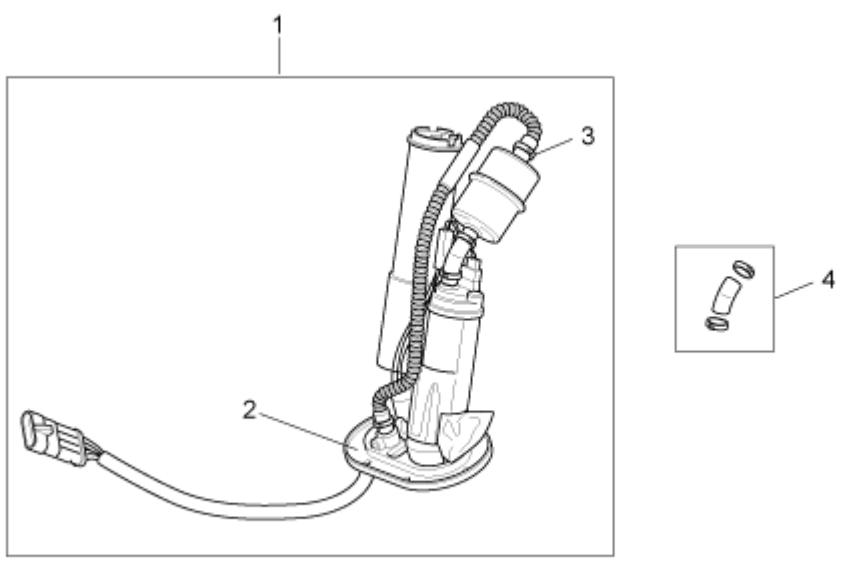



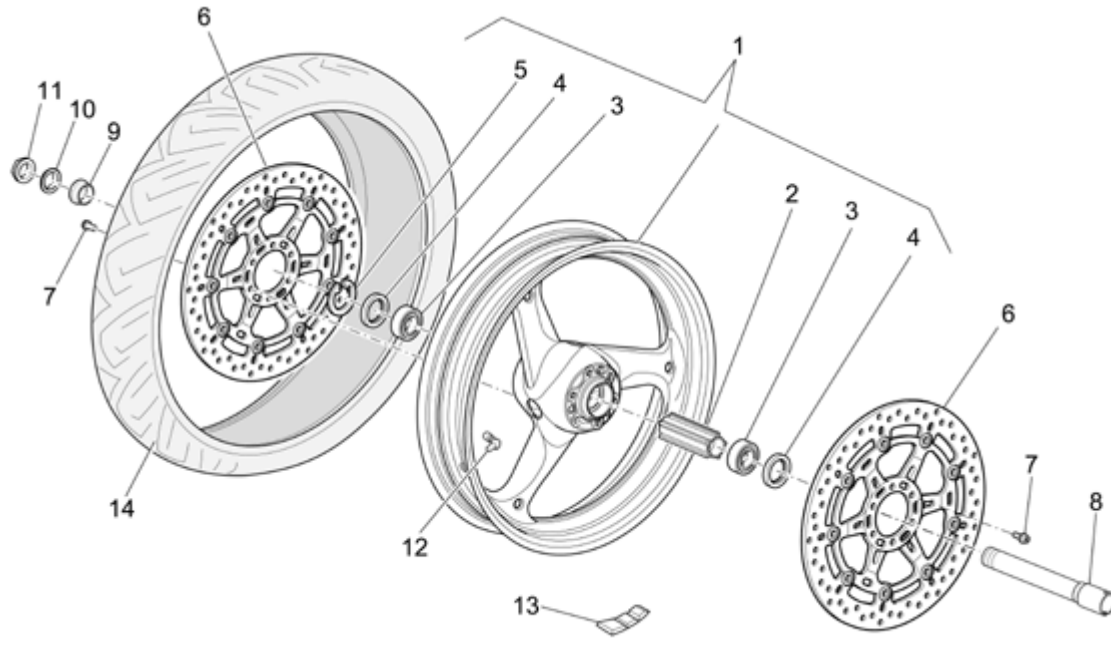
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Air box	-	-	-	-	GU06114000	1	EB019
2	Air filter	-	-	-	-	AP8104329	1	EB029
3	Inspection cover	-	-	-	-	GU06113300	1	EB099
4	Gasket D3	-	-	-	-	AP8120615	1	EB129
5	Phillips screw, SWP M5X20	-	-	-	-	AP8152329	10	-
6	Protection	-	-	-	-	GU06114200	1	EB209
7	Cover	-	-	-	-	GU06113700	1	EB009
8	Intake hose	-	-	-	-	AP8144164	1	EB059
9	Self-tap screw 2,9x12	-	-	-	-	AP8150421	2	-
10	Air temp. Sensor	-	-	-	-	GU30729330	1	AN059
11	Gasket	-	-	-	-	GU30027931	1	-
12	Filter housing support spindle	-	-	-	-	AP8221270	2	-
13	Rubber spacer	-	-	-	-	AP8220526	2	-
14	Washer 6,4x12	-	-	-	-	GU03013800	2	-
15	Cap nut M6x1	-	-	-	-	GU92787006	2	-
16	Screw w/ flange M6x20	-	-	-	-	AP8152279	2	-
17	T bush *	-	-	-	-	AP8221023	2	-
18	Fuel pipe 6x10	-	-	-	-	AP8144038	2	-
19	Hose clamp D10,1*	-	-	-	-	AP8101595	4	-
20	Plug	-	-	-	-	AP8120876	2	-
21	Rubber spacer *	-	-	-	-	AP8120030	2	-

	GRISO V IE 1100 2005-2007	GU078	01	TAB N.	28
	EXHAUST UNIT				

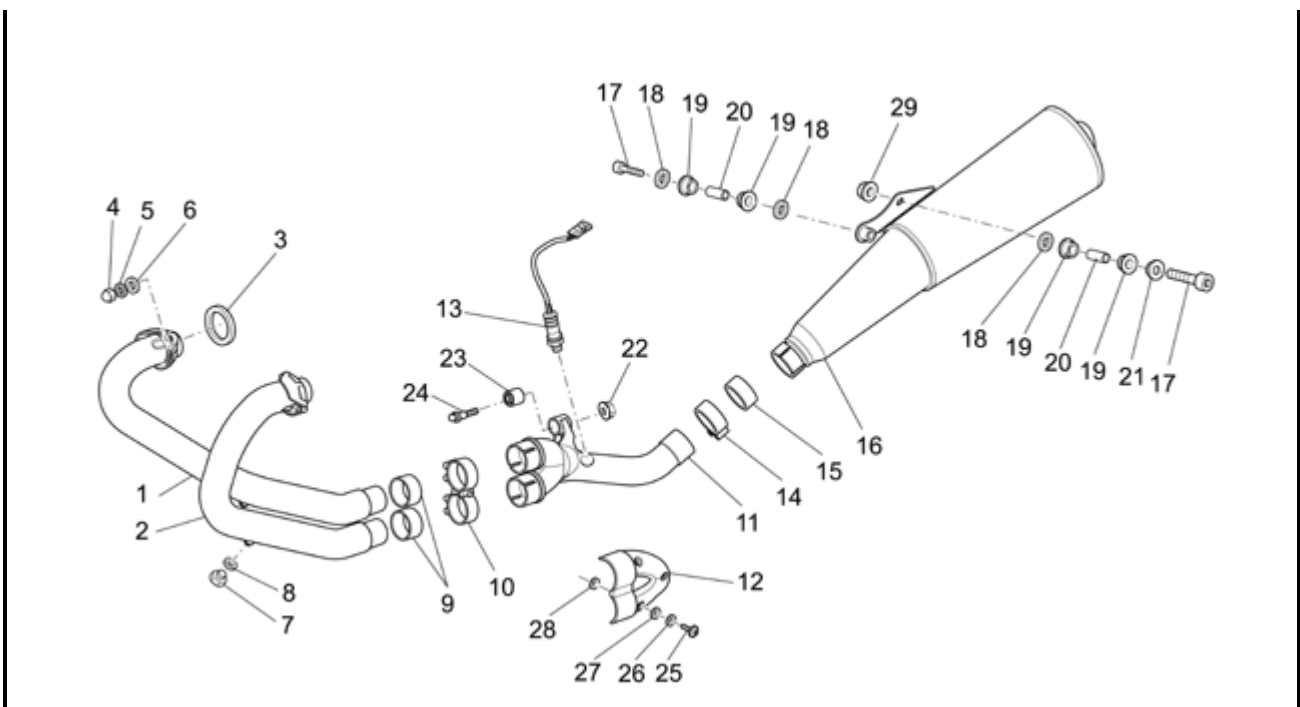

Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	RH exhaust pipe	-	-	-	-	GU06120900	1	FA00A
2	LH exhaust pipe	-	-	-	-	GU06120901	1	FA00B
3	Gasket	-	-	-	-	GU90718370	2	AO03*
4	Cap nut M8x1,25	-	-	-	-	GU92787008	4	-
5	Washer 8,4X13X0,8	-	-	-	-	GU14615901	4	-
6	Washer 8,4x14,57x1,6	-	-	-	-	GU95005308	4	-
7	Plug	-	-	-	-	GU98110007	2	-
8	Gasket	-	-	-	-	GU30109330	2	-
9	Gasket	-	-	-	-	GU06123500	2	-
10	Hose clamp	-	-	-	-	GU06123401	1	-
11	Central exhaust pipe	-	-	-	-	GU06124800	1	FA069
12	Heat protection	-	-	-	-	GU06121900	1	FA019
13	Lamda sensor	-	-	-	-	GU32727010	1	AN079
14	Hose clamp	-	-	-	-	GU06126900	1	FC029
15	Gasket	-	-	-	-	GU05128230	1	FC019
16	Silencer	-	-	-	-	GU06122900	1	FC009
17	Hex socket screw M8X45	-	-	-	-	GU98680445	2	-
18	Washer 8,5x24x2	-	-	-	-	GU95005312	3	-
19	Rubber exhaust	-	-	-	-	AP8144071	4	-
20	Spacer *	-	-	-	-	AP8121773	2	-
21	Silencer fixing bush	-	-	-	-	AP8134378	1	-
22	Self-locking nut M10*	-	-	-	-	AP8152301	1	-
23	Silent-block	-	-	-	-	AP8220346	1	-
24	Screw w/ flange M10x55	-	-	-	-	AP8152410	1	-
25	Hex socket screw M6x10	-	-	-	-	GU98370609	3	-
26	Washer 6,4x12	-	-	-	-	GU03013800	3	-
27	Washer 6,5x20x1,5	-	-	-	-	GU95005320	3	-
28	Washer 5,5X20X1	-	-	-	-	AP8121513	3	-
29	Nut M8x1,25	-	-	-	-	GU92650138	1	-


	GRISO V IE 1100 2005-2007		GU078	01	TAB N.	29		
	INTERNAL FUEL PUMP							
								
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Fuel pump cpl.	-	-	-	-	GU06107200	1	DA139
2	Gasket	-	-	-	-	GU05107430	1	DA429
3	Hose clamp 11,3	-	-	-	-	GU01108490	4	-
4	Fule pipe set cpl.	-	-	-	-	978219	1	DA139

		GRISO V IE 1100 2005-2007	GU078	01	TAB N.	30		
FRONT WHEEL								
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.


1	Front wheel, black 3,5x17"	-	-	-	-	GU06610300	1	BB00E
2	Spacer	-	-	-	-	GU05615230	1	BB32E
3	Ball bearing 25x47x12	-	-	-	-	AP8125777	2	BB01E
4	Gasket ring 30x47x7	-	-	-	-	AP8125773	2	-
5	Circlip 47X50,5	-	-	-	-	GU90272047	1	-
6	Front brake disc	-	-	-	-	AP8133781	2	IA08*
7	Screw w/ flange M8x20	-	-	-	-	AP8152286	12	IA09*
8	Front wheel spindle	-	-	-	-	GU05614130	1	BB03E
9	Spacer	-	-	-	-	GU06616300	1	-
10	Washer 25,2X36X1	-	-	-	-	GU95005325	1	-
11	Nut	-	-	-	-	GU01612190	1	BB24E
12	Tubeless tyre valve	-	-	-	-	GU03617710	1	BB07E
13	Counterweight	-	-	-	-	GU14616150	1	BB29E
14	Body	-	-	-	-	00000000	1	BB04E

GRISO V IE 1100 2005-2007		GU078		01		TAB N.		31	
FRONT BRAKE CALIPER									
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.	
1	RH Front brake caliper, gold	-	-	-	-	GU05652330	1	IA06T	
2	LH Front brake caliper, gold	-	-	-	-	GU05652230	1	IA06U	
3	Pads pair	-	-	-	-	GU01654630	2	IA07*	
4	Bleeder+cap	-	-	-	-	GU05659230	2	IA11E	
5	Pins+Caliper springs	-	-	-	-	GU01659130	2	IA11E	
6	Spring	-	-	-	-	GU01659131	2	IA11E	
7	Screw w/ flange M10x1,25	-	-	-	-	AP8152336	4	IA30*	


MOTO GUZZI		GRISO V IE 1100 2005-2007	GU078	01	TAB N.	32				
REAR WHEEL										
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.		
1	Rear wheel, black 5,5x17"	-	-	-	-	GU05630530	1	BB00F		
2	Tubeless tyre valve	-	-	-	-	GU03617710	1	BB07F		
3	Conical bush	-	-	-	-	GU05632730	4	BB06F		
4	Screw w/ flange M12x65	-	-	-	-	GU97202665	4	BB06F		
5	Cover	-	-	-	-	GU05634430	1	BB10F		
6	Rear brake disc	-	-	-	-	GU05635730	1	IA08F		
7	Screw	-	-	-	-	GU30611460	6	IA09F		
8	Body	-	-	-	-	00000000	1	BB04F		
9	Counterweight	-	-	-	-	GU14616150	1	BB29F		
10	Dust cover ring	-	-	-	T3	977056	1	-		

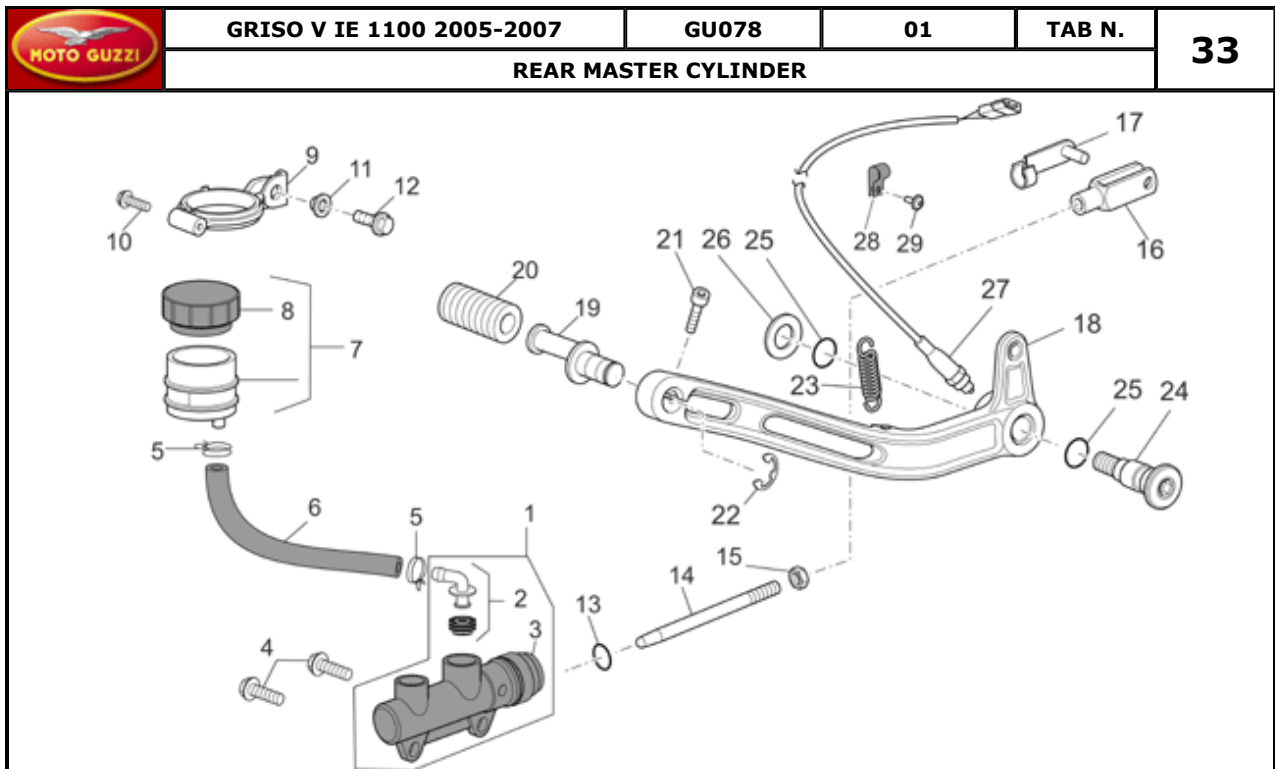


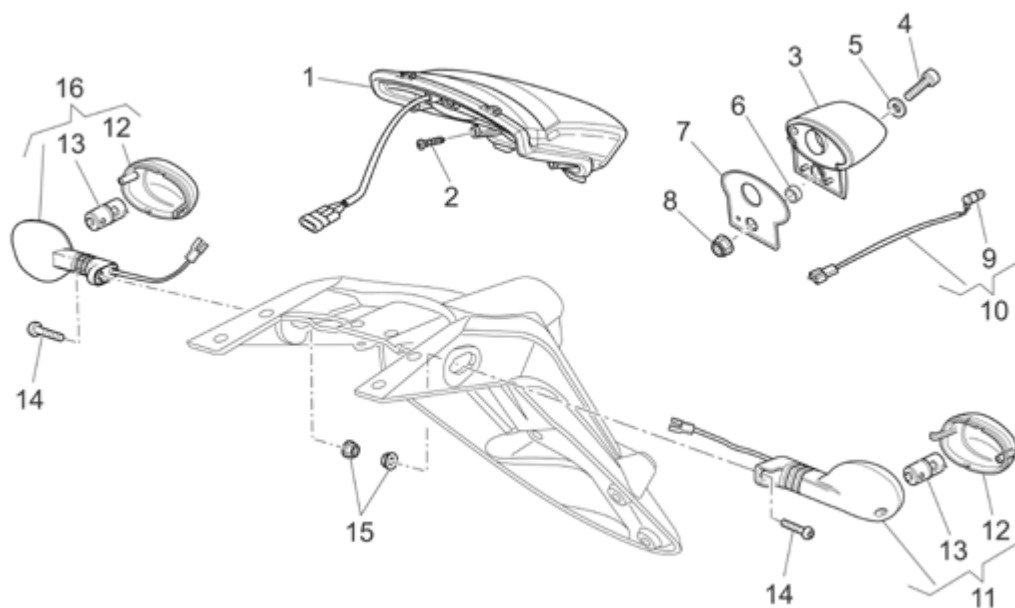
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Rear master cylinder	-	-	-	-	GU05666930	1	IA00F
2	Rear brake pump union	-	-	-	-	AP8113594	1	-
3	Rubber bellows	-	-	-	-	AP8113288	1	-
4	Screw w/ flange M6x20	-	-	-	-	AP8152279	2	-
5	Hose clamp D10,1*	-	-	-	-	AP8101595	2	-
6	Rear brake hose	-	-	-	-	GU00823950050	1	IA319
7	Brake oil tank complete	-	-	-	-	GU05663530	1	IA12F
8	Tank cap	-	-	-	-	GU17661052	1	IA329
9	Tank support	-	-	-	-	GU05666030	1	-
10	Phillips screw, SWP M5X20	-	-	-	-	AP8152329	1	-
11	T bush *	-	-	-	-	AP8221145	1	-
12	Screw w/ flange M6x16*	-	-	-	-	AP8152278	1	-
13	O-ring OR112	-	-	-	-	AP8120178	1	-
14	Master cylinder rod	-	-	-	-	977041	1	IA199
15	Nut M6*	-	-	-	-	GU92606206	1	-
16	Fork	-	-	-	-	AP8113081	1	IA209
17	Gear selector fork clips	-	-	-	-	AP8113082	1	-
18	Rear brake lever	-	-	-	-	GU06677000	1	IA01F
19	Brake lever pin	-	-	-	-	AP8121221	1	-
20	Lever rubber	-	-	-	-	AP8120912	1	IA169
21	Hex socket screw M6x16	-	-	-	-	GU98682316	1	-
22	Circlip d9	-	-	-	-	AP8150462	1	-
23	Rear brake lever spring	-	-	-	-	AP8121927	1	IA229
24	Rear brake lever pin	-	-	-	-	AP8121223	1	IA179
25	O-ring 11,11x1,78	-	-	-	-	AP8144007	2	-
26	Washer 10,5x22x2,5	-	-	-	-	GU95008310	1	-
27	Brake light switch	-	-	-	-	AP8112996	1	CD00F
28	Black hose D8	-	-	-	-	AP8101890	3	-
29	Hex socket screw M5X10	-	-	-	-	GU98350210	3	-

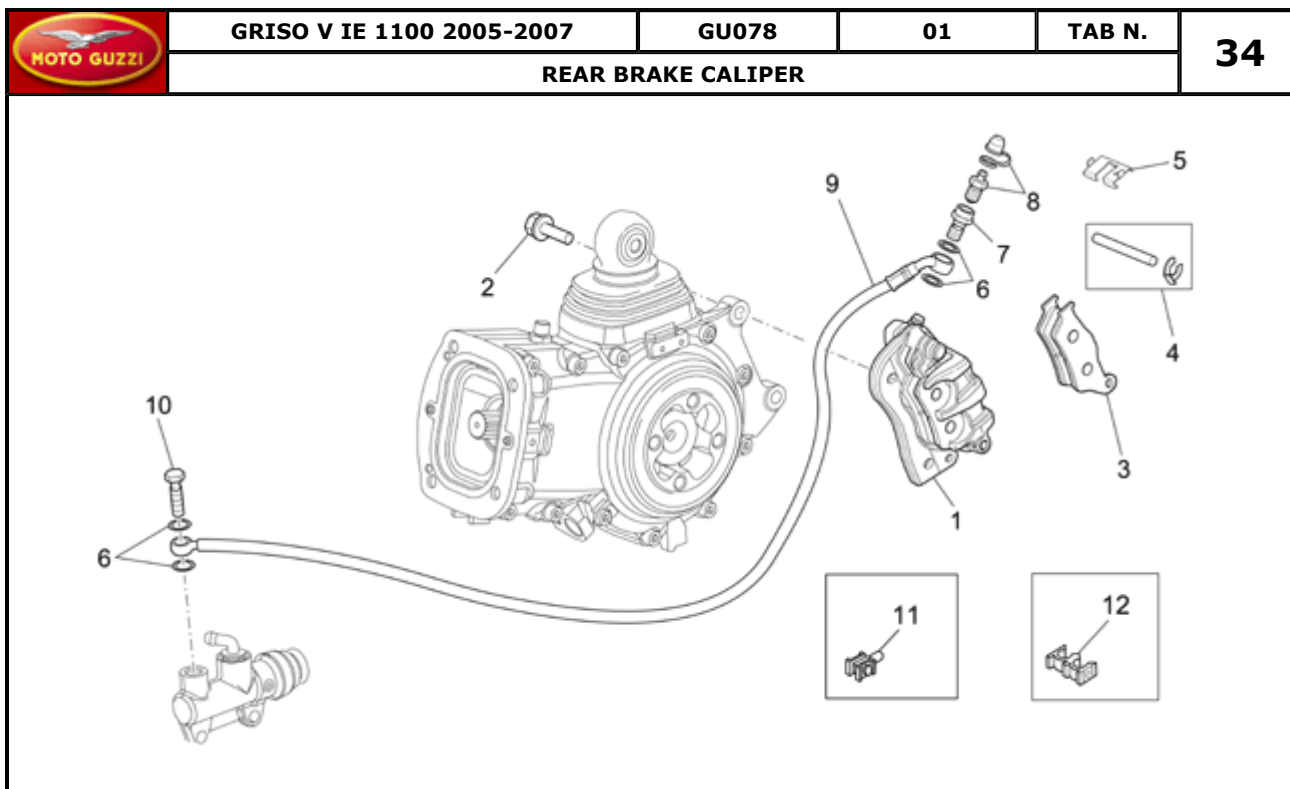
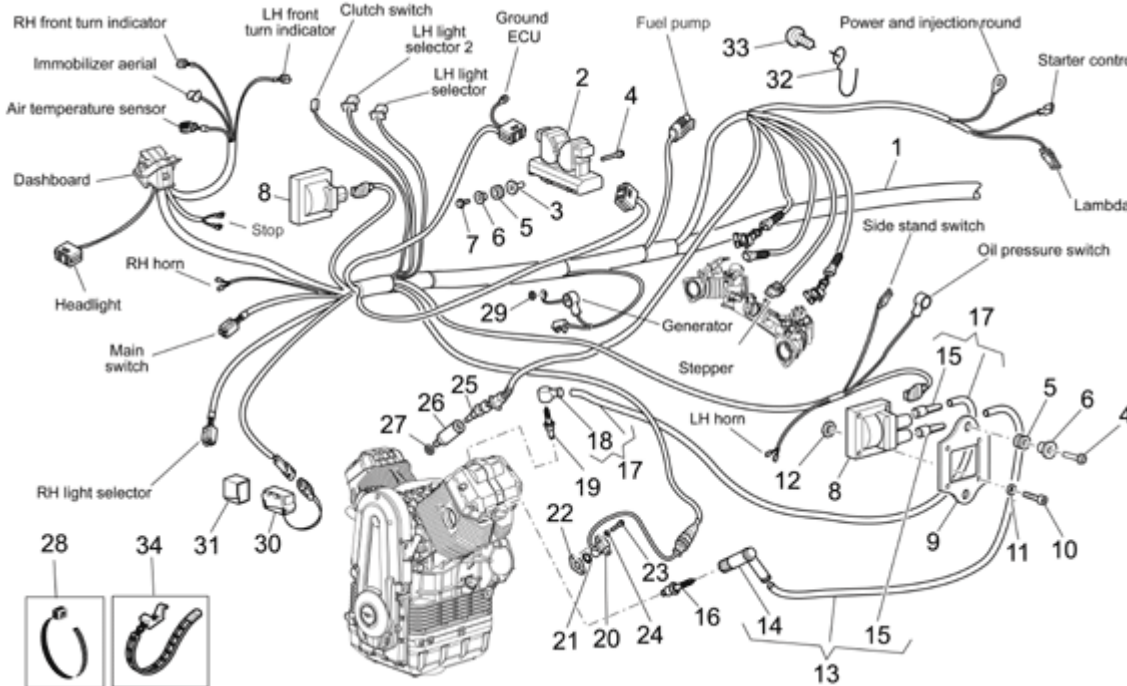


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Rear brake caliper, gold	-	-	-	-	GU05653030	1	IA06F
2	Screw w/ flange M10x30*	-	-	-	-	AP8152320	2	IA30F
3	Pads pair	-	-	-	-	GU05654630	1	IA07F
4	Pin+split pin	-	-	-	-	GU05659130	1	IA11F
5	Spring	-	-	-	-	GU05659030	1	IA11F
6	Gasket	-	-	-	-	GU25656100	4	-
7	Screw	-	-	-	-	AP8133597	1	-
8	Bleeder+cap	-	-	-	-	AP8213113	1	IA11F
9	Rear brake hose	-	-	-	-	GU05657530	1	IA05F
10	Oil pipe screw *	-	-	-	-	GU95990028	1	-
11	Cable-guide hook	-	-	-	-	AP8202238	4	-
12	Cable-guide D8	-	-	-	-	AP8201808	5	-

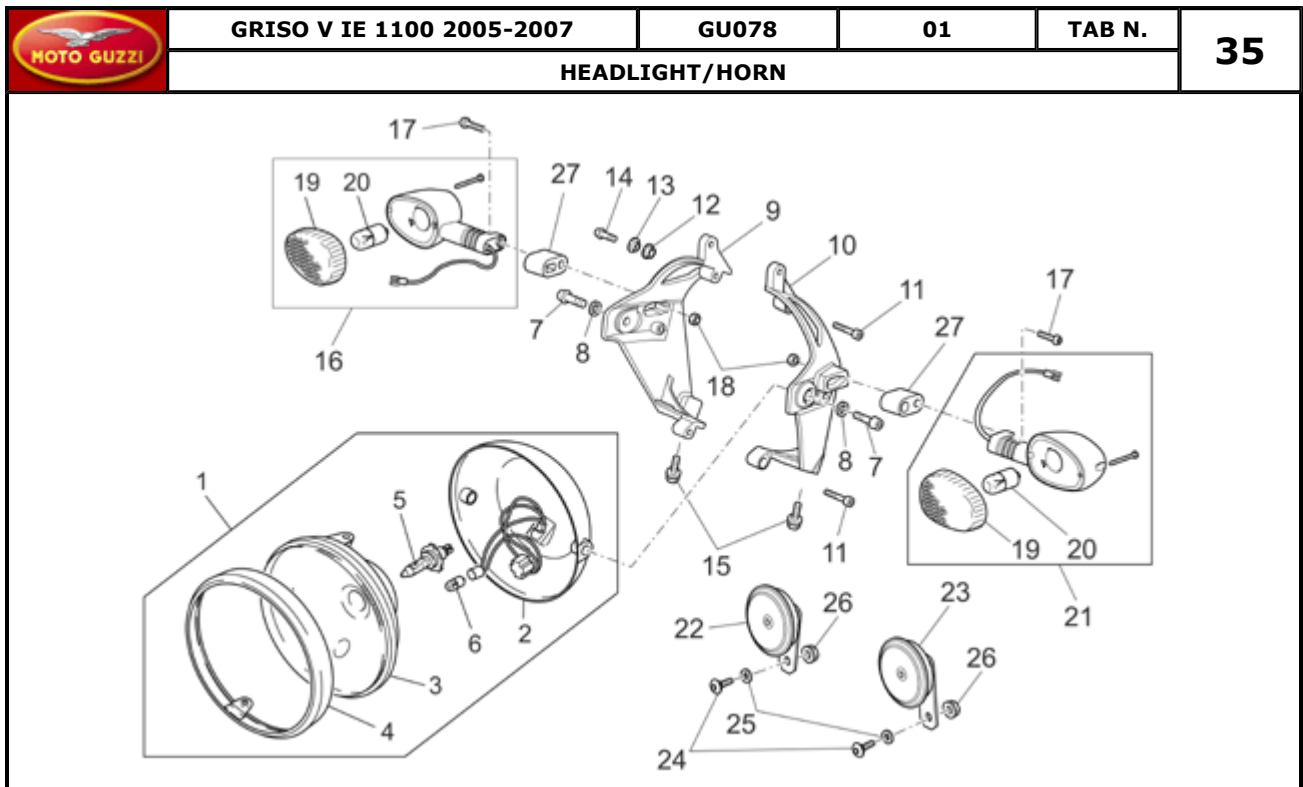


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Cpl headlightsteering headligh	-	-	AUS-J-UK	-	GU06740501	1	CB109
	Headlight	-	-	CA-EU-USA	-	GU06740500	1	CB109
2	Headlight cap, chr.	-	-	-	-	GU06740200	1	CB189
3	Optical group	-	-	CA-EU-USA	-	GU06740400	1	CB139
	Optical group	-	-	AUS-J-UK	-	GU06740401	1	CB139
4	Chromed ring nut	-	-	-	-	GU31740383	1	CB129
5	Lamp 12V-55/60W	-	-	-	-	GU93450232	1	CB149
6	Lamp 12V-5W	-	-	-	-	GU93450105	1	CB149
7	Screw M8x30	-	-	-	-	GU98700430	2	-
8	Washer 8,4X13X0,8	-	-	-	-	GU14615901	2	-
9	RH support	-	-	-	-	GU06496100	1	BC129
10	LH support	-	-	-	-	GU06496200	1	BC129
11	Hex socket screw M6x35	-	-	-	-	GU98612335	2	-
12	T bush *	-	-	-	-	AP8221023	1	-
13	Rubber spacer *	-	-	-	-	AP8120675	1	-
14	Hex socket screw M6x18	-	-	-	-	GU98230619	1	-
15	Screw w/ flange M8x25*	-	-	-	-	AP8152287	2	-
16	RH front/LH rear turn indic.	-	-	-	-	GU06750600	1	CB09T
17	Hex socket screw M6X35	-	-	-	-	GU98690335	2	-
18	Cap nut M6x1	-	-	-	-	GU92787006	2	-
19	Turn indicator lens	-	-	-	-	GU06753700	2	CB01*
20	Lamp 12V-10W	-	-	-	-	GU93450127	2	-
21	LH front/RH rear turn indic.	-	-	-	-	GU06751601	1	CB09U
22	Electric hom L	-	-	-	-	GU01743791	1	CB069
23	Electric hom H	-	-	-	-	GU01743790	1	CB069
24	Hex socket screw M8x16	-	-	-	-	GU98350416	2	-
25	Spring washer	-	-	-	-	GU95021108	2	-
26	Nut M8x1,25	-	-	-	-	GU92650138	2	-
27	Spacer, black	-	-	CA-USA	-	GU01753440	2	-


		GRISO V IE 1100 2005-2007		GU078	01	TAB N.	36	
TAILLIGHT								
								
Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Taillight	-	-	-	-	GU06740900	1	CB049
2	Self-tap screw 5x14	-	-	-	-	AP8150509	4	-
3	Number-plate light	-	-	-	-	AP8127098	1	CB009
4	Hex socket screw M5X25	-	-	AUS-EU-J-UK	-	GU98680225	1	-
	Hex socket screw M5x65	-	-	CA-USA	-	GU98690265	1	-
5	Washer 5,3x10x0,8	-	-	-	-	GU95008205	1	-
6	Bush	-	-	-	-	GU91120507	1	-
7	Support rubber part	-	-	-	-	GU32474710	1	-
8	Self-locking nut M5*	-	-	-	-	AP8152306	1	-
9	Lamp 12V-5W	-	-	-	-	GU93450105	1	-
10	Plate light wiring	-	-	-	-	AP8124976	1	CA179
11	RH front/LH rear turn indic.	-	-	-	-	GU06750600	1	CB09V
12	Turn indicator lens	-	-	-	-	GU06753700	2	CB01*
13	Lamp 12V-10W	-	-	-	-	GU93450127	2	-
14	Hex socket screw M6x18	-	-	-	-	GU98370619	2	-
15	Self-locking nut M6*	-	-	-	-	AP8152299	2	-
16	LH front/RH rear turn indic.	-	-	-	-	GU06751601	1	CB09W

		GRISO V IE 1100 2005-2007	GU078	01	TAB N.	37		
ELECTRICAL SYSTEM I								
								
Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Main wiring harness	-	-	-	V2	978150	1	CA009
	Main wiring harness	-	-	-	V1	GU06747100	1	CA009
2	ECU	-	-	-	-	GU06729500	1	AM049
3	Bush	-	-	-	-	GU05729230	2	-
4	Screw w/ flange M6x20	-	-	-	-	AP8152279	6	-
5	Rubber spacer *	-	-	-	-	AP8120030	6	-
6	T bush *	-	-	-	-	AP8221023	6	-
7	Screw w/ flange M6x35	-	-	-	-	AP8152282	2	-
8	HT coil	-	-	-	-	GU05716530	2	AM019
9	Coil holder	-	-	-	-	GU05716730	2	BA26E
10	Screw M4x25	-	-	-	-	GU98680125	8	-
11	Washer 4,3x8x0,5	-	-	-	-	GU95008204	8	-
12	Nut M4x0,7	-	-	-	-	GU92630104	8	-
13	HT wire	-	-	-	-	GU06718300	2	CA38E
14	Sparkplug cap	-	-	-	-	GU03717450	2	AM02*
15	Cap	-	-	-	-	GU14717600	4	-
16	Spark plug NGK BPR6ES	-	-	-	-	GU30717061	2	AM03*
17	HT wire	-	-	-	-	GU06718301	2	CA38E
18	Sparkplug cap	-	-	-	-	GU06717400	2	AM02*
19	Spark plug NGK PNR8B	-	-	-	-	GU05717030	2	AM03*
20	Phase/revolution sensor	-	-	-	-	GU01721600	1	AN049
21	O-ring	-	-	-	-	GU90706141	1	-
22	Gasket 0,3mm	-	-	-	-	GU01722700	1	AO349
	Gasket 0,4mm	-	-	-	-	GU01722701	1	AO349
	Gasket 0,6mm	-	-	-	-	GU01722702	1	AO349
	Gasket 0,8mm	-	-	-	-	GU01722703	1	AO349
	Gasket 1mm	-	-	-	-	GU01722704	1	AO349
	Gasket 1,5mm	-	-	-	-	GU01722705	1	AO349
	Gasket 0,5 mm	-	-	-	-	GU29722760	1	AO349
23	Hex socket screw M5x12	-	-	-	-	GU98682212	2	-
24	Washer 5,3x10x0,8	-	-	-	-	GU95008205	2	-
25	Oil temperature sensor	-	-	-	-	GU29729461	1	AN099
26	Sensor support	-	-	-	-	GU03163330	1	-


27	Washer 10,2X18X2	-	-	-	-	-	GU95008210	1	-
28	Hose clamp 3,6x20,6	-	-	-	-	-	GU14609650	10	-
	Hose clamp 2,4x92	-	-	-	-	-	GU49609601	4	-
	Hose clamp 3,6x375	-	-	-	-	-	GU93304390	2	-
29	Self-locking nut M6*	-	-	-	-	-	AP8152299	1	-
30	Inclination sensor	-	-	-	-	-	AP8124266	1	CA369
31	Rubber sensor support	-	-	-	-	-	AP8144046	1	-
32	Fairlead	-	-	-	-	-	AP8121475	1	-
33	Screw w/ flange M8x16*	-	-	-	-	-	AP8152285	1	-
34	Hose clamp	-	-	-	-	-	GU06609600	3	-

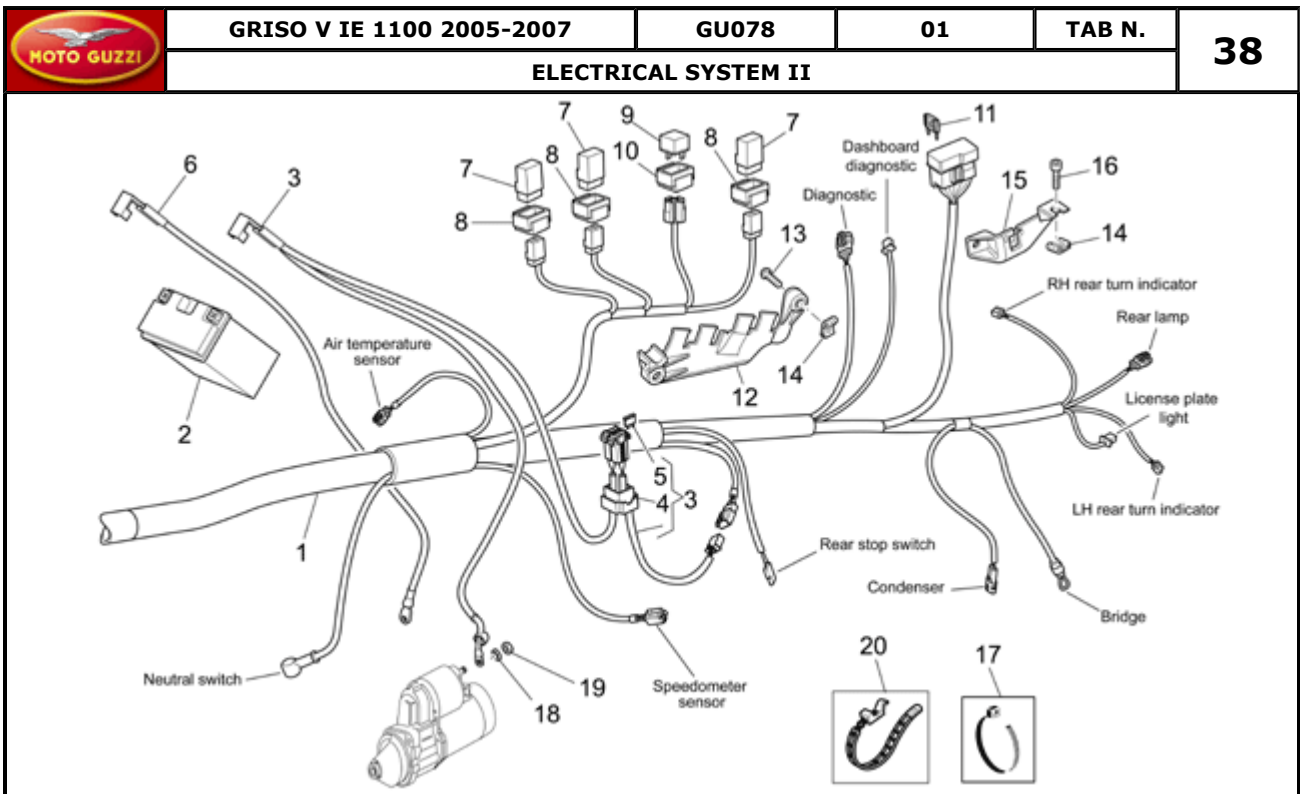


Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Main wiring harness	-	-	-	V2	978150	1	CA009
	Main wiring harness	-	-	-	V1	GU06747100	1	CA009
2	Battery 12V-20Ah	-	-	-	-	GU05704531	1	CC009
3	Wiring	-	-	-	-	GU32748010	1	CA079
4	Rubber fuse box	-	-	-	-	AP8112811	1	CA069
5	Fuse 30A	-	-	-	-	GU28742562	3	CA349
6	Ground-battery lead	-	-	-	-	GU06747900	1	CA039
7	Relay 12V/30A	-	-	-	-	AP8224462	3	CD029
8	Rubber spacer *	-	-	-	-	AP8220283	3	-
9	Injection relay	-	-	-	-	AP8124869	1	CD189
10	Relay rubber	-	-	-	-	AP8220546	1	-
11	Fuse 15A	-	-	-	-	977772	4	CA349
	Fuse 20A	-	-	-	-	977773	2	CA349
	Fuse 3A	-	-	-	-	977769	2	CA349
12	Clamp	-	-	-	-	GU06746300	1	-
13	Screw w/ flange M5x9	-	-	-	-	AP8152339	2	-
14	Clip M5	-	-	-	-	AP8102375	4	-
15	Clamp	-	-	-	-	GU06477000	1	-
16	Hex socket screw M5x15	-	-	-	-	GU98682215	2	-
17	Hose clamp 3,6x20,6	-	-	-	-	GU14609650	10	-
	Hose clamp 2,4x92	-	-	-	-	GU49609601	4	-
18	Washer 8,4x15x1,7	-	-	-	-	GU95129131	1	-
19	Nut M8x1,25	-	-	-	-	GU92609408	1	-
20	Hose clamp	-	-	-	-	GU06609600	3	-

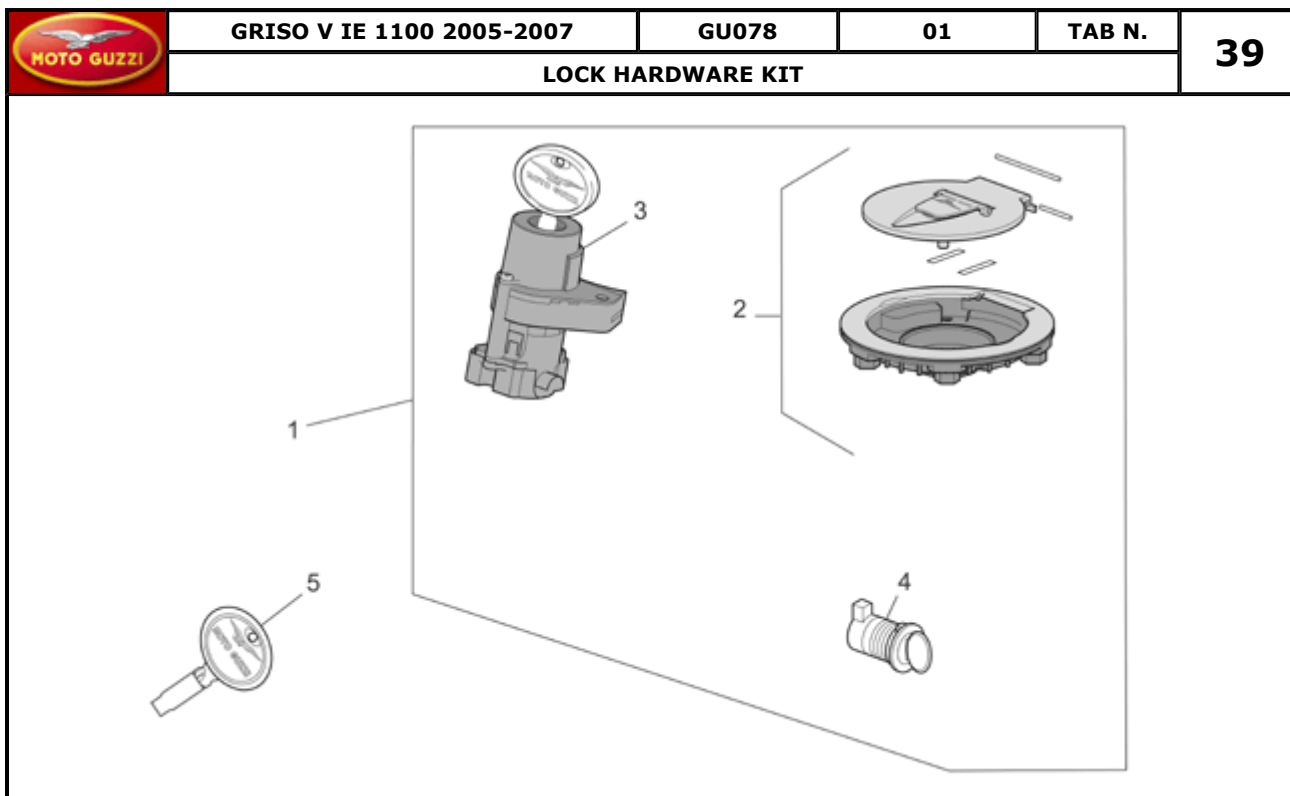


Pos.	Description	Year	I_M_	Country	Version	Code	Q.ty	P.Cod.
1	Lock hardware kit	-	-	-	-	GU06736800	1	DH009
2	Tank cap	-	-	-	-	GU06103900	1	DA029
3	Main switch - steering lock	-	-	-	-	GU06782500	1	DH029
4	Saddle lock	-	-	-	-	GU05466830	1	DH039
5	Non indented key blank	-	-	-	-	GU05735530	1	DH099

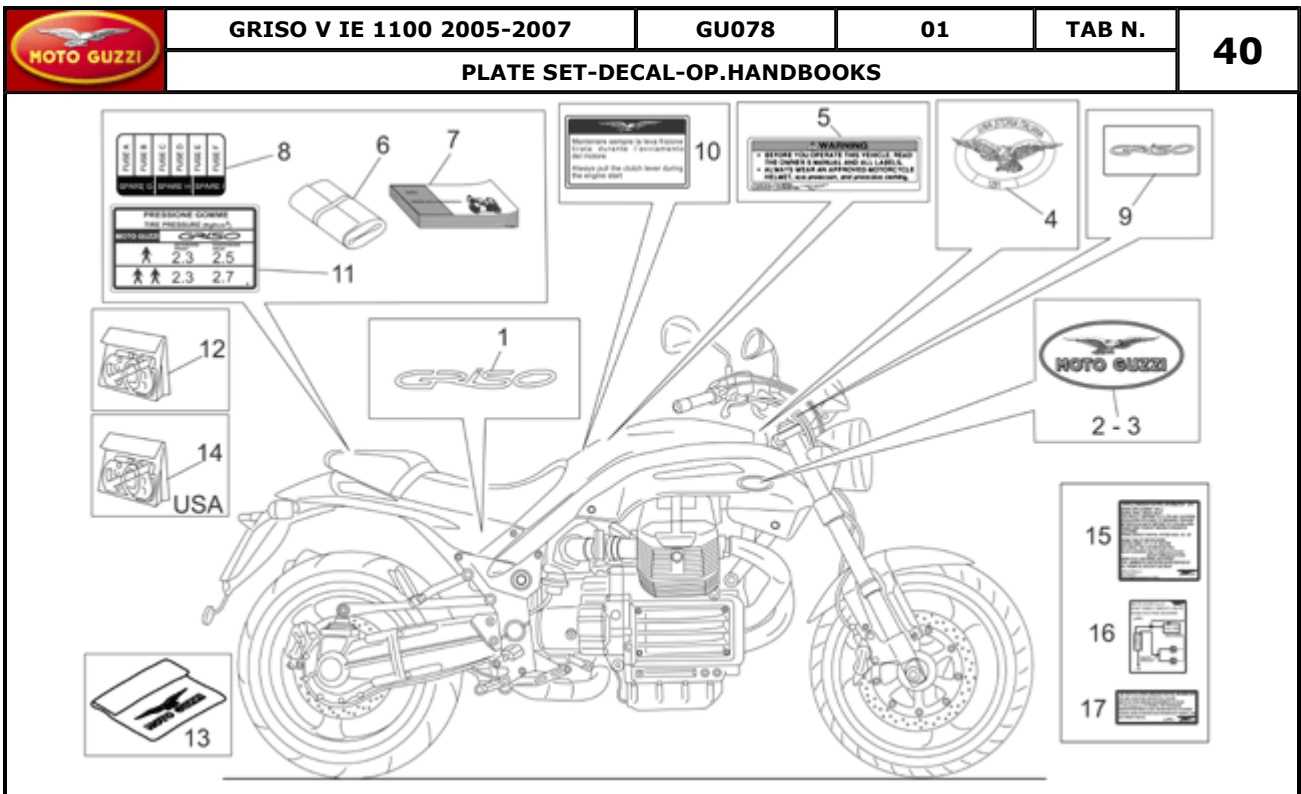

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Decal "Griso"	-	-	-	-	GU06923400	2	DI109
2	LH Name plate,red/gold AL	-	-	-	-	GU06917400	1	DI079
3	RH Name plate,red/gold AL	-	-	-	-	GU06917300	1	DI079
4	Decal "Italian Story"	-	-	-	-	GU05917530	1	DI079
5	Decal "Attention"	-	-	-	-	GU30944300	1	DI079
6	Toolkit	-	-	-	-	GU06909900	1	DG099
7	Operator's handbook	-	-	CA-USA	-	GU06900001	1	DG109
	Operator's handbook I-F-D-E-NL-UK	-	-	AUS-CA-EU-J-UK	-	977474	1	DG109
8	Sticker "schema fusibili"	-	-	-	-	GU05945030	1	DI049
9	Name plate "Griso"	-	-	-	-	GU06517700	1	DI079
10	Decal Engine Start	-	-	-	-	GU05944930	1	DI049
11	Tyre pressure decal	-	-	AUS-EU-J-UK	-	GU06926000	1	DI049
	Tyre pressure decal	-	-	CA-USA	-	977500	1	DI049
12	Decal set	-	-	-	-	GU06923300	1	DI009
13	Bike cover	-	-	-	-	GU30970200	1	-
14	Technical decal set	-	-	CA-USA	-	GU06923301	1	DI009
15	Emission control sticker	-	-	CA-USA	-	977501	1	-
16	Carbon filter sticker	-	-	CA-USA	-	977502	1	-
17	Noise emission sticker	-	-	CA-USA	-	977499	1	-

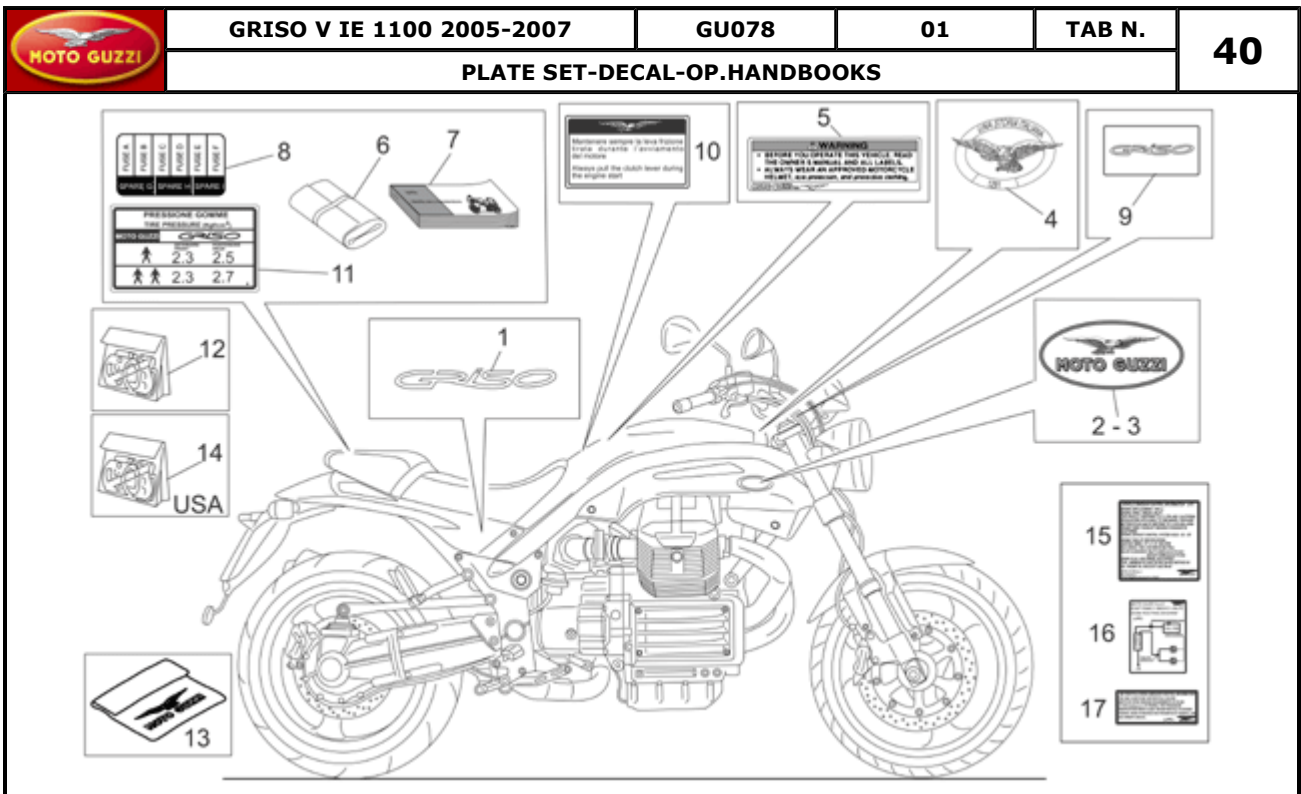

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Decal "Griso"	-	-	-	-	GU06923400	2	DI109
2	LH Name plate,red/gold AL	-	-	-	-	GU06917400	1	DI079
3	RH Name plate,red/gold AL	-	-	-	-	GU06917300	1	DI079
4	Decal "Italian Story"	-	-	-	-	GU05917530	1	DI079
5	Decal "Attention"	-	-	-	-	GU30944300	1	DI079
6	Toolkit	-	-	-	-	GU06909900	1	DG099
7	Operator's handbook	-	-	CA-USA	-	GU06900001	1	DG109
	Operator's handbook I-F-D-E-NL-UK	-	-	AUS-CA-EU-J-UK	-	977474	1	DG109
8	Sticker "schema fusibili"	-	-	-	-	GU05945030	1	DI049
9	Name plate "Griso"	-	-	-	-	GU06517700	1	DI079
10	Decal Engine Start	-	-	-	-	GU05944930	1	DI049
11	Tyre pressure decal	-	-	AUS-EU-J-UK	-	GU06926000	1	DI049
	Tyre pressure decal	-	-	CA-USA	-	977500	1	DI049
12	Decal set	-	-	-	-	GU06923300	1	DI009
13	Bike cover	-	-	-	-	GU30970200	1	-
14	Technical decal set	-	-	CA-USA	-	GU06923301	1	DI009
15	Emission control sticker	-	-	CA-USA	-	977501	1	-
16	Carbon filter sticker	-	-	CA-USA	-	977502	1	-
17	Noise emission sticker	-	-	CA-USA	-	977499	1	-

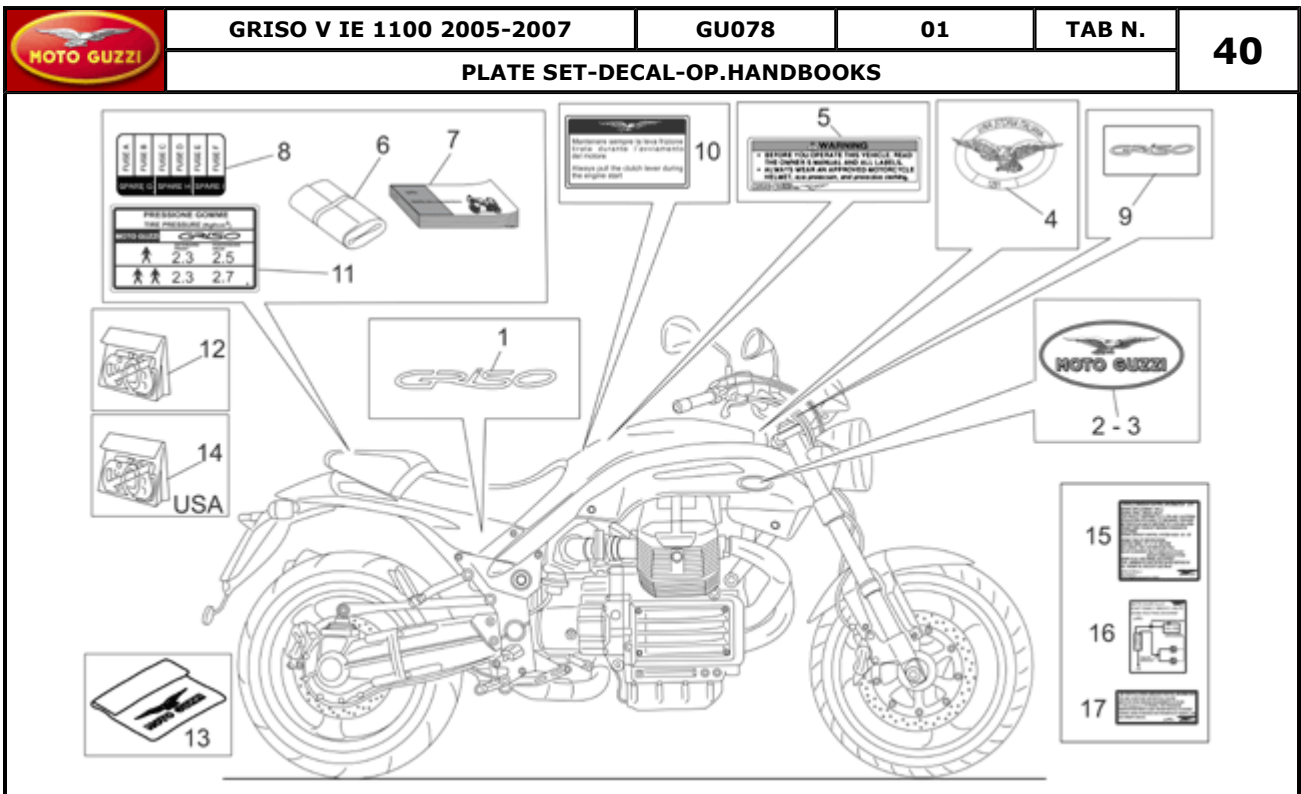

Pos.	Description	Year	I_M	Country	Version	Code	Q.ty	P.Cod.
1	Decal "Griso"	-	-	-	-	GU06923400	2	DI109
2	LH Name plate,red/gold AL	-	-	-	-	GU06917400	1	DI079
3	RH Name plate,red/gold AL	-	-	-	-	GU06917300	1	DI079
4	Decal "Italian Story"	-	-	-	-	GU05917530	1	DI079
5	Decal "Attention"	-	-	-	-	GU30944300	1	DI079
6	Toolkit	-	-	-	-	GU06909900	1	DG099
7	Operator's handbook	-	-	CA-USA	-	GU06900001	1	DG109
	Operator's handbook I-F-D-E-NL-UK	-	-	AUS-CA-EU-J-UK	-	977474	1	DG109
8	Sticker "schema fusibili"	-	-	-	-	GU05945030	1	DI049
9	Name plate "Griso"	-	-	-	-	GU06517700	1	DI079
10	Decal Engine Start	-	-	-	-	GU05944930	1	DI049
11	Tyre pressure decal	-	-	AUS-EU-J-UK	-	GU06926000	1	DI049
	Tyre pressure decal	-	-	CA-USA	-	977500	1	DI049
12	Decal set	-	-	-	-	GU06923300	1	DI009
13	Bike cover	-	-	-	-	GU30970200	1	-
14	Technical decal set	-	-	CA-USA	-	GU06923301	1	DI009
15	Emission control sticker	-	-	CA-USA	-	977501	1	-
16	Carbon filter sticker	-	-	CA-USA	-	977502	1	-
17	Noise emission sticker	-	-	CA-USA	-	977499	1	-